



***i*AM1-MIX8-12G**

12G Multi-Channel Audio Monitor/Mixer

User Guide

Part Number 821855, Revision B



This publication is protected by federal copyright law. No part of this publication may be copied or distributed, stored in a retrieval system, or translated into any human or computer language in any form or by any means electronic, mechanical, manual, magnetic, or otherwise, or disclosed to third parties without the express written permission of Wohler Technologies.

Reproduction

Licensed users and authorized distributors of Wohler Technologies, Inc. products may copy this document for use with Wohler Technologies., Inc. products provided that the copyright notice above is included in all reproductions.

Customer Support

Wohler Technologies, Inc.
1280 San Luis Obispo Ave
Hayward, CA, 94544
Phone: 510-870-0810
Web: www.wohler.com
Sales: sales@wohler.com
Support: support@wohler.com

Disclaimers

Even though Wohler Technologies, Inc. has tested its equipment and software, and reviewed the documentation, Wohler Technologies, Inc. makes no warranty or representation, either express or implied, with respect to software, documentation, their quality, performance, merchantability, or fitness for a particular purpose.

In no event will Wohler Technologies, Inc. be liable for direct, indirect, special, incidental, or consequential damages resulting from any defect in the hardware, software, or its documentation, even if advised of the possibility of such damages.

Some states do not allow the exclusion or limitation for incidental or consequential damages, so the above exclusion or limitation may not apply to you.

PDF

All text strings appearing in [this shade of blue](#) are hyperlinks.

Other Technologies and Products

Google Chrome is a registered trademark of Alphabet Inc.
Microsoft Windows and Internet Explorer are registered trademarks of Microsoft Corporation.
Dante and Brooklyn are registered trademarks of Audinate Pty Ltd.
Ravenna is a registered trademark of ALC NetworX GmbH.
ZMAN and Aneman are registered trademarks of Merging Technologies.
Evertz and Quartz are registered trademarks of Evertz.

All product names, logos, and brands are property of their respective owners. All company, product and service names used in this document are for identification purposes only. Use of these names, logos, and brands does not imply endorsement.

Last Update

May 13, 2026

TABLE OF CONTENTS

Table of Contents

User Guide	1
TABLE OF CONTENTS	3
Table of Contents	3
CHAPTER 1: Installation	7
Introduction	7
Overview	7
Safety	8
Instructions	8
Safety Symbols	9
LCD Display Care & Safety	9
LCD Display Cleaning	9
Mounting	9
Heat Dissipation	10
Sympathetic Vibration	10
Mechanical Bracing	10
Electrical Interference	10
Power	10
Compliance	10
FCC	10
ICES-003	11
CHAPTER 2: Local Operation	12
Operation	12
Startup	12
Front Panel	12
Rear Panel	14
SFP-2022-6 / SFP-2110 Address Setup	20
Audio Mixer Screen	21
Operating the Monitor	22
Source Selection	22
Overall Volume Adjustment	22
Add or Remove Channels from the Monitor Mix	23
Customize the Settings	23
Menu / Option Touchscreen	24
Main Menu	25
Source Select	25
Presets	26
All Presets	26
Preset Favorites	27
Unit Settings	27
Speaker Options	28
Unit Configuration	29

Phase Configuration	30
Analog Configuration	30
System Options Menu.....	31
Network Settings	32
System Reboot.....	33
System Update.....	34
Factory Reset	34
System Details	35
Passcode Settings	35
Forgotten Passcode	37
CHAPTER 3: Technical Info	38
CHAPTER 4: The iAM1-MIX8-12G Web GUI	43
Web Browser / Control Device	43
First Time IP Assignments.....	43
Peer-to-Peer Connection	43
Network Connection	44
Network Setup	45
Dashboard	46
Audio Meters.....	48
System Preferences	49
General Settings.....	49
Unit Settings Tab	50
Phase Indicator Configuration.....	51
GPI Action Settings	52
Front Panel Configuration Tab.....	54
Preset Management	57
Output Routing.....	61
Destination Outputs	62
Source Inputs	63
Output Options.....	63
Typical Questions Regarding Output Routing	64
What signal outputs can be controlled using the Output Routing feature?	64
How do the outputs behave if I do not purchase OPT-OUTPUT-ROUTING license?	64
What is the difference between Global Output Routing and Output Routing in Presets?	64
How do I route whatever is being monitored to the XLR and AES outputs?...65	
How do I have a downmixed pre-fade output on AES Pair-1 combined with a post-fade output on the Analog XLRs?	65
How do I make the XLR outputs follow the Audio Meter screen solos & mutes while the AES Pair-1 does not?	65
How do I route only specific monitored channels to the Analog XLR outputs?	66
The optional Global Output Routing feature works great. But what if we don't want to create any Presets and want to monitor audio only using Source Select? How would I configure different outputs for Source Select choices? .66	
How do I keep the internal speakers muted and have audio only on the analog XLR outputs?	67
How do I ensure that the outputs are automatically muted when the Headphone jack is inserted?	67
What are AoIP-Pair 9 and AoIP Pair 10?	68
How do I ensure that my outputs are pre-faded but follow the solo-mutes on	

the web interface? This will allow us to monitor only the unmuted/solo Audio Meter channels on amplified stereo speakers connected to the Analog XLR's.	68
.....	68
Global Evertz Routing	69
Preset Replication	72
Import/Export Presets	74
Export Configuration	74
Import Configuration	75
System	77
System Information	77
SFP Information	78
Licenses	79
Factory Reset	80
Reboot System	81
APPENDIX A: Software Upgrades.....	82
Introduction	82
Download the Software	82
Update Methods	82
Local Update from the Front Panel	83
Updating via the Web GUI using a Flash Drive	84
Updating an <i>iAM1-MIX8-12G</i> Remotely	86
Updating Multiple Units Remotely.....	88
APPENDIX B: Dante Network Setup	91
Introduction.....	91
What is in the <i>iAM1-MIX8-12G</i> for Dante?	91
Dante™ Device Setup.....	93
Dante Clock Selection.....	95
Channel Names	95
AES67	96
Device Lock	98
Dante Firmware Upgrades.....	98
Additional Information.....	99
Dante™ Legal Disclosures	99
APPENDIX D: Ravenna (ZMAN) Setup	100
Introduction.....	100
What is in the <i>iAM</i> or <i>iVAM</i> for Ravenna?.....	100
RAVENNA-Compatible Talker/Listener.....	100
AVB Ethernet Features	100
Configuring the AOIP Merging Option Card	101
Getting Started General Settings	102
Getting Started Out-Of-Band NMOS for ST-2110-30 & Ravenna	103
Getting Started PTP	106
Getting Started Session Sources.....	107
Getting Started Session Sinks	108
Getting Started Session Info	109
Getting Started Ins/Outs	110
Getting Started I/O Router.....	110

Operation:	111
Connecting Remote Source to Local Sink.....	111
ZMAN Session Sinks.....	111
ZMAN Session Sources	113
ZMAN Updating	114
APPENDIX E: API Documentation	117
Introduction	117
API: Presets.....	117
APPENDIX F: Out of Band Control.....	130
Introduction	130
SFP IP Address Configuration	130
SFP System Configuration.....	131
SFP 2110 Configuration	132
SFP 2110 Preset Config	135
Diagnostic Information	136
APPENDIX G: 2110 SFP Personalities	138
Introduction	138
Personality Change	138

CHAPTER 1: Installation

Introduction

Overview

The iAM1-MIX8-12G is a well-featured, easy to use and competitively priced IP ready audio monitor/mixer. The unit can be configured to operate in channel mode and/or pair mode to monitor up to 8 mono channels or 8 stereo pairs. Standard features include 3G-SDI and a pair of Analog inputs and outputs. Upgrade/license other signal formats and processing options, as and when needed, either initially or after purchase. Refer to the Specifications section of this manual or contact Wohler Sales for more information.

The iAM1-MIX8-12G is compact and simple to operate, with straightforward controls and individual knobs for sum, mute, and solo operations for each channel or pair. It has a very wide format touch screen LCD display providing up to 8 or 16 high resolution level meters, depending upon the channel monitoring requirements. Refer to Figure 1-1. Any audio channels (or channel pairs) from any audio/video source stream may be monitored.

Figure 1-1: iAM1-MIX8-12G Metering



The iAM1-MIX8-12G includes two 12G/3G SDI inputs, one switched 12G/3G SDI output, and a pair of analog inputs and outputs. Optional modules will allow decoding of an additional SDI input, MADI, AES3, SMPTE 2110, SMPTE 2022-6, and AES streams. It contains APIs for remote management. It also contains compatibility with Evertz Quartz Routing.

Optional Output routing enables the flexibility to route input signals to various outputs. Optional I/O for AES3 on HD-15 (including selected audio source converted to AES3 out), MADI on BNC (and looped output), and SMPTE 2110 or SMPTE 2022 via SFP is offered. Option cards will allow choice between AoIP, an additional 8 channels of analog inputs and outputs, or 2 additional SFP cages.

Setups are created and configured using local menus and a web browser over a network connection to the integral web server of the *iAM1-MIX8-12G*. Up to 64 Presets are accommodated. The web server will also allow you to view the audio meters remotely.

Safety

Instructions

1. Read, keep, and follow all of these instructions; heed all warnings.
2. Do not use this equipment near water.
3. Use only a dry cloth to clean the equipment.
4. Do not block any ventilation openings.
5. Do not install near any heat source such as a radiator, heat register, amplifier, or stove.
6. Do not attempt to plug the unit into a two-blade outlet (with only two prongs of equal width).


Important:

By design, the supplied AC mains power cord will only plug into a three-prong grounded outlet for your safety. If the plug does not fit into the outlet, contact an electrician to replace the obsolete outlet.

7. Protect the power cord from being walked on or pinched, particularly at plug connection on the equipment and at the socket.
8. Use only the attachments/accessories specified by the manufacturer.
9. Unplug the equipment during lightning storms or when unused for long periods of time.
10. Refer all servicing to qualified service personnel. Servicing will be required under all of the following conditions:
 - a. The equipment has been damaged in any way, such as when the power-supply cord or plug is damaged.
 - b. Liquid had been spilled or objects have fallen onto the equipment.
 - c. The equipment has been exposed to rain or moisture.
 - d. The equipment does not operate normally.
 - e. The equipment has been dropped.

Safety Symbols

WARNING:

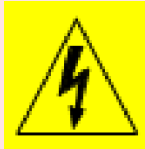

The symbol to the left warns of electric shock hazard inside the unit. Disconnect the power cord before removing access panels when installing upgrades. Only qualified service personnel are to operate the equipment with covers removed, and are to exercise caution to avoid personal injury.

LCD Display Care & Safety

Be gentle with the LCD screen. Do not let hard objects strike it or touch it.

- If the display screen should crack or break, causing the internal organic substance to leak out, do not inhale it or let it touch any part of your body.
- If the internal organic substance should touch your skin or clothing, immediately wash it off using soap and plenty of water.

LCD Display Cleaning

Do not use the following to clean the display screen. They may damage the polarizer.

- Water
- Ketone solvents (Ketone or acetone)
- Aromatic solvents (toluene or xylene)
- Ethyl alcohol
- Your breath

Wipe the screen with a very soft cloth or use Scotch 810 Magic Tape to adhere to the soiled surface of the LCD screen and then carefully peel it off along with the soil.

Mounting

The unit is designed for a standard 19" rack. Install it at ear/eye level for best high frequency response and visual observation of the display screens. Please adhere to the following clearances:

Table 1-1: Clearance Recommendations

Clearance	Surface
24"	Front
3"	Rear
2"	Sides
1.75"	Top and Bottom (if either radiates heat)
0"	Top and Bottom (if no heat)

Heat Dissipation

The ambient temperature inside the mounting enclosure should not exceed 40° Celsius (104° Fahrenheit). Adjacent devices can be rack mounted (or stacked) in proximity to the unit if this temperature is not exceeded. Otherwise, allow a 1RU (1.75"/44.45mm) space above and below the unit for air circulation.

Important

Heat generated by the class D power amplifiers, power supplies, and other components is vented by slots in the sides and back of the unit. Therefore, as a safety precaution, you must allow proper ventilation on these surfaces.

Sympathetic Vibration

Sympathetic vibration from other equipment (cables, etc.) in the rack may be serious enough to interfere with the unit's sound quality. If you experience sympathetic vibrations, use thin card stock, felt, foam, or weather-stripping between the vibrating surfaces. Tie loose cables securely with cable ties.

Mechanical Bracing

The 1RU chassis is securely attached to the front panel. In addition, the chassis has mounting tabs through which you attach it to the rack rail. This feature will reduce or eliminate rear bracing requirements in many mobile/portable applications. The weight of internal components is distributed fairly evenly around the unit.

Electrical Interference

Be careful to avoid mismatched cable types and other similar causes of undesired reflections in digital signal systems. If severe enough, such reflections can result in corruption of the digital data stream. As with any audio equipment, maximum immunity from electrical interference requires the use of shielded cable; however, satisfactory results can sometimes be obtained without it. The internal circuitry ground is connected to the chassis.

Power

The unit connects to an AC mains power source (100 to 240 VAC, 65W, 50/60Hz) using an IEC power cord.

When the mains plug or appliance coupler is used as the disconnect device, the disconnect device should remain operable.

Compliance

FCC

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can

radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to correct the interference at their own expense.

ICES-003

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

CHAPTER 2: Local Operation

Operation

The *iAM1-MIX8-12G* can be operated easily and simply from controls on its front panel, as described in this chapter. It may be accessed remotely in two ways, via the Wohler Web GUI for administrative purposes or by third party equipment via Application Programming Interface (API) commands. The Wohler Web GUI is described in Chapter 4 of this manual. The API commands are described in Appendix E of this manual.

Startup


The *iAM1-MIX8-12G* will begin its startup process when it is connected to power. There is no power switch. It is normal for the product to require about 45 seconds to start up and be ready to use.

When the *iAM1-MIX8-12G* completes its startup, the **Status** indicator will turn green. Depending upon optional settings, all channel pairs will either be in the muted condition or set in a predetermined way. You may then use the **Source** and **Channel** controls to enable only the program channels you want to hear.

Front Panel


The front panel is shown in Figure 2-1.

Figure 2-1: *iAM1-MIX8-12G* Front Panel

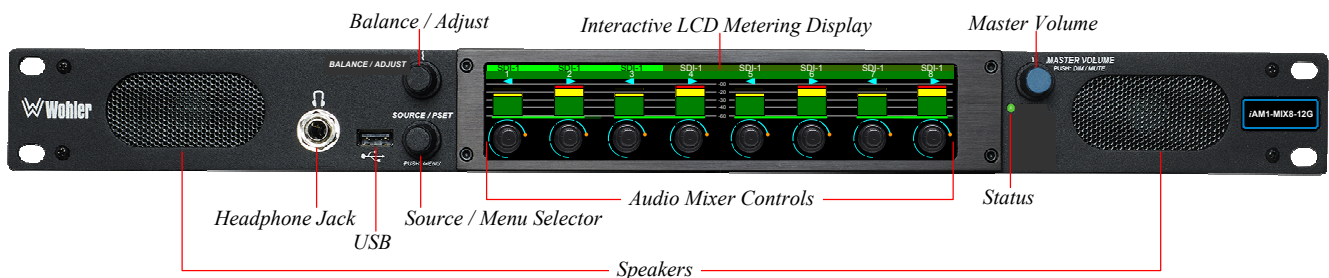


1. **Interactive LCD Metering Display:** A widescreen LCD touch screen allows monitoring of bar graph meters of up to 8 or 16 channels, depending upon the configuration, as well as selecting which channels to monitor audibly.
2. **Audio Mixer Controls:** 8 knobs are provided on the display to adjust the mix level of the 8 mono inputs or 8 stereo pair inputs. Pressing the knobs will allow muting or unmuting the channels or pairs.
3. **Speakers:** Local near field audio monitoring is achieved through the use of Class D amplifiers. There are two (left/right) speakers.

4. **Headphone Jack:** A 1/4" jack for an optional headphone is provided on the front panel. Speaker audio can be optioned to either mute or not mute when headphones are plugged in. This is set in the **Speaker Options** menu. If the speaker audio is set to mute with headphone insertion, and a headphone is plugged into the Headphone Jack, the following icon will appear in the lower center of the

display: 

5. **Master Volume:** This controls the speakers, the headphone and the analog outputs. As the **Master Volume** control is turned, a graphic appears in the lower




center of the display as follows:  A number from 0 to 1023 appears as an indicator of the volume level.

Pressing the **Master Volume** control dims the audio and a second press mutes the audio. When the audio is muted, a speaker muted icon appears in the lower center



of the display:  This icon also displays whenever this control is turned all the way counterclockwise. Rotating the **Master Volume** immediately removes the dim or mute.

6. **Balance/Adjust:** Turning the **Balance/Adjust** knob will adjust the left – right balance. As this control is turned, the following graphic will appear in the center of the display to indicate the left – right balance setting: 

7. **Audio Mixer Controls:** Rotating these controls lets you adjust the volume level of individual channels or pairs in the mix. Pressing an **Audio Mixer Control** mutes or unmutes the audio from the controlled channel or channel pair.

8. **Source/Preset/Menu Selector:** Pressing this control for 2 seconds proceeds to the **Main Menu**. Turning the **Source/Preset** control right or left selects between the available licensed input sources or preset combinations of sources. Refer to the **Operating the Monitor – Source Selection** section of this chapter. Alternatively, rotating the **Source/Preset** control can be set to No Operation, so that rotating it will have no effect at all. Refer to the **Source Knob Select** setting in the **Unit Config** menu.


9. **USB:** This USB 2.0 Type A connector allows use of a flash drive (not supplied) to perform software updates.

10. **Status:** This indicator lights green when the system is powered and ready for use. A solid or blinking yellow color indicates that the product is starting up. A red color indicates that a system update is taking place.

Rear Panel

The rear panel is shown in Figure 2-2.

Figure 2-2: *iAM1-MIX8-12G* Rear Panel & Option Cards

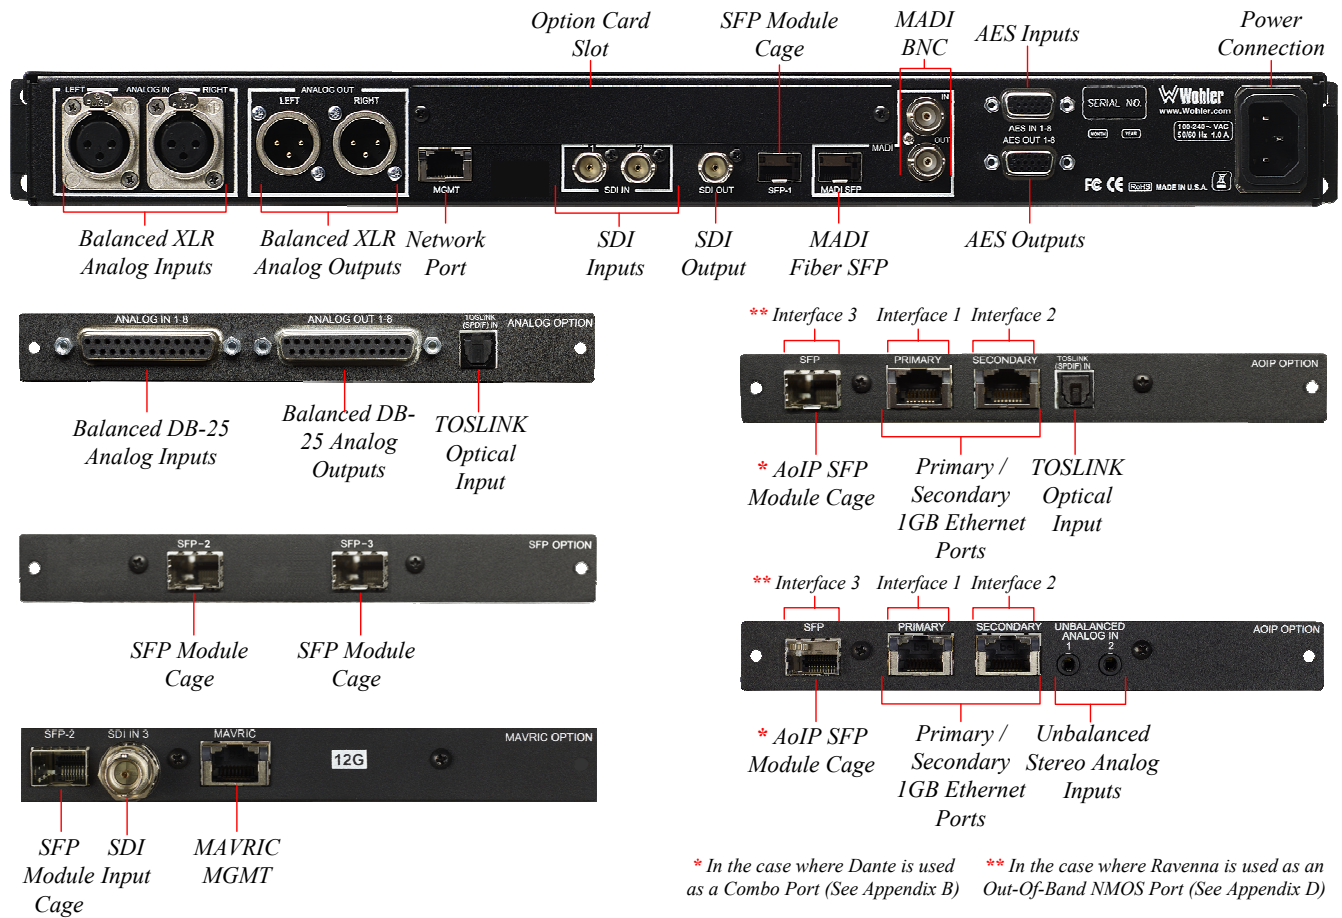

Power Connection: The *iAM1-MIX8-12G* receives power from an AC inlet, which is a standard IEC receptacle for 100 to 240 VAC ±10%, 50/60 Hz power connection. Four regional AC power cords, supplied according to shipping region, are available.

Important:


By design, the supplied AC mains power cord will only plug into a three-prong grounded outlet for your safety. If the plug does not fit into the outlet, contact an electrician to replace the obsolete outlet.

- SDI Inputs:** These two BNC connectors accept the two 12G/3G/HD/SD-SDI input signals containing audio to be monitored. This is a standard feature.
- SDI Output:** This BNC connector outputs the selected 12G/3G/HD/SD-SDI or SFP module input signal.
- Network Port:** This Ethernet port can connect to either a LAN or to a PC to let you perform administrative tasks remotely. The Wohler Web GUI is

described in Chapter 4 of this manual. Third party equipment, connecting to the *iAM1-MIX8-12G* via a LAN plugged into this port and using an API commands, can view and change product options, as well. This API is described in Appendix E of this manual.

4. **MADI BNC:** (optional) The COAX input accepts an AES10 64-channel signal at 48 kHz sample rate. An optional license key must be purchased to enable this function. The COAX output is reclocked from the MADI source. When power to the *iAM1-MIX8-12G* is not present, the COAX input and output are automatically connected together to allow the MADI signal to pass through. A software license must be installed for this input to function. Refer to the **System Setup** section in Chapter 4 to install software licenses.
5. **MADI Fiber SFP:** (optional) This input module accepts an optical AES10 64-channel MADI input signal at 48 kHz sample rate. An optional license key must be purchased to enable this function. A software license must be installed for SFP ports to function. Refer to the **System Setup** section in Chapter 4 to install software licenses.
6. **AES Inputs:** (optional) This HD-15F connector accepts 4 AES3id digital audio pairs (8 channels) at a 48 kHz sample rate. Refer to Figure 2-3 for the pinout of this connector. The easiest way to interface with this connector is to use an HD-15 to VGA adaptor cable. Channels are selected as AES 1-8. A software license must be installed for these inputs to function. Refer to the **System Setup** section in Chapter 4 to install software licenses.


Figure 2-3: AES HD-15F Connector Pinout

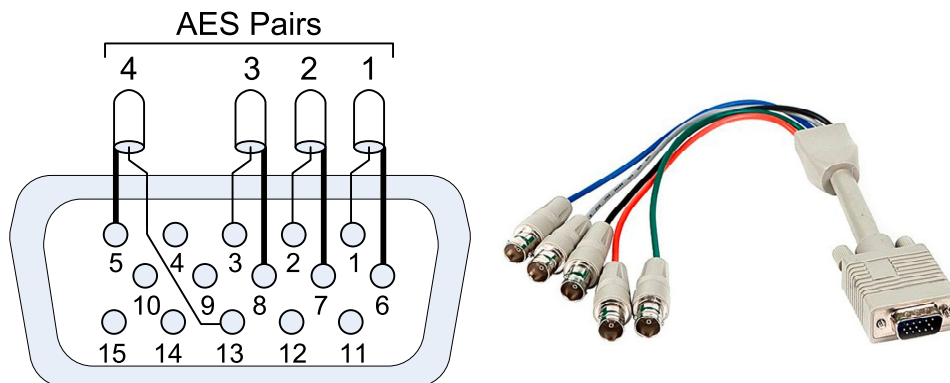

7. **AES Outputs:** This HD-15F connector provides 4 AES3id digital audio pairs (8 channels) at a 48 kHz sample rate from selected monitored sources. Refer to Figure 2-3 for the pinout of this connector. The easiest way to interface with this connector is to use an HD-15 to VGA adaptor cable. These outputs are not controlled by the **Volume** control. Monitored channels 1 and 2 are sent from AES-1, channels 3 and 4 are sent from AES-2, channels 5 and 6 are sent from AES-3, and channels 7 and 8 are sent from AES-4.

8. **SFP Module Cage:** An SFP cage is provided to accept one optional SFP module compatible with SDI coaxial or optical signals. The SFP modules are hot swappable for convenience. An optional license key must be purchased to enable each module. A software license must be installed for the SFP port to function. Refer to the **System Setup** section in Chapter 4 to install software licenses. The following SFP modules are offered:
 - a. **3G/HD/SD-SDI Single Video Receiver with Active Loopback:** This uses HD-BNC connectors.
 - b. **3G/HD/SD-SDI Video SFP with Optical Input:** This uses LC fiber connectors. It is a Single-Mode Receiver, Medium Haul, Non-MSA, and no output.
 - c. **SMTPE 2022-6 Receiver:** This uses Multi-Mode 850 NM, LC fiber connectors. It allows the *iAM1-MIX8-12G* to monitor SDI audio transmitted in real time over Ethernet. You must use the MN-Set configuration software to set up this option. It is available from Wohler Technologies Technical Service.
 - d. **SMTPE 2110 Receiver:** This uses Multi-Mode 850 NM, LC fiber connectors. It allows the *iAM1-MIX8-12G* to monitor SDI audio transmitted in real time over Ethernet. You must use the MN-Set configuration software to set up this option. It is available from Wohler Technologies Technical Service.
 - e. **SMTPE 2110 or 2022-6 Receiver:** This uses Multi-Mode 850 NM, LC fiber connectors. It allows the *iAM1-MIX8-12G* to monitor SDI audio transmitted in real time over Ethernet. You must use the MN-Set configuration software to set up this option. It is available from Wohler Technologies Technical Service.
9. **Analog Inputs:** These female XLR connectors provide two balanced analog inputs: Left and Right. The **Analog Inputs** are standard on the *iAM1-MIX8-12G*. Refer to Figure 2-4 for the pinout of this connector.


Figure 2-4: Analog XLR-F Output Connections

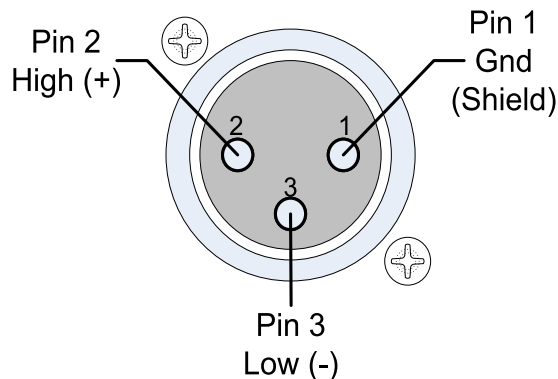

10. **Analog Outputs:** These male XLR connectors provide two balanced analog outputs: Left and Right. The source of these signals is the mix of audio as monitored by the internal speakers and is adjusted by the

Volume control. The **Analog Outputs** are standard on the *iAM1-MIX8-12G*. Refer to Figure 2-5 for the pinout of this connector.

Figure 2-5: Analog XLR-M Output Connections

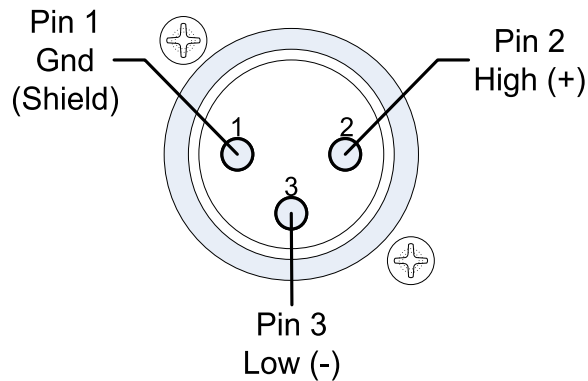


11. **Option Card Slot:** This metal plate can be removed to reveal a location in which future optional modules can be installed.
12. **TOSLINK Optical Input** (optional): This connector is located on the panel of the optional OPT-iVAM ANALOG Option card, as well as on the panels of the optional 829171 or 829172 AoIP Option cards. It provides an optical stereo pair input.
13. **Unbalanced Stereo Analog Inputs** (optional): These 1/8" jacks are located on the on the panels of the optional 829171-1 or 829172-1 AoIP Option cards. They provide connections for left and right unbalanced stereo input channels.
14. **Balanced Analog DB-25 Outputs** (optional): This DB-25 female connector outputs 8 channels of +10dBu broadcast level balanced audio. This connector is located on the panel of the optional OPT-iVAM ANALOG Option card. The source of these signals is the monitored audio channels as shown on meters 1 - 8. Tascam cables may be used, and can be purchased by contacting Wohler Sales. Refer to Figure 2-6 for the pinout of this connector.

Note: PCM channels marked as data channels (such as those containing encoded Dolby streams) are automatically muted from being sent out to the external amplifier and speakers.

Note: When these outputs are used to connect to an external amplifier and speakers, the external amplifier should be muted whenever the *iAM1-MIX8-12G* is being powered up or powered down.

15. **Balanced Analog DB-25 Inputs** (optional): This DB-25 female connector inputs 8 channels of up to +10dBu broadcast level balanced audio. This connector is located on the panel of the optional OPT-iVAM ANALOG Option card. These signals are monitored on meters 1 - 8 by default. Tascam cables may be used, and can be purchased by contacting Wohler Sales. Refer to Figure 2-6 for the pinout of this connector.


Figure 2-6: Analog DB-25F Input and Output Connections

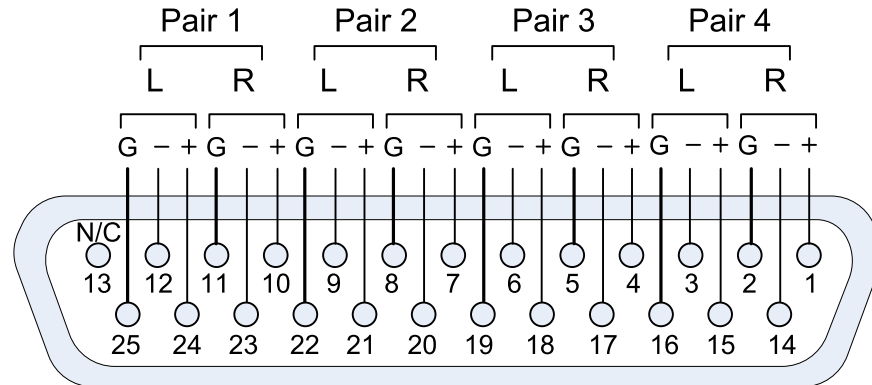

16. **AoIP SFP Module Cage** (optional): This provides a location in which to insert the AoIP Module supplied with the OPT-DANTE (iVAM) and OPT RAVENNA 64 (iVAM) options.
17. **Primary / Secondary 1GB ENET** (optional): Primary and Secondary Gigabit Ethernet interfaces are provided with the AoIP option module for use with Dante64, Ravenna64 or SMPTE 2110-30/AES67. The two gigabit Ethernet interfaces provide hitless/SMPTE 2022-7 processing options.
18. **Combo Port** (optional): An optional 1GB Fiber Ethernet SFP module and the Primary RJ-45 Ethernet port on the option card operate as a combo port, that is, they provide two different physical layers, optical fiber or electrical, but share the same Ethernet characteristics. However, the two different ports cannot be used simultaneously. You must choose to connect either one or the other.
19. **GPIO Port:** This DB-9 female connector contains 4 General Purpose Inputs (GPI) and 2 General Purpose Outputs (GPO), as well as common ground connections. A software license must be installed for the GPIO port to function. Refer to the **System Setup** section in Chapter 4 to install software licenses. Refer to the **GPIO Port Actions** section of Chapter 4 for uses of this interface. Refer to Figure 2-7 for the pinout of this connector.

Normally, each GPI is internally pulled to a high (5 VDC) level when not actuated. Pull a GPI to a low (ground) level to activate it. A dry contact closure can be used to achieve this, as can a 0 to 5 volt logic level. Do not exceed 5 VDC or less than 0 VDC if driven from a logic level to avoid possible damage to the GPI input.

Figure 2-7 – GPIO Port Pinout

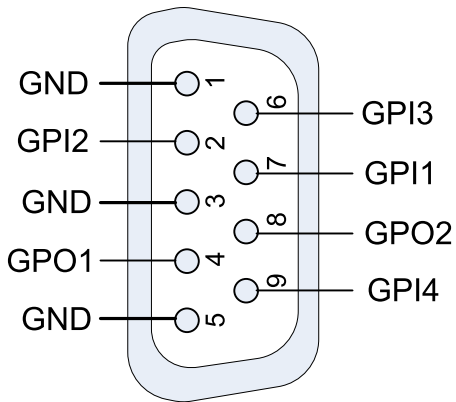


20. **MAVRIC RMoC Option Card** (optional): This optional module enables MAVRIC functionality, adds another SDI BNC input which supports 12G SDI signals, and adds an SFP slot for 12G/3G SDI or ST2110 input. Separate SFP Purchase required. The 12G BNC input can be selected using the **SDI-3** selection from the **Source Select** menu. The SFP input can be selected by using the **SFP-2** selection from the **Source Select** menu. The SDI output from the unit will be 3G (1920x1080) when a 3G/6G/12G SDI signal is being monitored from the inputs of this option card.

SFP-2022-6 / SFP-2110 Address Setup

While the optional SFP-2022-6 and SFP-2110 modules monitor program audio created from distinctly different technologies, both are connected to the network in the same way and have the same requirements for addressing. Figure 2-8 illustrates the network connections they need.

Figure 2-8: SFP-2022-6 and SFP2110 Network Diagram

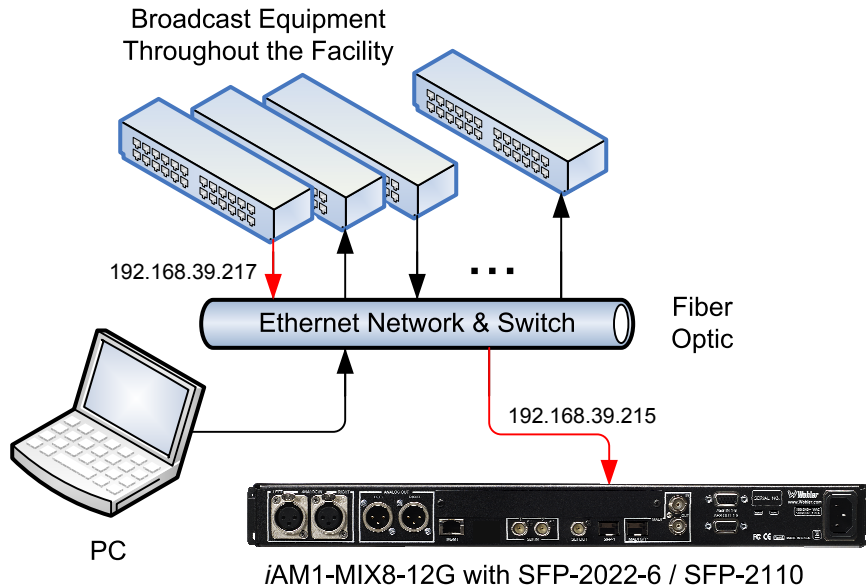


The optional SFP-2022-6 or SFP-2110 module furnished by Wohler Technologies is manufactured by Embrionix and comes from the factory with a default IP address. To integrate it into your digital network, you need to set its address to the source to be monitored. You must use the MN-Set configuration software to set up this option. It is available from Wohler Technologies Technical Service. The procedure to accomplish this is described in the **SFP-2022-6 / SFP-2110 Setup Guide** (part number 821822), which is available at <https://wohler.com/downloads/>.

Audio Mixer Screen

Audio meters, as well as other indicators are displayed on the wide touchscreen LCD display as shown in Figure 2-9. The Audio Mixer Controls can be set up on the Unit Config menu to affect single channels or stereo pairs. Note that if sources contain 8 or less channels, they will always be displayed with one channel per Audio Mixer Control and level meter.

Figure 2-9: Audio Mixer Screen

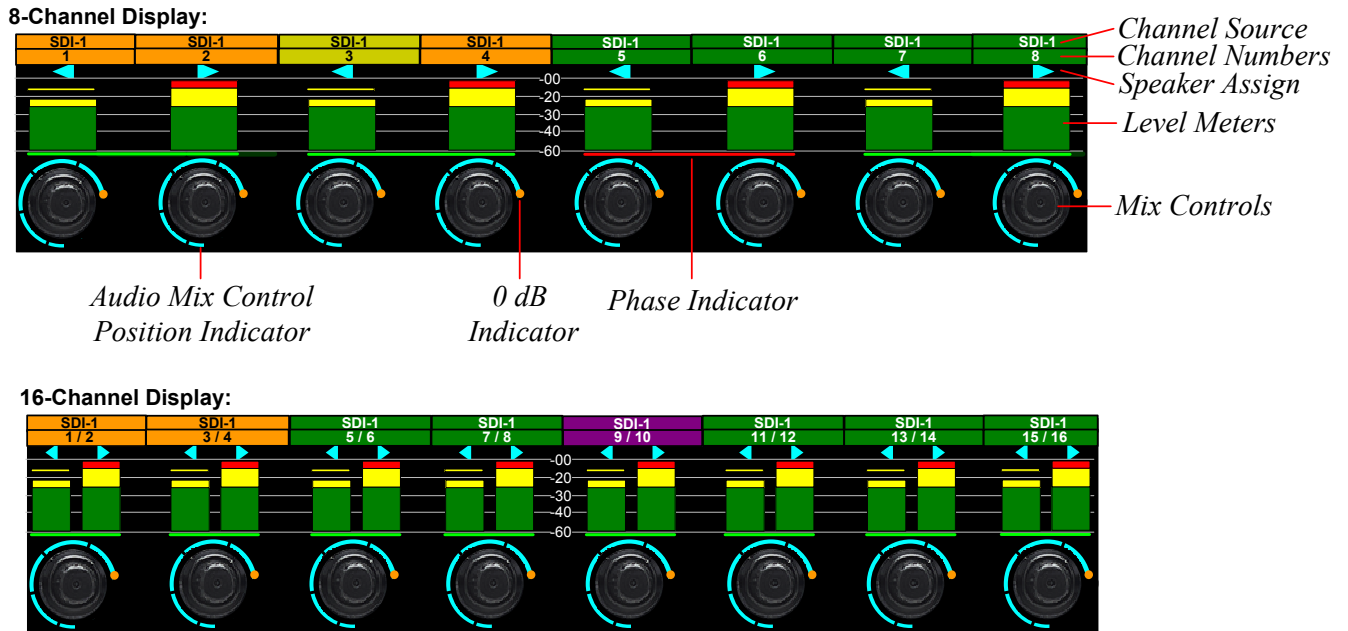

1. **Channel Source:** The name of the input source of each channel or channel pair is shown. If this designation is dark, the channel or channel pair is not included in the mix. However, if the block containing the name is bright green, then channel or channel pair is part of the mix. The text of the Channel Source may be set using the Web GUI. Refer to Chapter 4.
2. **Channel Numbers:** The monitored channel numbers are shown. They are arbitrary sequential numbers of each channel in the selected source. They may be set using the Web GUI. Refer to Chapter 4.
3. **Color-Coded Channel Source and Number Labels:** Channel label colors can be customized per meter, with separate colors for Mute and Unmute states. The selected label colors are stored per preset and recalled on preset load. The colors may be selected using the Web GUI. Refer to Chapter 4.
4. **Speaker Assignment:** The destination of each channel is shown:
 - ◀ Indicates the channel will be monitored from the left speaker.
 - ▶ Indicates the channel will be monitored from the right speaker.

- Indicates the channel will be monitored from both speakers.
 - 🔴 Indicates that the channel contains a Dolby bitstream and it is automatically muted.
5. **Level Meters:** A Level Meter is shown for each channel.
 6. **Audio Mixer Control Position Indicator:** At the bottom of each channel or channel pair is an **Audio Mixer Control**. Its rotational position shows the whether the channel or channel pair has been trimmed and relatively how much. The adjustment range is -60dB to +12dB
 7. **0 dB Indicator:** The dot indicates where 0dB is located in the adjustment range.
 8. **Phase Indicator:** This indicator will normally be dark green if the two channels are in phase. If the two channels are out of phase, the indicator will light red. This feature can be added or removed using the Phase Config Menu.

Operating the Monitor

Source Selection

To change the source to be monitored, turn the **Source/Preset** knob to your desired source or Preset. Presets are pre-arranged input monitoring setups that can be used to monitor a variety of combinations of inputs. You may create or adjust Presets by using the Web GUI. Refer to the **Preset Management** section in Chapter 4.

Alternatively, you may press the **Source/Preset** control, which will proceed to a menu showing all of the available physical input sources or Presets. Depending upon the setting of the **Source Knob Selection** setting in the **Unit Config** menu, you will be presented with a choice of either physical input sources or of Presets. Simply touch your choice. Refer to the **Page Flip, Source Select, Preset, and Favorite Preset** descriptions in this chapter.

Note that turning the **Source/Preset** knob past the upper or lower selection range will not wrap around, but instead will remain at the end point selection.

Note that one of the choices of the **Source Knob Selection** in the **Unit Config** menu allows that pressing the **Source/Preset** control will not allow the operator to change sources, if this is desired. Refer to the **Source Knob Select** setting in the **Unit Config** menu.

Overall Volume Adjustment

To adjust the overall level through the speakers, the headphone and the analog outputs, rotate the **Master Volume**. As you do this, a graphic appears in the lower



center of the display as follows: 913 A number from 0 to 1023 appears as an


indicator of the volume level.

Pressing the **Master Volume** control dims the audio and a second press mutes the audio. When the audio is muted, a speaker muted icon appears in the lower center



of the display:  This icon also displays whenever this control is turned all the way counterclockwise. Rotating the **Master Volume** immediately removes the dim or mute.

To adjust the left – right balance, turn the **Balance/Adjust** knob. As this control is turned, the following graphic will appear in the center of the display to indicate the

left – right balance setting: 

Press the **Balance/Adjust** knob to center the balance.

Add or Remove Channels from the Monitor Mix

To add a channel or channel pair to the monitor mix, simply press the associated **Audio Mixer Control**. Rotate the **Audio Mixer Control** to adjust the mix level in 1 dB steps from -60 dB to +12 dB. The relative mix level will be indicated on the **Audio Mixer Control**. Changing channel gain affects all the outputs that have “Volume Control” enabled in the Web GUI. Refer to Chapter 4. For stereo channels, the same mix level is applied to both channels.

Press the **Audio Mixer Control** again to remove the channel or channel pair from the monitor mix.

Customize the Settings


The iAM1-MIX8-12G has many operational options and settings. To access them, simply press the **Source/Preset** knob for 2 seconds. The display will change to show the **Main Menu**. Touch the selections on the screen to progress to the various option setting menus and then change the settings as needed. Refer to the following section in this chapter.

Alternatively, you may use the Web GUI to view and change all of these option settings and more remotely. Refer to Chapter 4 of this manual.

Menu / Option Touchscreen

You may set most options or view a variety of system information using the self-contained menus. To access the **Main Menu**, press the **Source/Preset** knob for 2 seconds. To exit the Menus, hold the **Source/Preset** knob for 2 seconds. Figure 2-10 is a diagram of the menu arrangement, a tree showing how to reach any menu from the **Main Menu**. Figure 2-11 shows the **Main Menu**.


Figure 2-10: Menu Tree

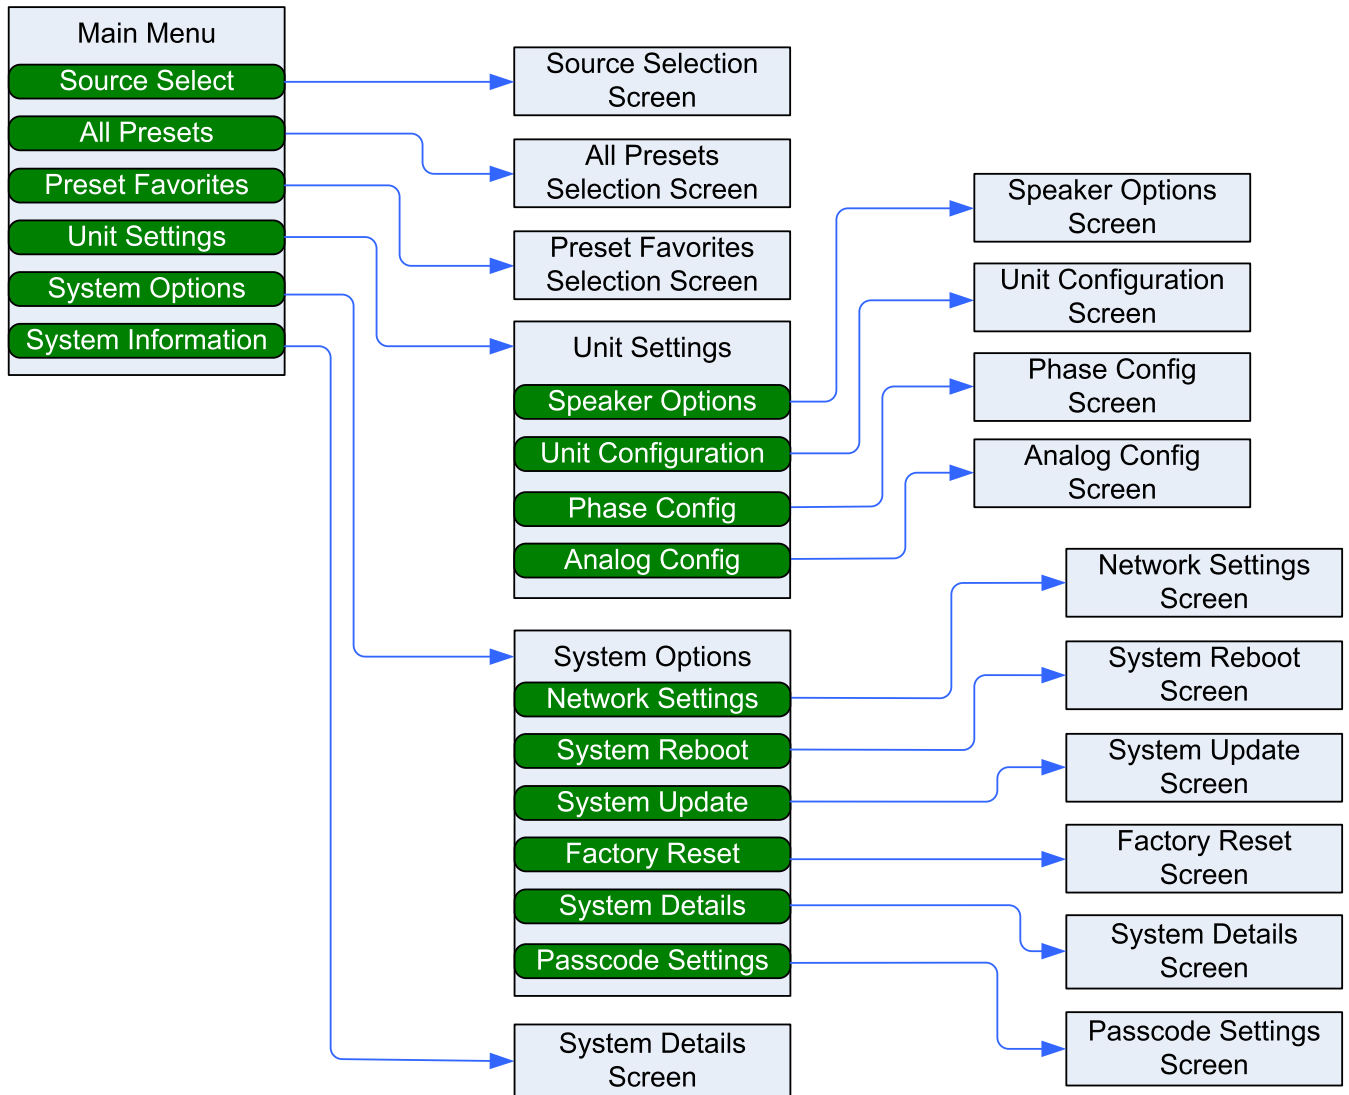

Main Menu

Press the **Source/Presets** knob to access the **Main Menu**. The **Main Menu** is shown in Figure 2-11. You may simply touch your selection or rotate the **Source/Presets** knob to navigate to your choice. As you rotate the **Source/Presets** knob, each selection button will highlight. Press the **Source/Presets** knob to make the selection. Touch **Exit** to close this menu.

Figure 2-11: Main Menu

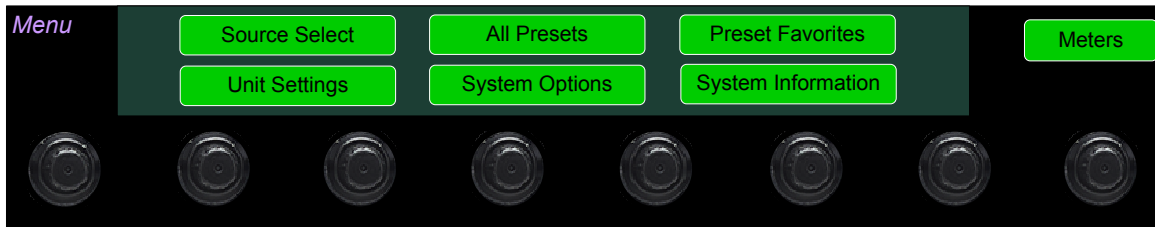


Source Select

If you have set the **Source Knob Selection** setting in the **Unit Config** menu to **Source Select**, you may change the monitored source by simply rotating the **Source** knob.

Alternatively, touching the **Source Select** selection on the **Main Menu** proceeds to the **Source Select** menu, which shows all of the possible sources. The selected source is shown in a light color. You may simply touch another source in this menu to switch to it or rotate the **Source/Presets** knob to navigate to your choice and then press it.

This screen also shows sources which are unlicensed and therefore nonfunctional. These sources are shown in a gray color. To license these sources so that they may be used, contact Wohler Technologies. Figure 2-12 shows the Source Select Menu.

Figure 2-12: Source Select Menu

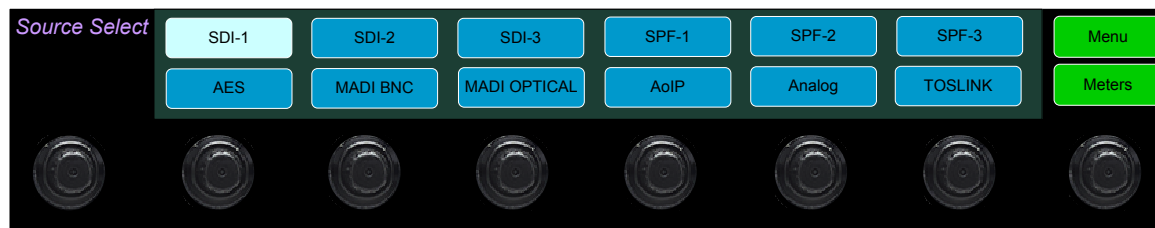


Touch **Menu** to exit this menu.

If you touch MADI BNC, MADI Optical, or SFP, an additional selection screen will be shown, asking you select which 8 MADI channels to monitor or which SFP functionality to monitor. An example of these screens is shown in Figure 2-13.

Note: AoIP, TosLink and/or Analog (DB25) sources are only available if the appropriate hardware option cards are installed on the unit. Refer to Table 3-3. If not installed, then the system will show message **Feature is not supported or requires valid hardware**, as illustrated in the last screen shown in Figure 2-13.

Figure 2-13: Additional Selection Screens:

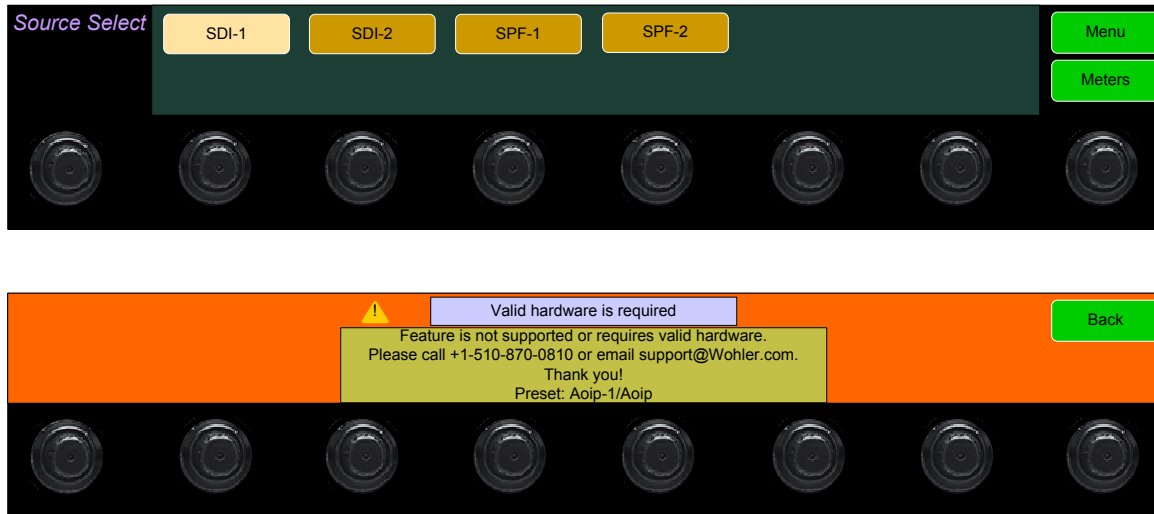

Touch **Back** to return to the **Source Select** menu or touch **Menu** to return to the **Main Menu**.

Presets


Presets are pre-arranged input and monitoring setups that can be used to monitor a variety of combinations of inputs. They may be set up to allow quick and easy selection of monitoring configurations for various productions and situations. If you have not set up any Presets, use the Configure Presets page in the Web GUI to do so. Refer to Chapter 4. Or, if you prefer not to set up any Presets, simply monitor the sources directly using the Source Select button in the Menu.

In addition to the menu access described in the following two sections, the **Source** control can be used to directly select any Preset or any Favorite Preset. Refer to the **Source Knob Select** setting in the **Unit Config** menu.

All Presets


Touch the **All Presets** button to display the All Presets Group Selection screen as shown in Figure 2-14. You may touch your selection or rotate the **Source/Presets** knob to navigate to your choice and then press it.

Figure 2-14: All Presets Screen - Group Selection

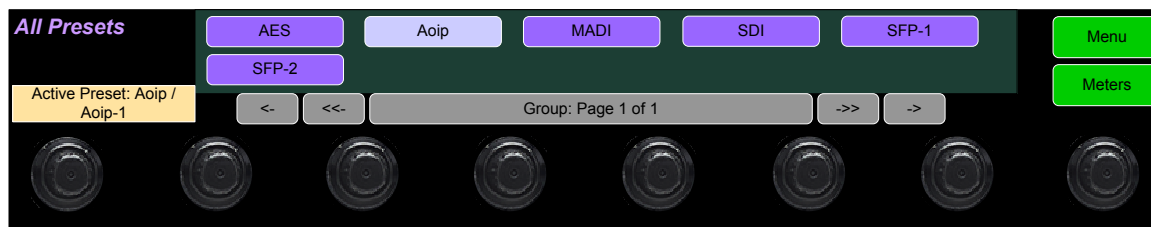

The Presets are normally arranged into Groups. Use this screen to select which Preset-containing Group to examine. After selecting one of the Groups, the Preset Selection screen shown in Figure 2-15 is shown.

Figure 2-15: All Presets Screen - Preset Selection

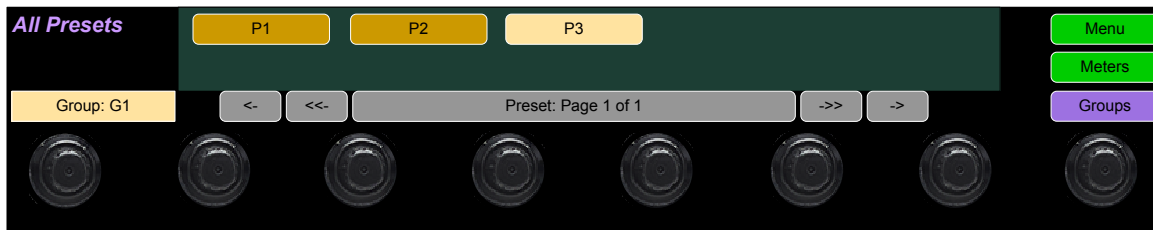

To select a Preset, touch your selection or rotate the **Source/Presets** knob to navigate to your choice and then press it. After a quick 2-second delay, the metering screen will display the channels contained in that source.


To return to the All Presets Group Selection screen instead, touch the **Groups** button. To return to the Menu without making a selection, touch the **Menu** button.

To return to the Menu from this screen, touch the **Menu** button.

Preset Favorites

Touch the **Preset Favorites** button to display the Preset Favorites screen. This shows the Presets that you have designated as Favorites. Refer to the Dashboard section of Chapter 4. Generally, these are frequently used Presets that you want to separate out from the possibly many other Presets in the system. The Preset Favorites screen is shown in Figure 2-16.

Figure 2-16: Preset Favorites Screen

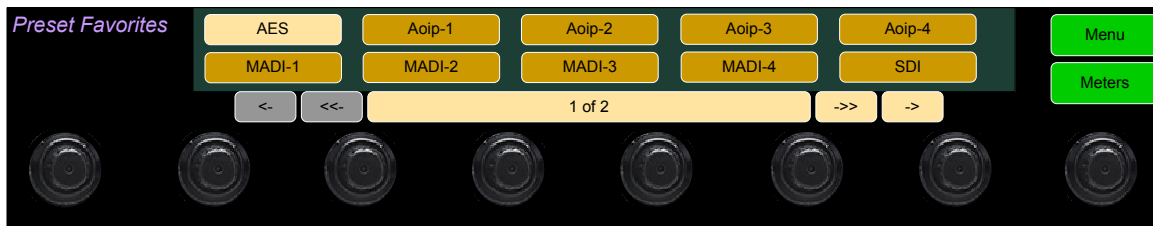

In this screen, the currently selected Preset is shown in bright yellow. Touch any Preset to select it or rotate the **Source/Presets** knob to navigate to your choice and then press it.


To exit this screen without making a selection, touch **Menu**.

Unit Settings

Touching the **Unit Settings** selection on the **Main Menu** screen proceeds to the **Unit Settings Menu**, which contains additional menu selections. You may touch your selection or rotate the **Source/Presets** knob to navigate to your choice and then press it.

The **Unit Settings Menu** is shown in Figure 2-17. This is an intermediary menu which leads to other menus and screens.


Figure 2-17: Unit Settings Menu

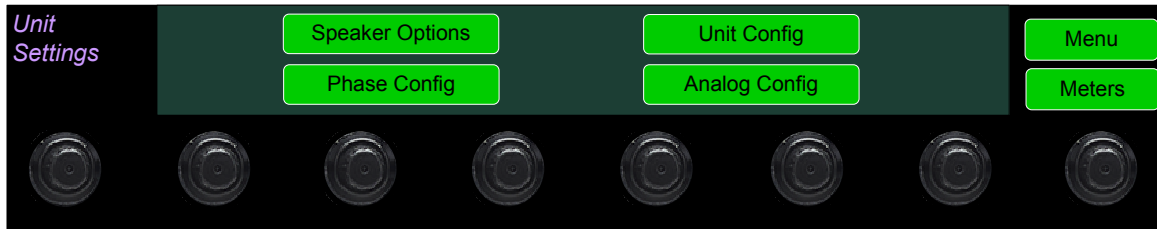

Speaker Options

Touching the **Speaker Options** selection on the **Unit Settings** Menu screen proceeds to the **Speaker Options** screen. The controls on this screen affect various characteristics of the monitored audio as heard on the *iAM1-MIX8-12G*. This screen is shown in Figure 2-18.

Figure 2-18: Speaker Options Screen

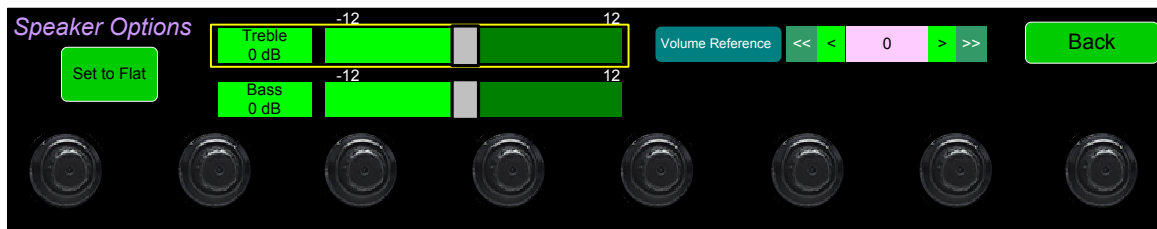

The controls function as follows:


1. **Volume Reference:** The **Volume Reference** setting controls the attenuation level of the internal speakers. The value ranges from 0 to -255 dB. 0 results in full volume and -255 causes the speakers to be muted.
2. **Treble:** This tone control adjusts the high frequency speaker audio response from -12 dB to +12 dB. Lowering **Treble** compensates for high frequency pre-emphasis or removes sibilance effects. Increasing **Treble** will add "sizzle" to the sound and bring high-pitched sounds out of the mix. The control can be touched and moved left or right to adjust in 2 dB increments. After touching the **Treble** control, the **Channel** knob can also be turned to make the adjustment.
3. **Bass:** This tone control adjusts the low frequency speaker audio response from -12 dB to +12 dB. Lowering **Bass** will unmask midrange band sounds, while increasing **Bass** will make the sound "fatter". The control can be touched and moved left or right to adjust in 2 dB increments. After touching the **Bass** control, the **Channel** knob can also be turned to make the adjustment.
4. **Set to Flat:** Touching this button will set the **Treble** and **Bass** controls to their midpoint, resulting in a flat response with 0 dB increase or decrease in treble and bass response.

Touch **Back** to exit this screen.

Unit Configuration

Touching the **Unit Config** selection on the **Unit Settings** Menu proceeds to the **Unit Config Menu**. This menu is shown in Figure 2-19.

Figure 2-19: Unit Configuration Menu

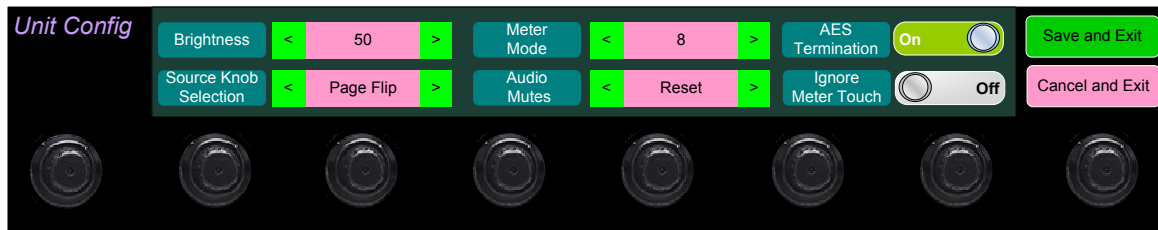

The controls function as follows:


1. **Brightness:** This setting adjusts the brightness of the display screen. Touch the left pointing arrow to dim the brightness or touch the right pointing arrow to increase the brightness on a scale of 0 - 100.
2. **Meter Mode:** This setting determines how many meters will be displayed. If 8 is selected, then only 8 meters will be displayed and each Audio Mixer control will adjust one channel. If 16 is selected, then 16 meters will be displayed in pairs. Each pair of meters will display the signals adjusted by the single Audio Mixer control that is positioned beneath it.
3. **AES termination:** AES signals should have one and only one termination. This termination should physically be at the last destination of an AES coax cable. If the iAM1-MIX8-12G is the last connection in a series of AES connections, then its terminations should be turned on. A symptom of too many terminations (or no termination) is that no signal appears to be present on the AES input. Touch the On - Off switch to change the termination setting.
4. **Source Knob Selection:** This setting determines the function of the **Source** knob on the front panel. Use the left and right arrows in this selector to change this setting. It may be set as follows, depending upon your needs:
 - a. **Page Flip:** When the **Source** knob is rotated right, next page of source channels (9 - 16) will be selected. When the **Source** knob is rotated left, previous page of source channels (1 - 8) will be selected. **Page Flip** has no effect when 16 Meters are displayed.
 - b. **Source Select:** The **Source** knob will select the input source to be monitored.
 - c. **All Presets:** The **Source** knob will select between any Presets present in the unit.
 - d. **Favorite Presets:** The **Source** knob will select between any of the Favorite Presets present in the unit.
 - e. **No Operation:** The **Source** knob will perform none of the above listed selection operations.

Touch **Cancel & Exit** or **Save & Exit** to exit this menu.

Phase Configuration

Touching the **Phase Config** selection on the **Unit Settings** Menu proceeds to the **Phase Config Menu**. Use the settings in this menu to enable or disable phase comparison and display between adjacent odd / even channels. This menu is shown in Figure 2-21.

Figure 2-21: Phase Configuration Menu

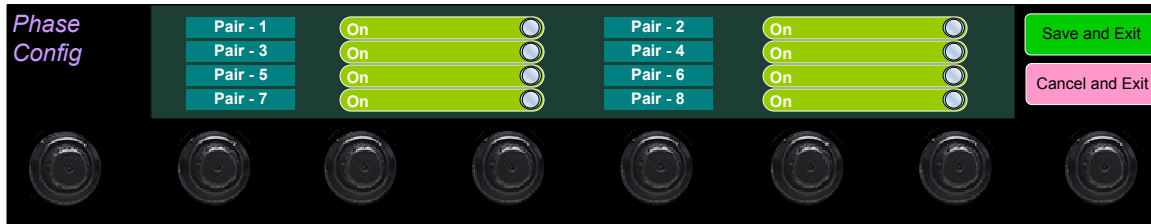

Analog Configuration

Touching the **Analog Config** button in the **System Options Menu** displays the **Analog Config** screen. Contained in this menu is an **Analog Reference** as illustrated in Figure 2-22. The parameters set on this screen pertain to the **Analog Input** and **Analog Output** DB25 and XLR connectors on the rear panel of the iAM1-MIX8-12G.

Figure 2-22: Analog Configuration Menu



There is only one setting on the **Analog Reference** menu:

1. **Analog Reference:** This setting adjusts the relationship between the monitored digital signal level and the analog signal level that is output from both of the DB25 and both of the XLR connectors on the back panel. The default setting is -20 Dbfs = +8 dBu as shown in Figure 2-22. The range of possible settings is as follows:
 - a. -20 dBFS = +8 dBu
 - b. -20 dBFS = 0 dBu
 - c. -22 dBFS = +4 dBu
 - d. 0 dBFS = +15 dBu
 - e. -16 dBFS = +4 dBu
 - f. -18 dBFS = +4 dBu

- g. -18 dBFS = 0 dBu
- h. -20 dBFS = +4 dBu

Touching **Save** will save any changes made, or touching **Cancel** will return you to the **System Options** menu without saving.

System Options Menu

Touching System Options in the **Main Menu** proceeds to the **System Options** menu, which is an intermediate menu leading to other screens. This menu is shown in Figure 2-23.

Figure 2-23: System Options Menu



Touch **Menu** to exit this menu.

Network Settings


Touch the **Network Settings** selection on the **System Options** Menu displays the **Network Settings** menu as shown in Figure 2-24. This screen lets you view or change the product IP, the Net Mask, Gateway and DNS. It also lets you switch between a static (fixed) or a dynamic (DHCP) network address.

Figure 2-24: Network Settings Screen



1. To change the IP Address, Net Mask, Gateway, or DNS, tap the item you would like to change. A keypad will appear, as shown in Figure 2-25.

Figure 2-25: Network Configuration: Setting Change

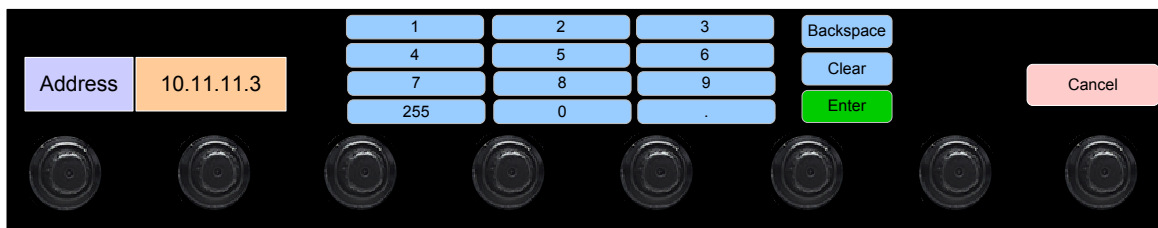

2. Touch the digits to be entered and then touch the **Enter** button. The **Clear** button may be touched to erase any mistyped digits.
3. Now repeat steps 1 and 2 until you have replaced all of the necessary digits.
4. To save the newly entered address, touch the **Enter** button. Touch the **Cancel** button to return to the previous screen without saving any changes.

Important:

There is no confirmation for **Save**, so make sure you want to perform this action before taking it. The system does not need to reboot before it is once again ready for operation.

To change from a static (fixed) to a dynamic (DHCP) network address, touch the **DHCP** button. The screen will change, as shown in Figure 2-26. To change back to a static (fixed) network address, touch the **DHCP** button again. The colors of the buttons will return to the ones depicted in Figure 2-24.

Figure 2-26: Network Settings: DHCP



1. To complete the network addressing scheme change, touch the **Save** button. This will save the changes you selected.
2. Touch the **Cancel** button to return to the previous screen without saving any changes.

Important:


There is no confirmation for **Save and Exit**, so make sure you want to perform this action before taking it. The system will not need to reboot before it is once again ready for operation.

System Reboot

Touching the **System Reboot** selection on the **System Options** Menu displays the **System Reboot** screen as shown in Figure 2-27. This function is normally only used upon request from Wohler Technical Service to troubleshoot or correct an issue.

The **System Reboot** function should be used with a bit of forethought. It puts the system out of service for several minutes while it is rebooting.

Figure 2-27: System Reboot

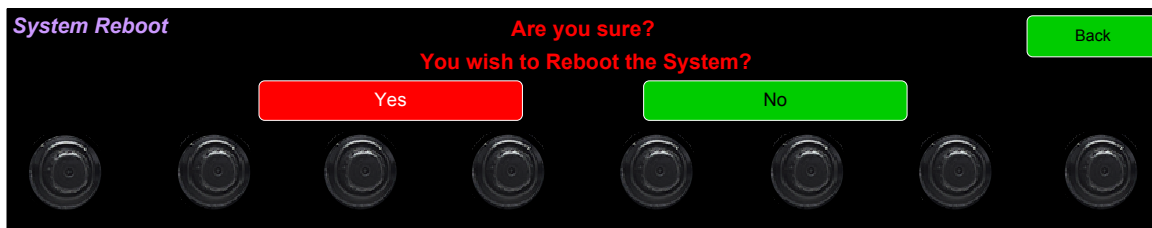


If you have any doubt as to whether you should press **Yes**, press **Back** or **No** instead, and contact Wohler Technical Service for advice. Pressing **Back** or **No** will return you to the **System Options** menu.

System Update

Touching the **System Update** selection in the **System Options** Menu displays **System Update** screen as shown in Figure 2-28, showing the current software version of the product. To update the system software locally from the iAM1-MIX8-12G front panel, follow the procedure in the **Local Update from the Front Panel** section of Appendix A.

Figure 2-28: System Update Screen

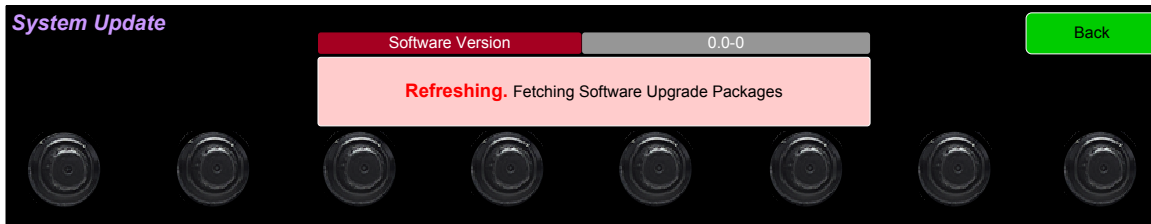

If you have just inserted a flash drive with a valid software upgrade package, press **Refresh** to see that package.


Touch the **Back** button return to the **System Options Menu**.

Factory Reset

Touching the **Factory Reset** selection in the **System Options** menu displays the **Factory Reset** screen as shown in Figure 2-29. Because of the large change this function is about to make to the product, it asks for you for verification that you really want to proceed.

The **Factory Reset** function should be used with caution. It deletes all of the settings you have programmed into the system. It returns the system to the way it was when received new from the factory. After using this function, you will need to use the Wohler Web GUI to reprogram everything from the start.

Figure 2-29: Factory Reset

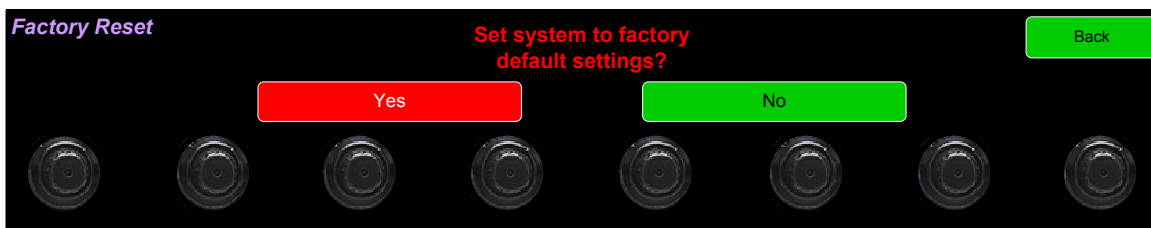

Note: Factory Reset will also reset your IP address to the default one. After a Factory Reset, the IP Settings will need to be updated. The default IP address for the unit is determined based upon the Mac address. It is 169.254.1.xx where xx is the last octet of the management Mac address. For example, if the Mac address is b4:ed:54:d0:04:28 then the IP address would be 169.254.1.40 (40 is the decimal equivalent for the last octet of Mac address 28.)

If you have any doubt as to whether you should press **Yes**, press **Back** or **No** instead, and contact Wohler Technical Service for advice. Pressing **Back** or **No** will return you to the **System Options** menu.

System Details

Touching the **System Details** selection in the **System Options** menu displays the **System Details** screen as shown in Figure 2-30. This screen lets you view the product Serial Number, Software Version, and other information.

Figure 2-30: System Details Screen



The information shown on this screen is read only and cannot be changed. Touch **Back** to return to the **System Options** Menu.

Passcode Settings

To prevent accidental or unauthorized changing of critical settings in some of the menus, it is possible to block or restrict access to various menus. The Wohler Web GUI can be used to limit access to the menus of your choice. Refer to Chapter 4, the **Front Panel Configuration** tab of **System Preferences**.

The iAM1-MIX8-12G contains a **Passcode Settings** screen. Access to this screen is always protected by a unique Passcode, which you can set. Note that the protection of the **Passcode Settings** selection is indicated by an orange lock icon:


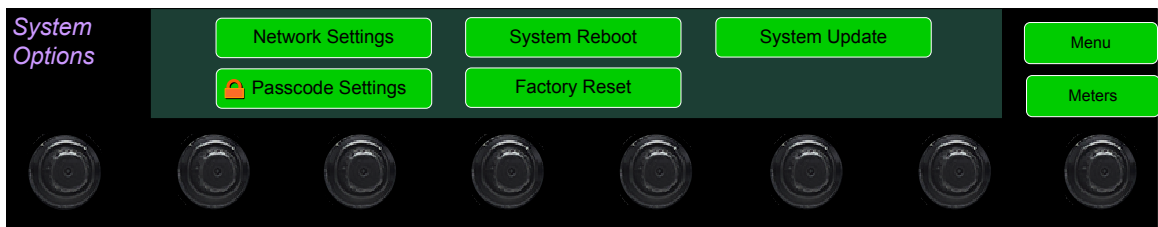
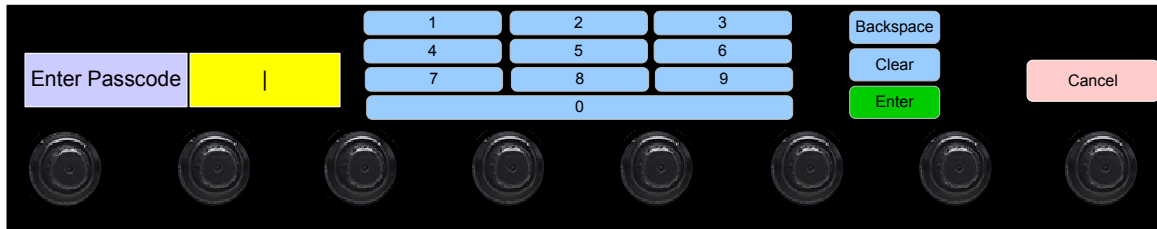
 The **Passcode Settings** button on the **System Options** screen contains this icon, as shown in Figure 2-31. The factory default Passcode is 0-0-0-0.

Figure 2-31: System Options - Passcode Settings Lock



Touching the **Passcode Settings** selection in the **System Options** menu proceeds to the **Passcode Entry** screen as shown in Figure 2-32.


Figure 2-32: Passcode Entry Screen



Enter the Passcode on the keypad and touch **Enter**. The numbers will display as bullets in the field. Press **Clear** and try again.

When you have successfully entered the Passcode, the Passcode Settings screen will appear, as shown in Figure 2-33.

Figure 2-33: Passcode Settings Screen

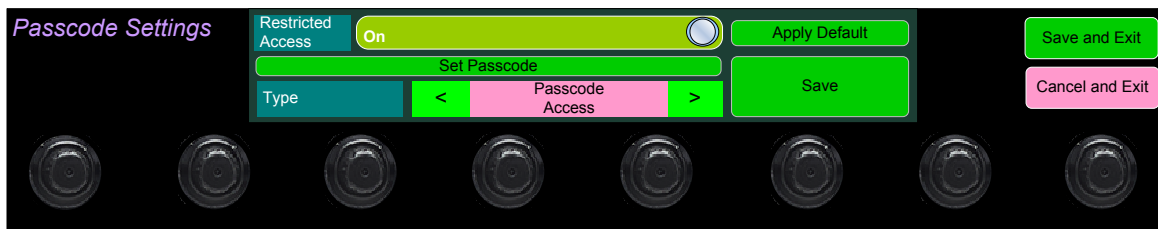


The functions on this screen are as follows:

Restricted Access: This switch will turn ON or OFF protection or blocking of any menus, except for the Passcode Settings menu, which is always Passcode protected.

Set Passcode: Touching this button proceeds to a keypad which allows you to enter a new Passcode. The screen shown in Figure 2-34 will appear. The Passcode can be any 4-digit number. Touch **Enter** to save the new Passcode or touch **Cancel** to keep the previous Passcode. Be sure to save the Passcode in a safe place for future reference.

Figure 2-34: Set Passcode Screen

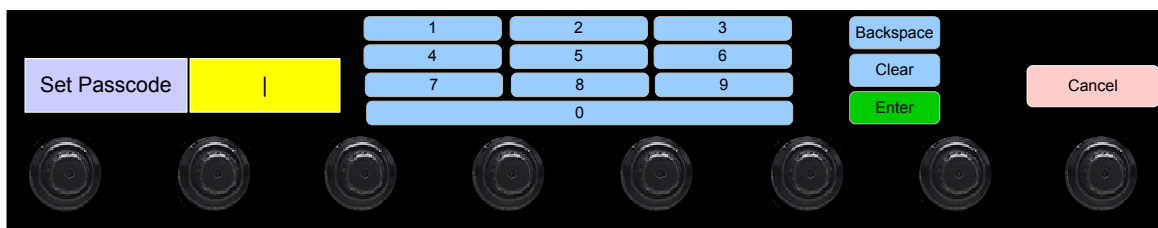


Type: Select the type of disabled button appearance using the **Type** button. The choices are:

Passcode Access: The Passcode protected function buttons include a small orange padlock icon within the buttons. This is shown on the Network

Settings and Factory Reset buttons in the upper image of Figure 2-35. Touching these buttons will cause a Passcode entry screen to appear, as shown in Figure 2-34. The correct Passcode must be entered to proceed.

No Access: If the function buttons are protected by No Access, the buttons are grayed out and non-functional, as shown on the Network Settings and Factory Reset buttons in the lower image of Figure 2-35. These buttons cannot be accessed at all unless the restricted protection is removed by switching OFF the **Restricted Access** setting in this menu.

Figure 2-35: Examples of Menu Protection

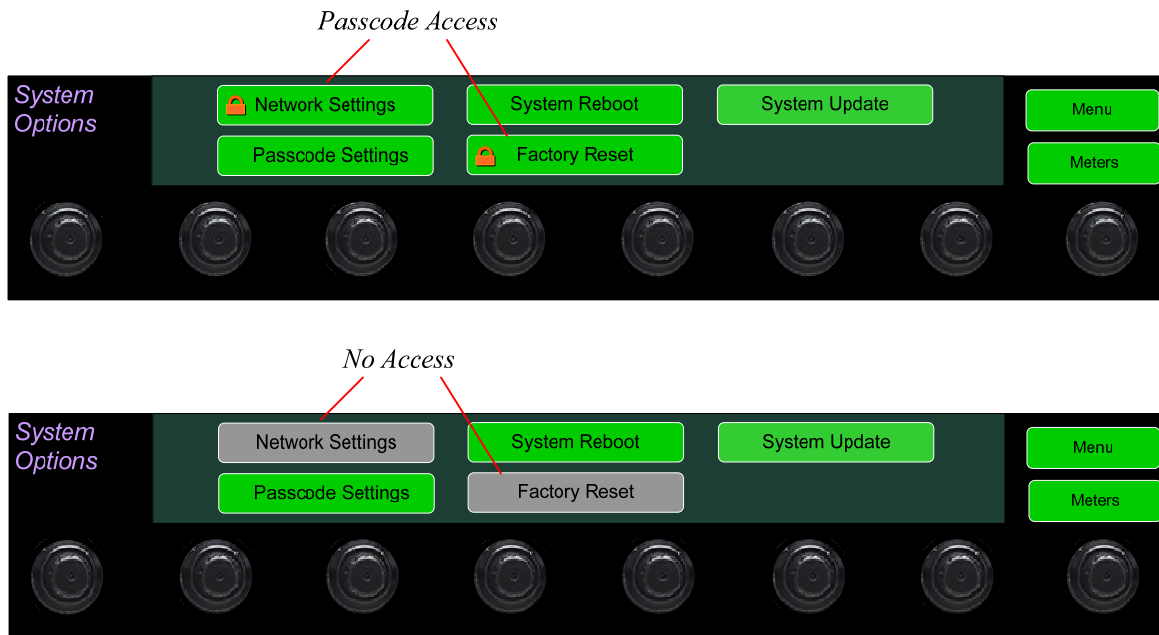

Apply Default: Touching this button returns the settings in this screen to the factory default values. The Passcode becomes 0-0-0-0.

Save: Touching this button saves the settings made in this screen and returns to the **System Options** screen.

Forgotten Passcode

Although the Passcode should be remembered or securely noted somewhere, it can happen that it is forgotten. This can be remedied by performing a Factory Reset from the Wohler Web GUI. Unfortunately, this will also erase all of the menu settings. You may also contact Wohler Technical Service for help.

CHAPTER 3: Technical Info

Table 3-1: iAM1-MIX8-12G Specifications

Specification	Values/Domains
Power Requirements	100 VAC to 240 VAC ± 10%, 50/60Hz
Power Consumption	65 Watts
Dimensions (H x W x D)	1.75" x 19" x 5.5" (44mm x 483mm x 140mm), standard 19" rack mounting
Shipping/Net Weight	8 lbs. (3.6 kg) / 5.5 lbs. (2.5kg)
Supplied Accessories	AC Power Cord
Display Type	7" Capacitive Touchscreen LCD
Screen Resolution	1242H x 280V
Viewing Angle	160 (H) x 160 (V)
Audio Channels	8 or 16
Level Meter Scale	AES
Sample Rate	48kHz
De-Multiplexing	8 or 16 channels from: <ul style="list-style-type: none"> • 16-channel SD/HD/3G-SDI • 64-channel AES10 MADI
SDI Inputs / Outputs	<ul style="list-style-type: none"> • 2 12G/6G/3G-SDI Inputs and 1 12G/6G/3G-SDI Output Optional – Single SFP Transceiver: <ul style="list-style-type: none"> • HD-BNC Coax 3G/HD/SD-SDI • Multi-Mode Fiber: 1 SI Optical SC-Connector, 1300nm • Single-Mode Fiber: 1 SI Optical SC Connector, 1310nm
MADI Inputs / Outputs	<ul style="list-style-type: none"> • 1 MADI BNC, Standard Coax I/O Optional – SFP Transceiver: <ul style="list-style-type: none"> • Multi-Mode Fiber: 1 MADI Optical SC-Connector, 1300nm • Single-Mode Fiber: 1 MADI Optical SC Connector, 1310nm
SMPTE 2022-6 Receiver	Optional - SFP Receiver: <ul style="list-style-type: none"> • Multi-Mode Fiber: LC Connectors, 850nm
SMPTE 2110 Receiver	Optional - SFP Receiver: <ul style="list-style-type: none"> • Multi-Mode Fiber: LC Connectors, 850nm

Specification	Values/Domains
Cable/Fiber Length (max)	COAX (such as Belden 1694A): > 150 m
	Single-mode fiber: 10 km
AES Inputs	8 AES channels on HD-15 are optional
AES Outputs	8 AES channels on HD-15
Upgrades	Via USB or GUI web interface
SDI Input Termination	75Ω unbalanced
AES/EBU Input Termination	75Ω unbalanced
AES/EBU/MADI Sampling Rate	48 kHz
Analog Inputs - Stereo	XLR-3 Female, balanced
Analog Input Impedance	40kΩ balanced
Analog Outputs - Stereo	XLR-3 Male, balanced +28 dBu max
Analog I/O – Multi-channel	8 Balanced Input Channels and 8 Balanced Output Channels on 2 x DB25F (optional)
Analog Output Frequency Response	40 Hz to 20 kHz (± 1dB)
Analog Output Distortion	<0.02% THD+N
Analog Output Dynamic Range	> 100 dB
Analog Output Reference Level	-20 dBFS = +4 ± 1.0 dBu
Internal Speakers - Stereo	70mm Full Range
Peak Acoustic Output	90 dB SPL (@ 2 feet)
Hum and Noise	Better than -68 dB below full output
Power Output	5 Watts RMS, 12 Watts peak (each side)
Acoustic Frequency Response	150 Hz to 16 kHz (± 5 dB)
Headphone Out - Stereo	40 Hz to 20 kHz (± 1 dB)
Headphone Load	8Ω to 150Ω
Presets	64 programmable / nameable

Table 3–2: iAM1-MIX8-12G Options

Option	Part #	Description
SFP-MM-MADI-Fiber	829081	MADI optical fiber transceiver. Multi-Mode, LC (fiber) connectors. SFP module with software activation key.
SFP-SM-MADI-Fiber	829082	MADI optical fiber transceiver. Single-Mode, LC (fiber) connectors. SFP module with software activation key.
SFP-SDI	829089	3G/HD/SD-SDI single video receiver with active loopback, HD-BNC connectors. SFP module with software activation key.
SFP-SDI-Fiber	829084	3G/HD/SD-SDI video SFP optical input; LC (fiber) connectors; Single-Mode Receiver, Medium Haul, Non-MSA, no output.
SFP-2022-6	829088	SMTPE 2022-6 receiver; Multi-Mode 850 NM, LC (fiber) connectors. SFP module with software activation key. Use MN-Set** to configure SFP.
SFP-2110 w/Ember+	829086	SMTPE 2110 receiver; Multi-Mode 850 NM, LC (fiber) connectors. SFP module with software activation key. Use MN-Set** to configure SFP.
SFP-2110 w/NMOS	829086-1	SMTPE 2110 receiver; Multi-Mode 850 NM, LC (fiber) connectors. SFP module with software activation key. Use MN-Set** to configure SFP.
SFP-2110 w/Ember+ +2022-6	829087	SMTPE 2110 or 2022-6 receiver; Multi-Mode 850 NM, LC (fiber) connectors. SFP module with software activation key. Use MN-Set** to configure SFP.
SFP-2110 w/NMOS +2022-6	829087-1	SMTPE 2110 or 2022-6 receiver; Multi-Mode 850 NM, LC (fiber) connectors. SFP module with software activation key. Use MN-Set** to configure SFP.
OPT-AES	829080	Enables decoding and monitoring of 4 x AES inputs on an HD-15 connector and 1 AES output on BNC connector. Requires a software activation key.
OPT-MADI	829092	Enables decoding and monitoring of 1 x MADI64 input. BNC connectors. Requires a software activation key.


OPT-OUTPUT-ROUTING	829159	Enables the flexibility to route signals from any inputs to various outputs.
OPT-RMOC-12G	829189	Adds another SDI BNC input which supports 12G SDI signals. Includes an SFP slot for 12G/3G SDI or ST2110 input. Separate SFP purchase required. Also enables MAVRIC functionality, capable of monitoring 16 channels of audio, selected from the input sources connected to the monitor.
OPT-GPIO	829198	Enables 4 GPI's and 2 GPO's. Requires a software activation key.

****MN-Set** is configuration software that is necessary so that you can set up this module. It is available at no cost either from its manufacturer, Embrionix, or by contacting Wohler Technologies Technical Service.

Table 3-3: iAM1-MIX8-12G Option Cards

Option	Part #	Description
OPT-ANLG/TOS (iVAM)	829170	Enable monitoring of 8 Analog channels on DB-25. TOSLINK included.
OPT-DANTE (iVAM)	829171	Enable decoding and monitoring of Dante™ input streams. Includes AoIP card. Enables 2 x RJ-45 ports for 2022-7 support (for Dante, Ravenna and 2110-30) + SFP cage allowing MM and SM SFP's for AoIP Signals. TOSLINK included.
OPT-DANTE (iVAM)	829171-1	Enable decoding and monitoring of Dante™ input streams. Includes AoIP card. Enables 2 x RJ-45 ports for 2022-7 support (for Dante, Ravenna and 2110-30) + SFP cage allowing MM and SM SFP's for AoIP Signals. Left and right unbalanced analog input jacks included.
OPT-RAVENNA 64 (iVAM)	829172	Enable monitoring of up to 64 Ravenna™ / AES67 input. NMOS support. TOSLINK included.
OPT-RAVENNA 64 (iVAM)	829172-1	Enable monitoring of up to 64 Ravenna™ / AES67 input. NMOS support. Left and right unbalanced analog input jacks included.
OPT-SFP	829179	Adds two additional 3G inputs to 3G products, or two 12G inputs to 12G products.

Figure 3-1: iAM1-MIX8-12G Block Diagram

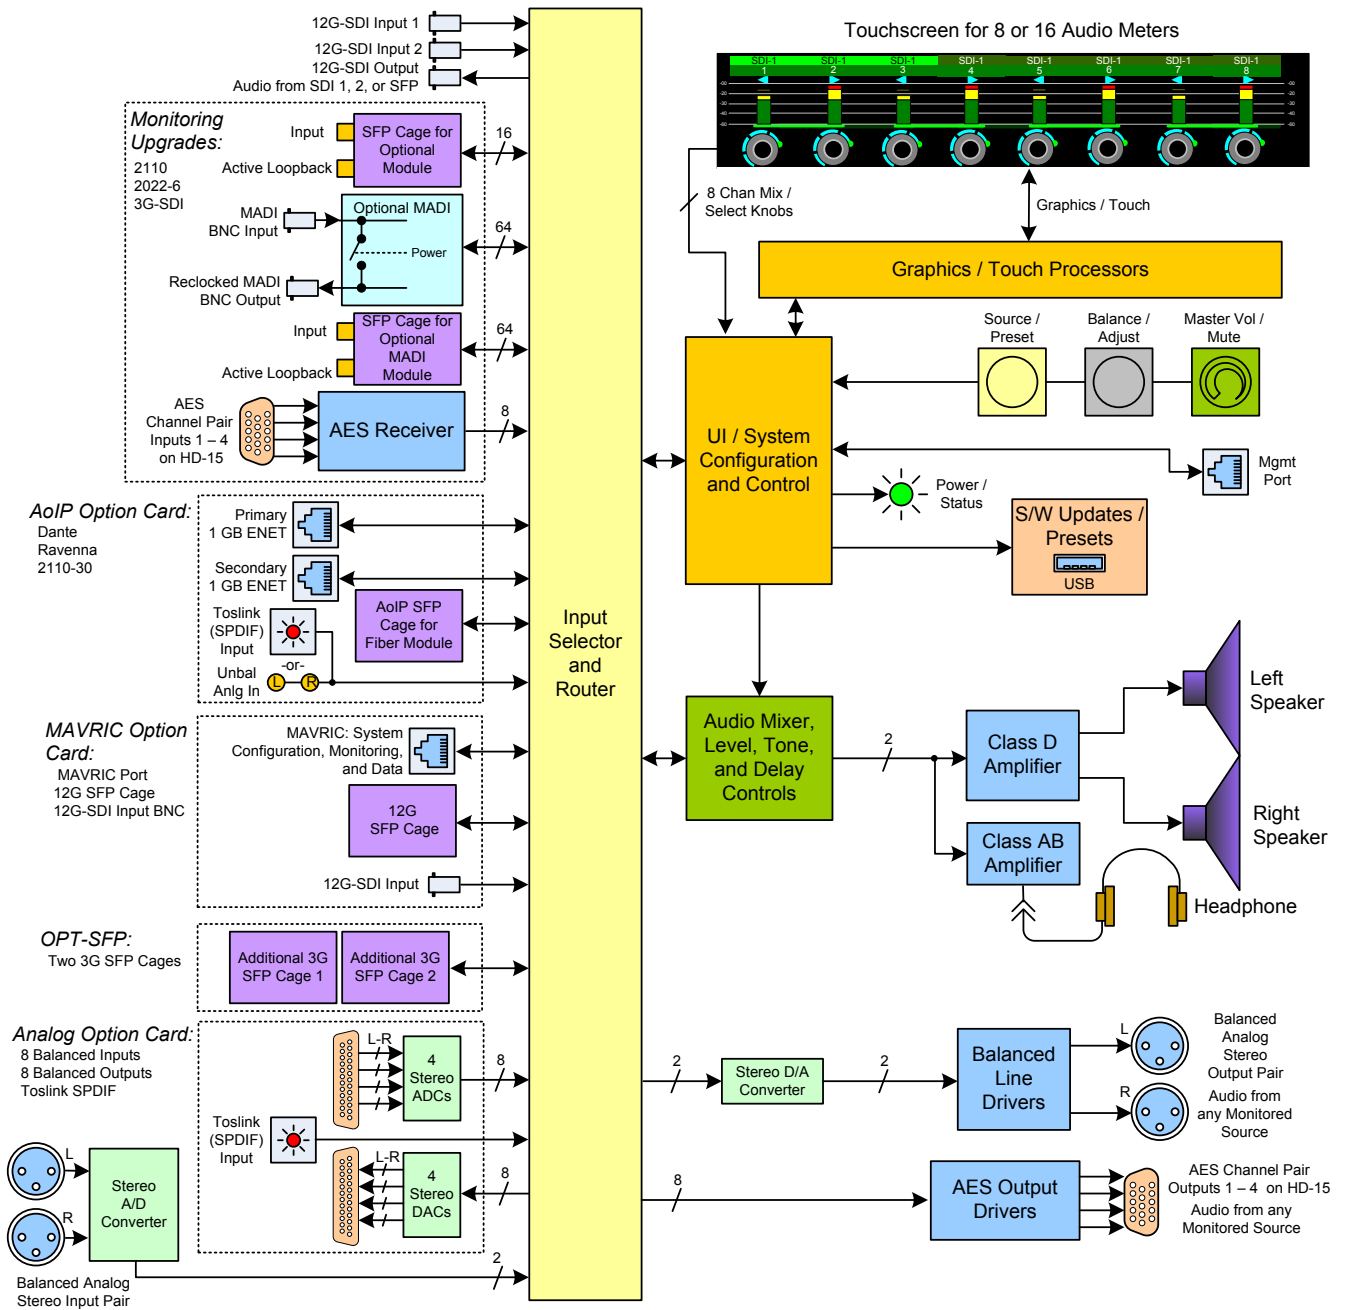

CHAPTER 4: The *iAM1-MIX8-12G* Web GUI

The self-contained *iAM1-MIX8-12G* Web GUI allows you to customize the configuration of the *iAM1-MIX8-12G* to suit your needs. If the default configuration suits your needs and you prefer to use it that way, then you do not need to use the *iAM1-MIX8-12G* Web GUI.

The *iAM1-MIX8-12G* Web GUI also allows you to have a remote view of the Meter Screen. Refer to the Audio Meters section in this chapter.

Web Browser / Control Device

Any web browser application running on any networked device such as desktop or laptop computer, tablet or smart phone can be used with the *iAM1-MIX8-12G* Web GUI.

Tablets with no network connector need to be linked to a copper LAN through a Wi-Fi adapter.

Although they can be used, smart phones are not recommended because their smaller screen size would require more scrolling, making operation challenging.

The Chrome[®] web browser is recommended for speed and compatibility.

First Time IP Assignments


The *iAM1-MIX8-12G* can operate with a static (fixed) or dynamic (DHCP) IPv4 address. The default address will be **169.254.1.x** where x depends upon the MAC address of the unit, when received from the factory or when switched from DHCP to static addressing mode. The exact IP address is found on the **System IP Address** line of the **System Details** screen of the *iAM1-MIX8-12G*. There two basic types of connections that may be used to connect the *iAM1-MIX8-12G* to a web browser, a **Peer-to-Peer Connection** or a **Network Connection**.

Peer-to-Peer Connection

The most straightforward way to connect the *iAM1-MIX8-12G* to a web browser, free of possible network conflicts, is to establish a static peer-to-peer connection between the setup computer and the *iAM1-MIX8-12G*. A 10/100/1000 MHz Ethernet switch may be used in between, but is not required.

Figure 4-1 shows an example of suitable address settings for the host computer in a Windows control panel. For Peer-to-Peer the IP address of windows should be in 169.254.1.x domain. The exact IP address is found on the **System IP Address** line of the **System Details** screen of the *iAM1-MIX8-12G*.

Figure 4–1: Host IP Settings

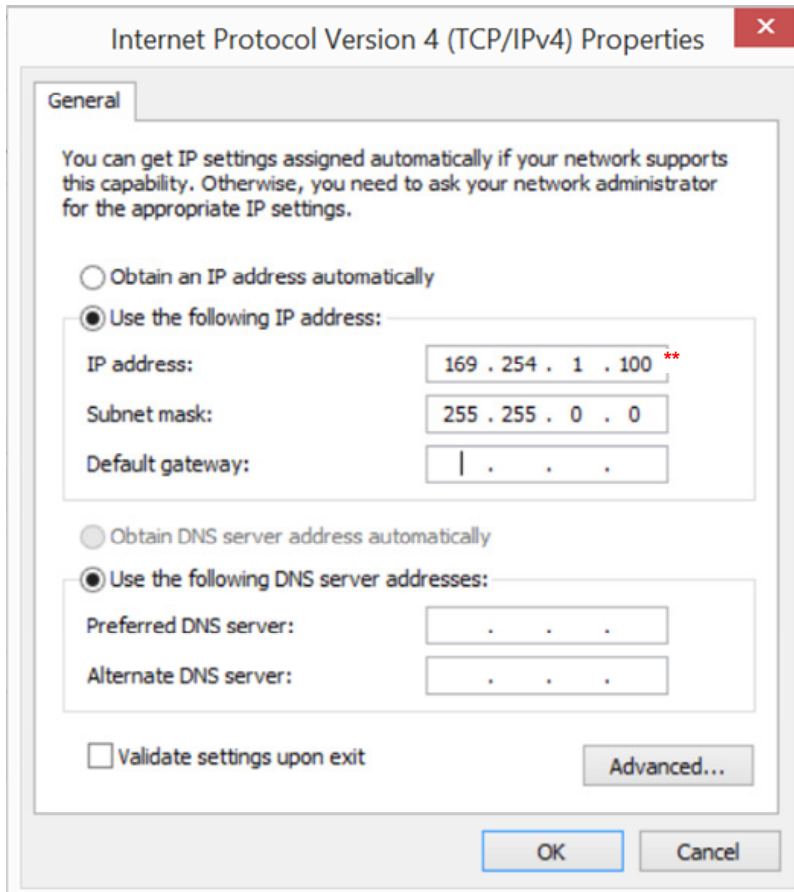

** The actual IP address to enter here is located on the System IP Address line of the System Details screen.

Close the control panel and reboot the host computer after making an IP address change to be sure the change takes effect. **Either reconnect to the installed network or continue with this direct connection to access the iAM1-MIX8-12G Web GUI.**

Network Connection

When connected to a network, the iAM1-MIX8-12G address will need to be changed to another address in order to be compatible with the address assignments for that particular network. Immediately after the host setup is complete, change the iAM1-MIX8-12G's address. Make the corresponding address, mask and gateway changes in the iAM1-MIX8-12G **Network Setup** page. Refer to the **Network Setup** section which follows.


Otherwise set the iAM1-MIX8-12G to DHCP address mode by checking the box for 'Use DHCP?' in Network Setup and have your IT administrator assign rights and settings for operation on the network. Allow enough time for your network's DHCP server to recognize a new network device and assign an address after booting.

The iAM1-MIX8-12G uses link local addressing for its internal network, so no accommodation for this need be made in the network.

Network Setup

Make network **IP Address** changes for the local *iAM1-MIX8-12G Management (MGMT) Port* here.

Figure 4–2: Set IP Addresses

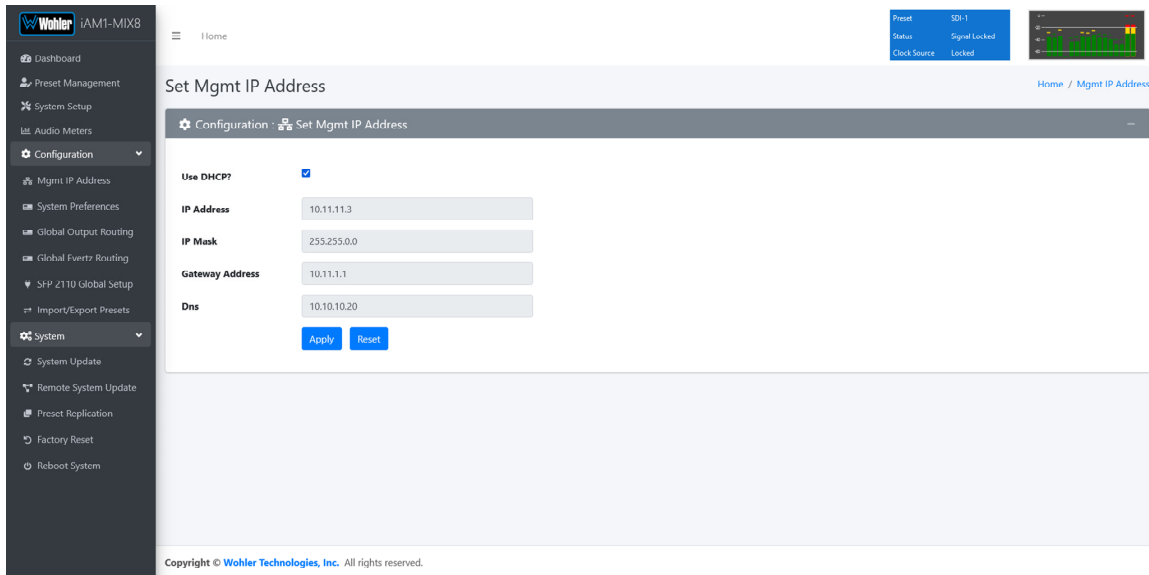


The procedure for changing the IP Address information is as follows:

1. **Use DHCP?** Check this box if your network has a DHCP server and you want to use dynamic addressing. Otherwise, you must enter static IP address entries in the four fields which follow.
2. **IP Address:** Enter the network address. Leading zeroes are not required.
3. **IP Mask:** This should usually be 255.255.255.0 unless your network can work across multiple subnets.
4. **Gateway Address:** This should usually be the same domain and subnet address numbers as the IP Address, but with the last octet being .1.
5. **DNS-nameserver:** A default value is shown for reference only. DNS is not normally required for basic static IP network configurations to work. Your IT administrator will specify a value to work with mixed static/dynamic network setups.
6. **Apply:** When you have made all of the necessary entries, press **Apply** to apply the changes.
7. **Reset:** If you should start to make changes and then change your mind about making them, press **Reset** to return the settings back to where they were.

Dashboard

Throughout the Web GUI, pages are a click or two away using the list of selections on the left side. The **Dashboard** page includes a live Front Panel Controls widget. All knobs and buttons are fully interactive from the web UI. It also shows all of the available Preset configurations at a glance. The *iAM1-MIX8-12G* allows you to assign Presets to particular groups. In Figure 4-3, two groups, Operator-1 and Operator-2 are shown.

Figure 4-3: Dashboard Preset Overview

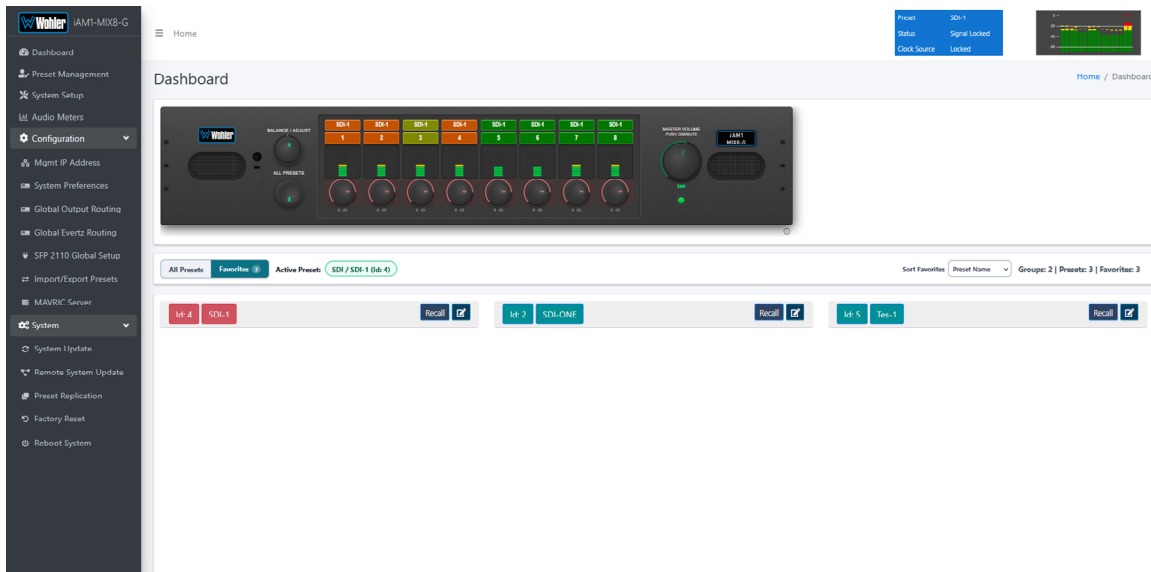

How to use the Front Panel Controls widget :

1. Click any knob or button on the Front Panel Controls to select and control it.
2. Scroll using a mouse wheel or Arrow Keys to rotate the selected knob.
3. Click or press the Space Bar to press the selected knob to mute, unmute, or center balance.


Supported actions:

- **Channel Gain Knob:** Rotate to adjust the gain. Press to mute or unmute the channel.
- **Balance Knob:** Rotate to adjust the balance. Press to center the balance.
- **Master Volume Knob:** Rotate to adjust the master volume. Press to mute/unmute all of the channel audio.
- **Meter labels (Top/Bottom):** Click to mute or unmute the channel. Hover over the meter label to see the full label text.

To view all of the Presets within a group, click on that group.


In Figure 4-4, it can be seen that there are five Presets in the Operator-1 group and no Presets in the Operator-2 group. The currently selected active Preset for local operation is shown in red. In Figure 4-4, this is the Preset named SDI-1.

Figure 4-4: Dashboard Preset Recall / Edit

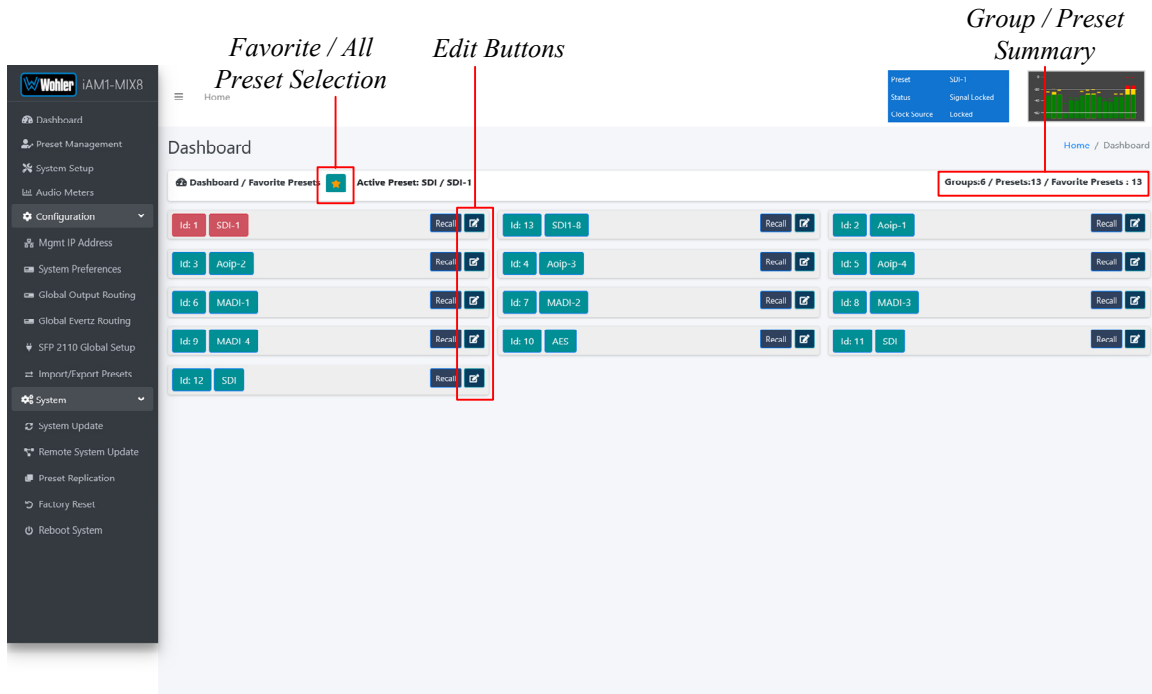

Copyright © Wohler Technologies, Inc. All rights reserved.

A Group / Preset Summary is shown in the upper right of the screen. This enables you to see the total number of Groups, Presets and Favorite Presets in the iAM1-MIX8-12G.

Use the  button, as shown in Figure 4-4, to toggle between Favorite Presets or All Presets.

Click the **Recall** button to recall a Preset. To Edit a Preset, click the **Edit** icon, as shown in Figure 4-4, to the right of the associated **Recall** button.

After clicking the **Preset Edit** button, the buttons shown in Figure 4-5 will appear on the Dashboard screen. Clicking a **Group Edit** button will cause the buttons in Figure 4-6 to appear.

Figure 4-5: Dashboard Preset Edit



The Edit options for a Preset are:

1. **Delete Preset:** Remove the Preset from the system. **Do Not delete the**

currently active Preset.

2. **Rename Preset:** Rename the Preset, but keep all of its other characteristics.
3. **Make Favorite:** Make this Preset a favorite. This can be done for frequently used Presets.
4. **Exit Edit:** Click to finish this edit.

Figure 4–6: Dashboard Group Edit




The Edit options for a Group are as follows:

1. **Delete Group:** Delete this Group and all of the Presets it contains.
2. **Rename Group:** Rename this Group, but keep all of its other characteristics.
3. **Exit Edit:** Click to finish this edit.

Audio Meters

Click on **Audio Meters** to remotely display the audio meters of the *iAM1-MIX8-12G*. This display is shown in Figure 4-7. Also displayed is the name of the source that the meters are displaying. In Figure 4-7, this is SDI/BNC-1.

Figure 4–7: Audio Meters Display

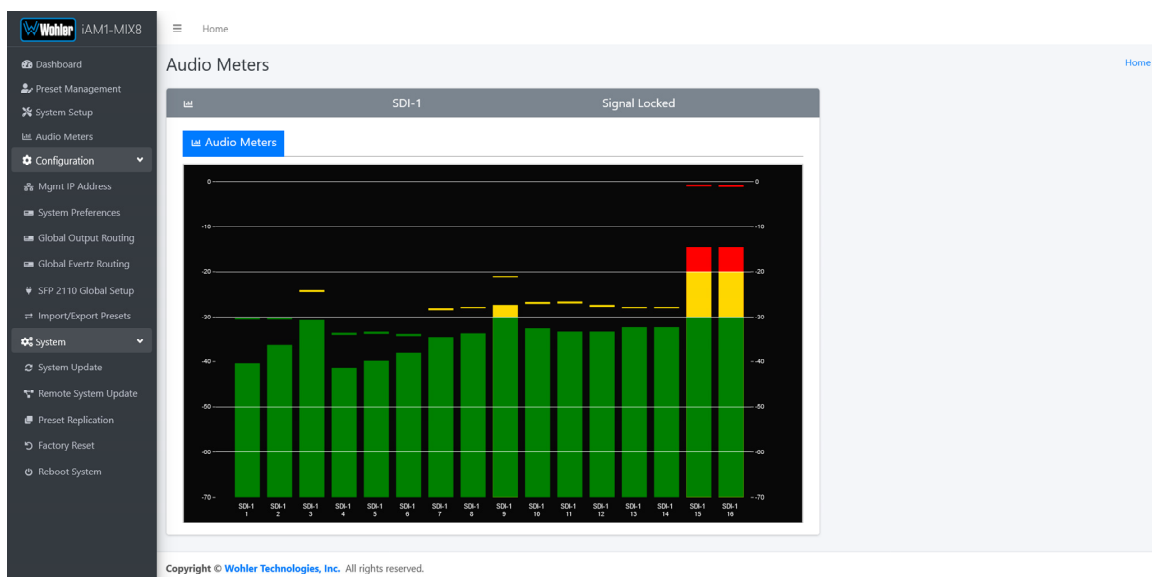


System Preferences

Click on **System Preferences** to find the General Settings, Unit Settings, Phase Indicator Configuration, Front Panel Configuration, and GPI Action Actions tabs. These are as shown as follows:

General Settings

The General Settings tab contains several system-wide settings. This tab is shown in Figure 4-8.

Figure 4-8: System Audio Clock Reference Tab

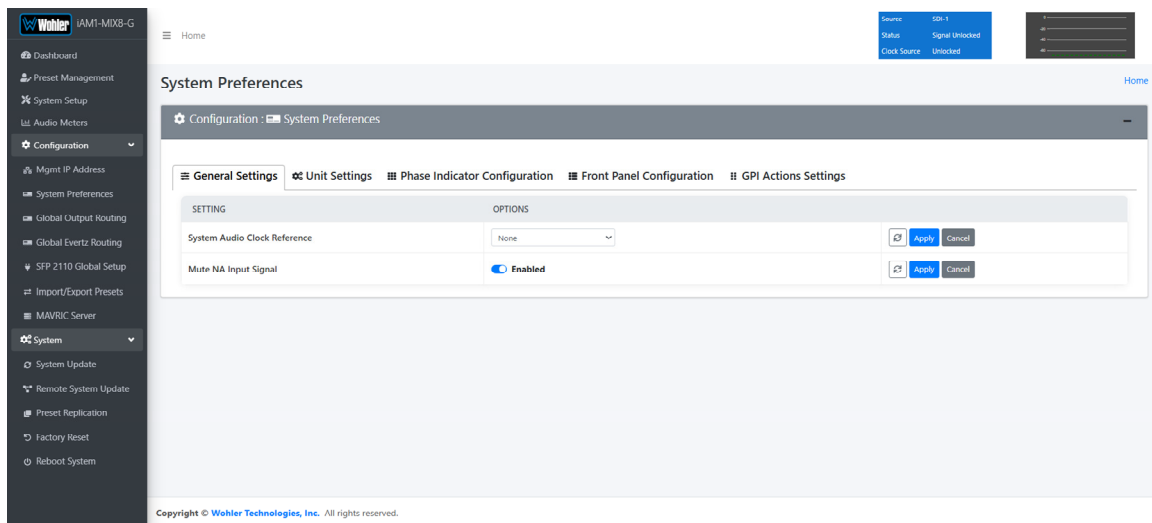


The settings available on this tab are as follows:

1. **System Audio Clock Reference:** This setting provides a way to set the global clock source for the unit. This setting will be used whenever a source is selected using the **Source Select** knob or the **Source Select Menu**. If the System Audio Clock Reference is set to **None**, then the currently selected source acts as the Clock Reference. This System Audio Clock Reference setting can be overridden by the optional System Clock Reference setting in the Preset Management menu when the Preset is chosen.
2. **Mute NA Input Signal:** If this option is enabled, sources that do not contain an input signal are automatically muted, preventing noise that could interfere with other audio monitoring.

Unit Settings Tab

This adjusts the basic system settings for the iAM1-MIX8-12G, as shown in Figure 4-9.

Figure 4-9: Unit Settings Tab

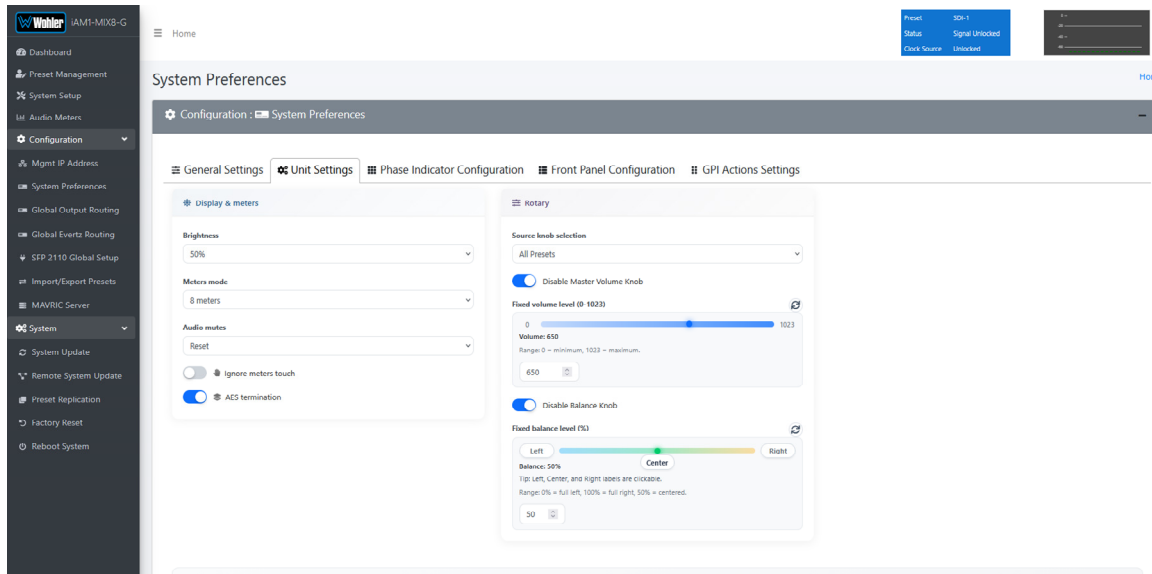


The settings available on this tab are as follows:

1. **Brightness:** The percentage of display brightness may be adjusted to accommodate the light level in the room.
2. **Meter Mode:** Either 8 or 16 meters may be selected. When 8 meters is selected, each mix knob controls one channel. When 16 meters is selected, the channels are displayed as stereo pairs and each mix knob controls one pair.
3. **Audio Mutes:** This selection lets you reset all of the audio mutes in effect.
4. **Source Knob Selection:** This setting determines the function of the **Source/Preset** knob. It may be set up to select from the audio sources, from among all Presets, or from among all Favorite Presets.
5. **Disable Master Volume Knob:** Since each channel or channel pair has its own Level knob, you may choose to disable the **Master Volume** Knob. If this knob is disabled, this setting allows you to set the fixed level.
6. **Disable Balance Knob:** You may choose to disable the **Balance/Adjust** knob, if it is rarely used. If this knob is disabled, you may click a fixed Left, Right or Center setting.

Phase Indicator Configuration

The Phase Indicator Configuration tab is as shown in Figure 4-10. It allows you to select which channel pairs will receive a phase meter on the **Metering Screen**. Generally, it is useful to monitor the relative phase of stereo pairs. However, sometimes each channel of a pair is unrelated to each other. This can be because the channels are used to convey two independent monophonic signals or that one channel may be a Center channel and the other may be a Low Frequency Effects channel. In these instances, the Phase Indicator would almost always indicate an out of phase condition. Because this would be a needless distraction to the operator, switches are provided on this tab to individually turn phase monitoring for each channel pair on or off. **Select All** and **Reset All** buttons are also provided.

Figure 4-10: Phase Indicator Configuration Tab

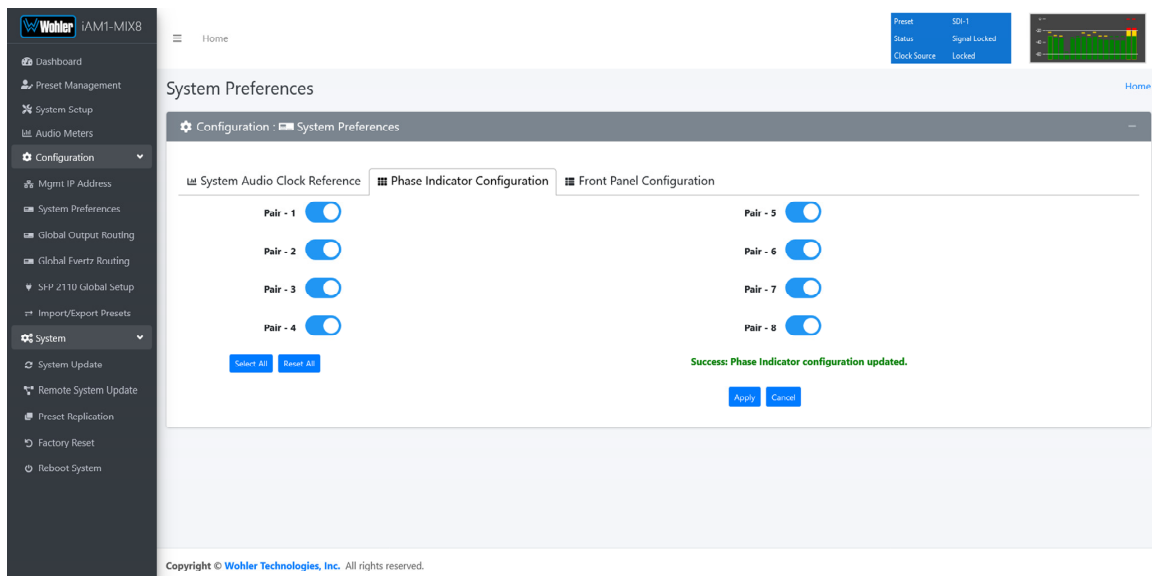


When you have finished making the settings click **Apply** to save them or click **Cancel** to discard them.

GPI Action Settings

A software license must be installed for the GPIO port to function. Refer to the **System Setup** section in Chapter 4 to install software licenses. The function of each input pin of the GPIO connector shown in Figure 2-2 is defined on this screen.


Figure 4-11: GPI Action Settings Screen

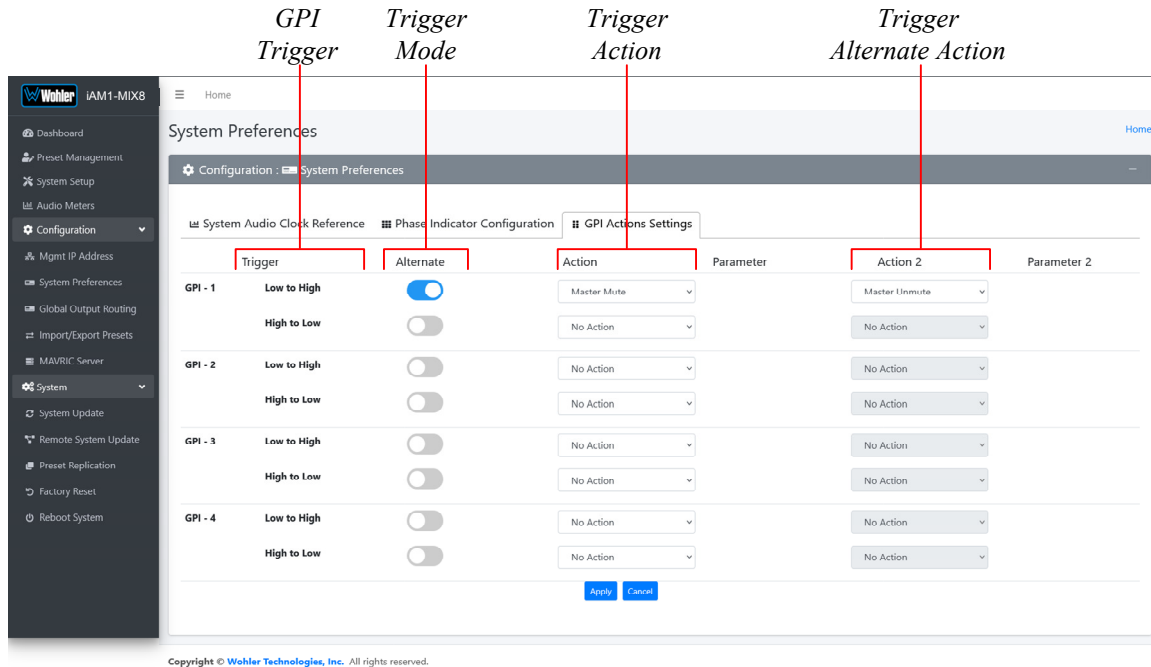

The triggers and associated actions shown in this figure are as follows:

GPI Trigger: Separate actions may be defined for Low to High and for High to Low input voltage transitions.

Trigger Mode: If desired, each input voltage transition may be responded to as either steady state or Alternate Action. For example, if a Low to High transition were set to control Muting of the Audio and the Alternate Action switch were turned off, then audio would only be muted while the GPI voltage is applied and unmuted when the GPI voltage is removed. If the Alternate switch were turned on, then alternate applications of the GPI voltage would alternately mute and unmute the audio:

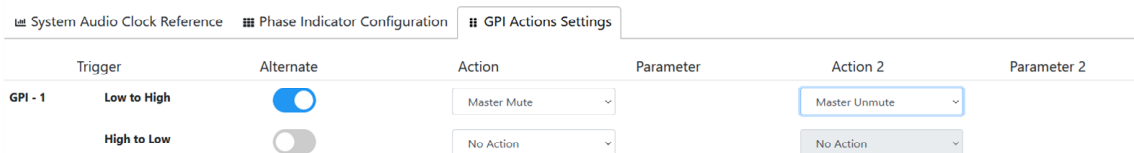

Note that if the Alternate GPI Trigger Action is chosen for one GPI transition, then Action and Action 2 for the other transition on the same GPI must be set to No Action to avoid conflict. This is shown in the above image.

Trigger Action: A pull down menu allows you to select one of seven possible actions that may be triggered by GPI voltage:

No Action: The GPI trigger will have no effect. This is the default setting and may be used when that particular GPI is left disconnected.

Preset Recall: Triggering the GPI will recall a Preset. The Parameter will define which Preset will be recalled.

Source Select: Triggering the GPI will select a Source for monitoring. The Parameter will define which Source will be selected.

Master Mute: Triggering the GPI will mute the monitoring speakers.

Master Unmute: Triggering the GPI will unmute the monitoring speakers.

Dim Audio: Triggering the GPI will dim the monitoring speakers.

UnDim Audio: Triggering the GPI will undim the monitoring speakers.

System Audio Clock Reference Phase Indicator Configuration **GPI Actions Settings**

	Trigger	Alternate	Action	Parameter	Action 2	Parameter 2
GPI - 1	Low to High	<input type="checkbox"/>	No Action		No Action	
	High to Low	<input type="checkbox"/>	No Action		No Action	
GPI - 2	Low to High	<input type="checkbox"/>	No Action		No Action	
	High to Low	<input type="checkbox"/>	No Action		No Action	
GPI - 3	Low to High	<input type="checkbox"/>	No Action		No Action	
	High to Low	<input type="checkbox"/>	No Action		No Action	
GPI - 4	Low to High	<input type="checkbox"/>	No Action		No Action	
	High to Low	<input type="checkbox"/>	No Action		No Action	

Apply Cancel


Trigger Alternate Action: If the Alternate Action switch is turned on, the pull down menu of the Trigger Alternate Action 2 selection will allow you to define what happens with every other GPI Trigger. The choices are the same as those listed for the Trigger Action above.

Note again that if the Alternate GPI Trigger Action is chosen for one GPI transition, then Action and Action 2 for the other transition on the same GPI must be set to No Action to avoid conflict.

Front Panel Configuration Tab

To prevent accidental or unauthorized changing of critical settings in the local product menus, it is possible to restrict access. The Front Panel Configuration Tab entry screen is shown in Figure 4-12. To proceed, you must enter the correct Passcode. If no Passcode has been set, the default Passcode is 0-0-0-0.


Figure 4-12: Front Panel Configuration Tab – Passcode Entry

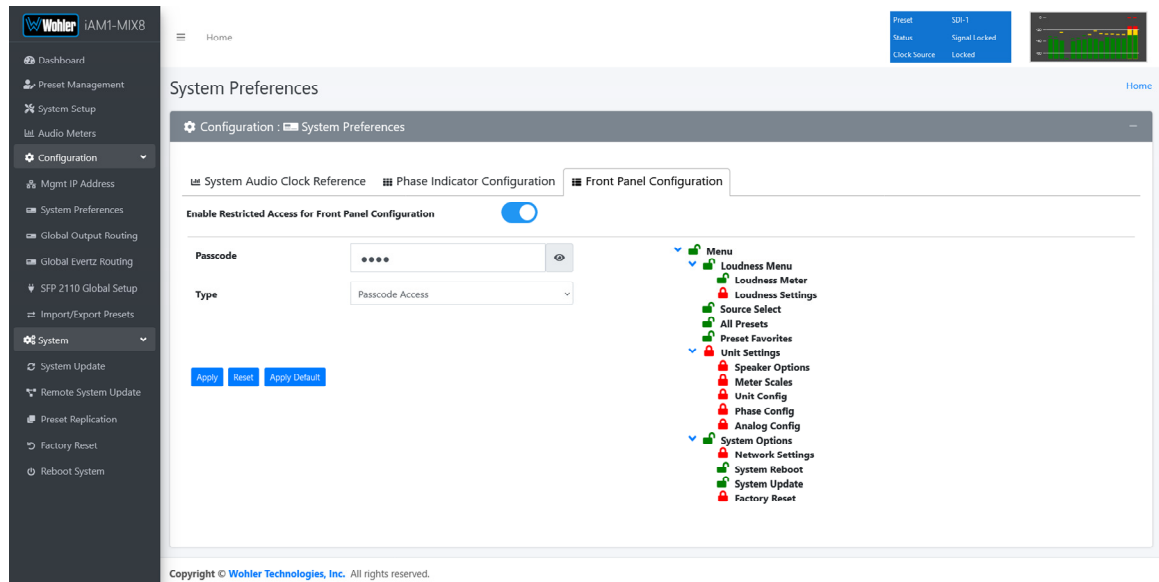

If an incorrect Passcode is entered, you will be denied access to this screen. Click the **Continue** button to try again. If you have forgotten the Passcode, this can be remedied by performing a Factory Reset. Unfortunately, this will also erase all of the menu settings. You may also contact Wohler Technical Service for help.

When you have successfully entered the Passcode, the Passcode Settings screen will appear, as shown in Figure 4-13.

Figure 4-13: Front Panel Configuration Tab

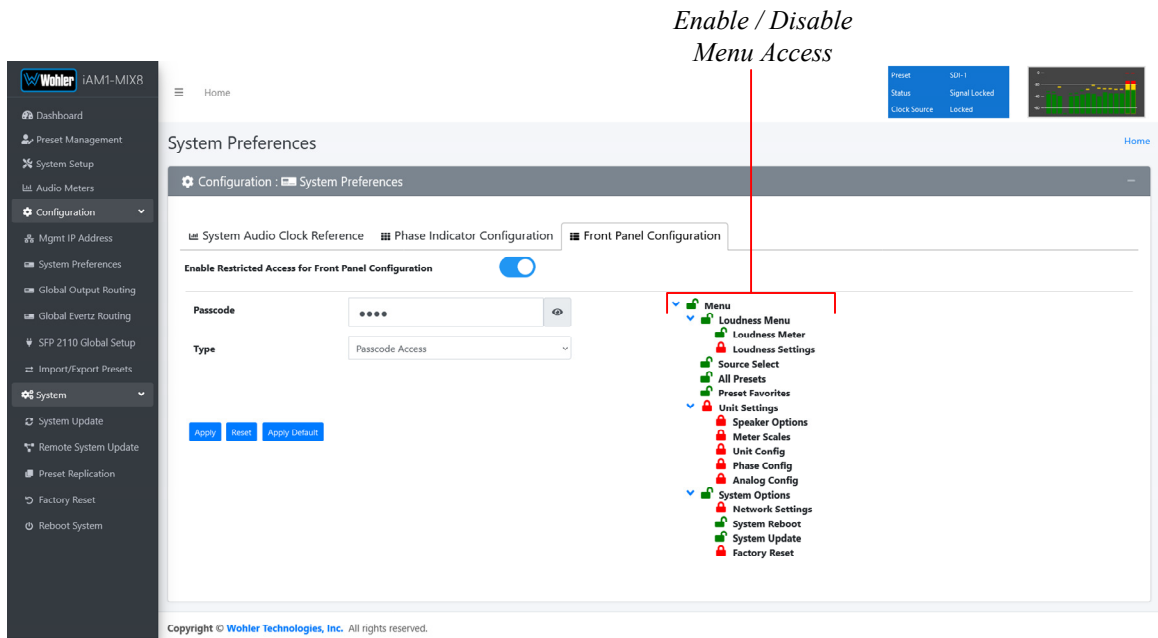


The functions on this screen are as follows:

Enable Restricted Access for Front Panel Configuration: This switch will turn ON or OFF protection or blocking of any local product menus, except for the Passcode Settings menu, which is always Passcode protected.


Passcode: You may enter a new Passcode in this field. The Passcode can be any 4-digit number. Be sure to save the Passcode in a safe place for future reference.

Type: Select the type of disabled button appearance on the local product menus using the **Type** button. The choices are:

Passcode Access: The Passcode protected function buttons include a small orange padlock icon within the buttons. This is shown below. These buttons can only be accessed using the correct Passcode.

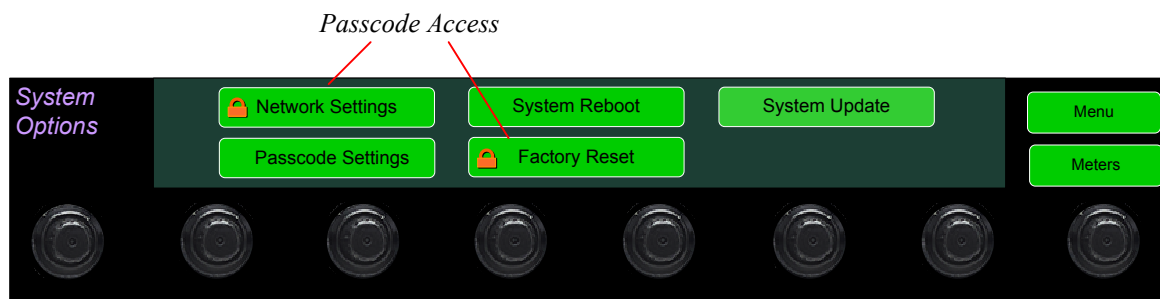

No Access: If the function buttons are protected by No Access, the buttons are grayed out and non-functional, as also shown below. These buttons cannot be accessed.

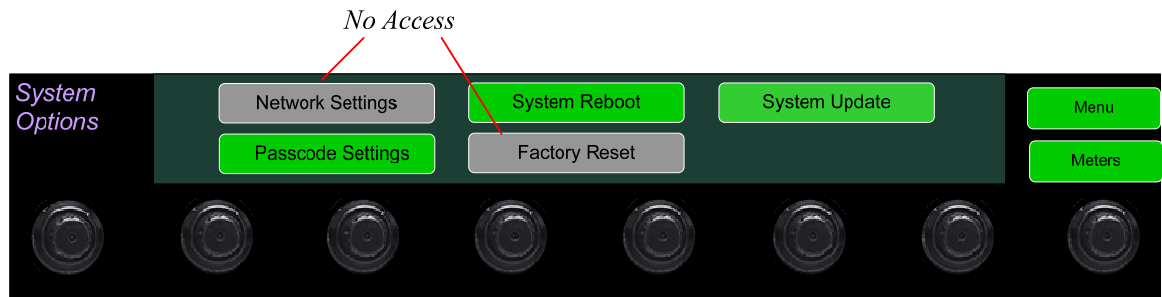

Apply Default: Clicking this button returns the settings in this screen to the factory default values. The Passcode becomes 0-0-0-0.

Reset: Clicking this button undoes any settings you have made on this tab.

Enable / Disable Menu Access: This section provides a nested chart of the local menus that exist in the product. You may set which menus are affected by restrictions. Click any menu shown to change it between affected (red icon) and unaffected (green icon).


Apply: When you have completed the desired settings in this tab, click **Apply** to put them into effect.

Preset Management

Presets are monitoring configurations that can be composed of channels from multiple sources and displayed on the meters in any order. Presets should be set up to allow operators to quickly shift between setups for monitoring. The **Preset Management** screen contains selections of all of the details for a Preset, and is largely arranged in a matrix format connecting input channels to monitoring channels. The screen is shown in Figure 4-14.

Note that the **Global Quartz Routing** tab is explained later in this Chapter in the **Global Evertz Routing** section.

Figure 4-14: Configure Presets

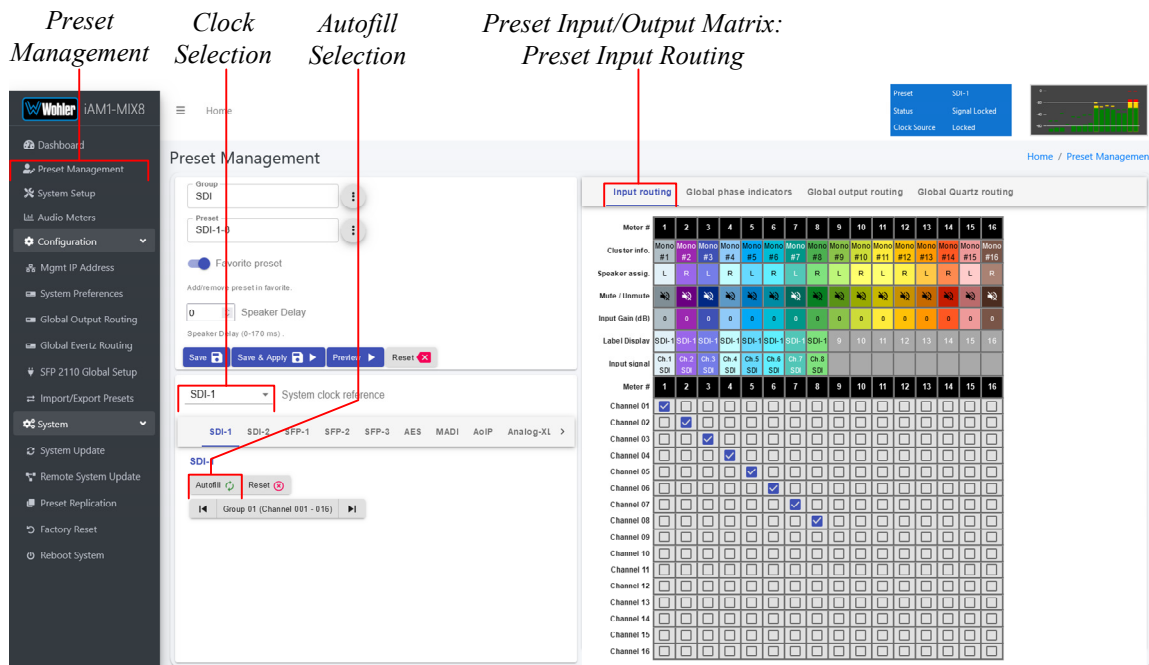

1. **Preset Configuration:** You may create a new Preset, adjust an existing Preset, or create a new Preset from an existing Preset:


- **To create a new Preset,** enter the name for the new Preset in the field to the left of the word **Preset**. Then make all of the settings needed and save it.
- **To make changes to an existing Preset,** select it from the pull down list, make the needed changes and save it.
- **To create a new Preset starting with an existing Preset,** first select the existing Preset from the pull down list. Next, enter the name for the new Preset and save it. Then make the needed changes and save it.

Presets may be created for any licensed inputs, even if the SFP module for an input is not plugged into its respective socket at the time. This makes it easy to swap SFP input modules without having to recreate presets after the insertion or removal of an SFP module. Note that if a licensed SFP module is not detected, such as when one is removed to be swapped, its monitoring inputs will be muted. Likewise, if the required license has not been entered

for an SFP module that is inserted, its monitoring inputs will also be muted. Refer to the **Licenses** section in this chapter to install software licenses.

2. **System Clock Reference:** There must be a system clock reference for monitoring to take place. Select a reference from the pull down list. The best choice is a stable, always present clock source locked to house sync. Second to that, use the selected input as the clock. Generally speaking, **Internal** is not the best choice.
3. **Speaker Delay:** If desired, an audio delay may be inserted ahead of the monitor speakers. This delay may range from 0 to 170 mS. Typically, delay is used to align the monitored audio with a video monitored signal.
4. **Input Selection:** Audio from any of the input sources may be applied to the monitoring scheme in any way. For example, you may have 6 channels from an SDI stream, along with 2 AES channels, and along with 2 analog channels assigned your choice of meters. A **Preset Input/Output Matrix** is provided on the lower right side of the screen to allow you to assign each channel. Simply select each input source, one at a time, and then check the boxes in the **Matrix** to apply each input channel number to a metered channel number. They do not have to be applied in any specific order. The order of assignment should be chosen to make it easy for the operator to understand. If there are more than 8 channels in a source, the desired group of 8 can also be selected from the box in the lower left of the screen.
5. **Autofill Selection:** If you simply want to map all 8 input channels to all 8 meters in the same order, click the **Autofill** button. The **Preset Input/Output Matrix** will automatically fill out. To remove all mapping, click the **Reset** button that is adjacent to the **Autofill** button.
6. **Monitoring Fewer than the Maximum Number of Channels:** There can be times when it would be more appropriate to monitor fewer than the maximum number of channels that the iAM1-MIX8-12G is capable of monitoring. For example, you may only need an iAM1-MIX8-12G to monitor only 8 channels. To do this, create a Preset that maps only the needed channels to the display and outputs. This will de-clutter the screen, only showing the needed channels.

Figure 4-14 shows an iAM1-MIX8-12G with only 8 of the 16 channels mapped. Note that this could be any 8 channels, not just the first 8 as shown. When this Preset is selected, the meter screen will automatically change to show only 8 meters, and it will appear as follows:

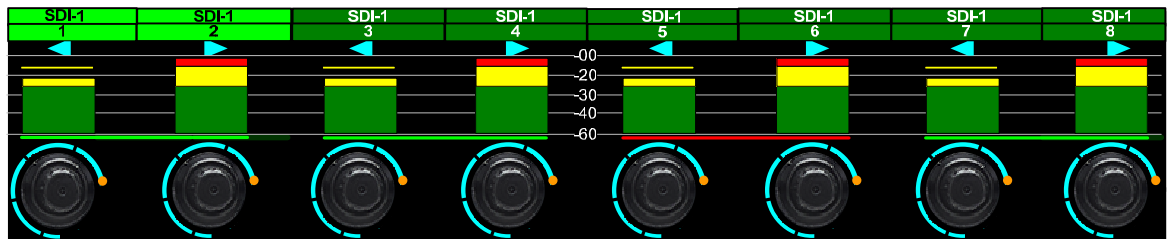


7. **Cluster Info:** The iAM1-MIX8-12G does not support clusters of channels. Each channel is an individual. Therefore the Cluster Info setting is always set to Mono.
8. **Speaker Assign:** Speaker assignments are made automatically when a

cluster is set. However, it can be that in an actual signal, the channel assignments may be different than what the automatic assignment assumes. A speaker assignment adjustment is provided for each channel, should you need to override the automatic settings. Clicking a **Speaker Assign** button on a channel opens a box that lets you change the current setting.

9. **Mute/Unmute:** A **Mute/Unmute** control is provided for each channel, although the adjustment will affect all channels in the Cluster. This allows the operator to just see the meters for certain channels and not hear the audio. This is an alternate action control.
10. **Input Gain (dB):** The Input Gain Trim of each input channel may be adjusted from -60dB to +12dB. The default setting is 0dB. The Input Trims may also be adjusted from the controls on the front panel of the iAM1-MIX8-12G and these changes will appear on this screen.
11. **Label Display:** The default Label Display on each channel on the iAM1-MIX8-12G screen is the consecutive number of each channel's appearance on the display. It may be changed on this screen within the limits of the space for it on the iAM1-MIX8-12G screen.


The color of each label may also be selected to allow certain channels to be more easily distinguished from others. Colors may be selected for both muted and unmuted states. For example, the color for a muted channel may be selected as the same color as the unmuted channel, only darker, giving the appearance of labels lighting up when they are unmuted. Contrasting text colors may also be chosen. Refer to Figure 4-15. The label colors are stored per Preset and recalled on Preset load.

Figure 4-15: Label Color Setting

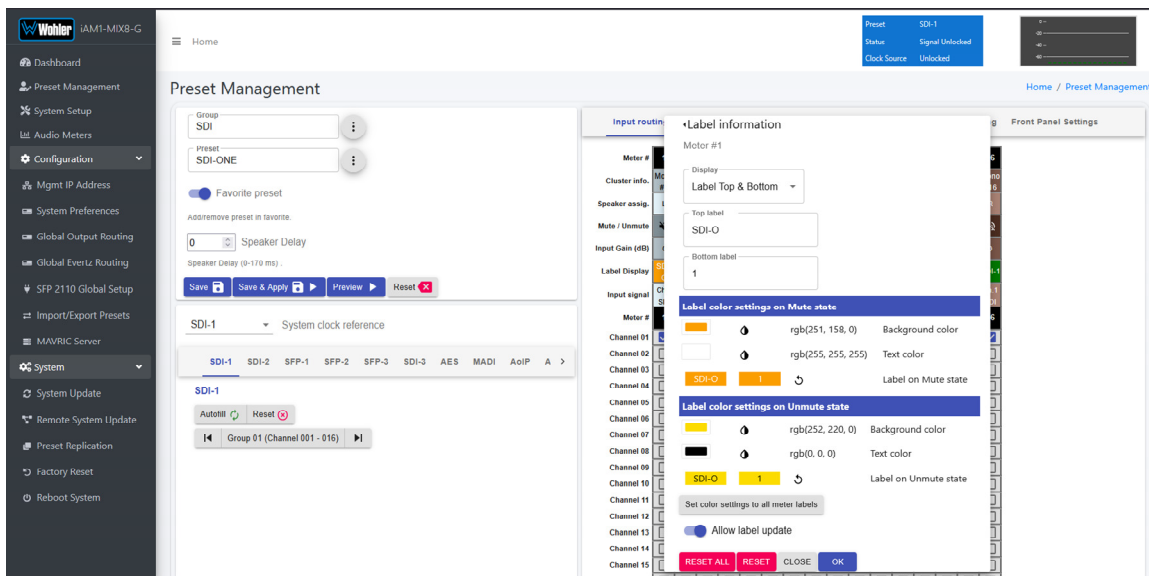


12. Front Panel Settings tab is shown in Figure 4-16. You may use the functions on this tab to enable or disable the front panel **Volume** control knob and adjust the setting to which it will be fixed. You may also enable or disable the front panel **Balance** control knob and adjust the setting to which it will be fixed. Lastly, you may choose to retain or not retain mutes when a Preset is updated.

Figure 4-16: Front Panel Settings Tab

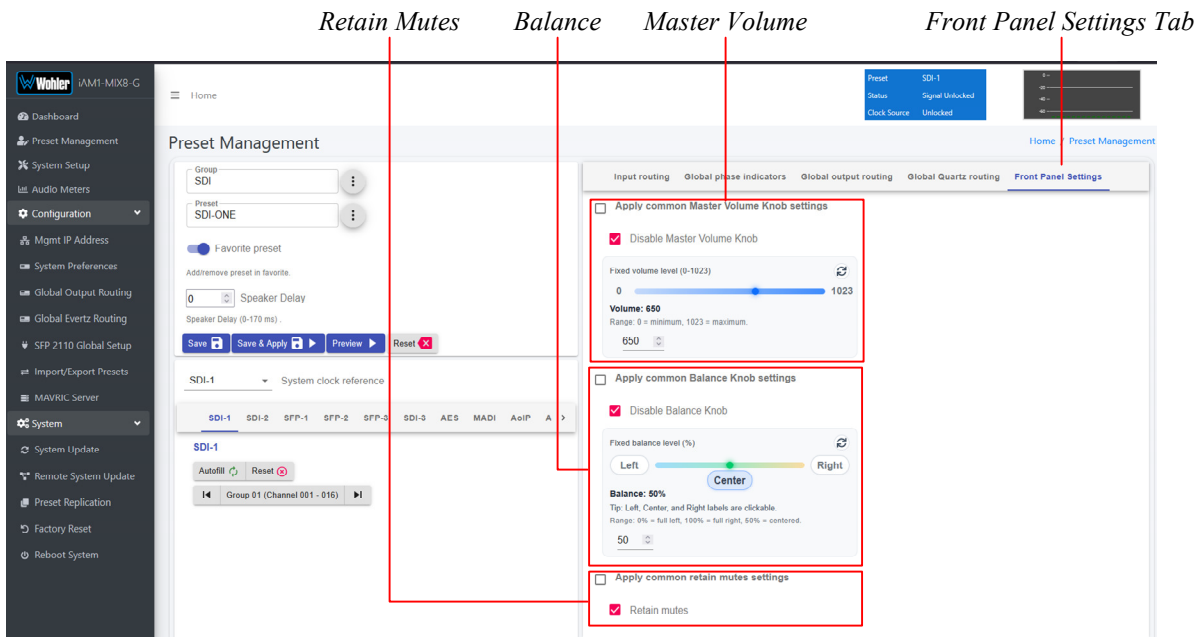

13. The **Output Routing** tab is shown in Figure 4-17 when the OPT-OUTPUT-ROUTING capability was not purchased and licensed. This tab shows how signals from the inputs are routed to the outputs. This section is grayed out, indicating that it allows you to view, but not change this default routing.

Figure 4-17: Default Output Routing

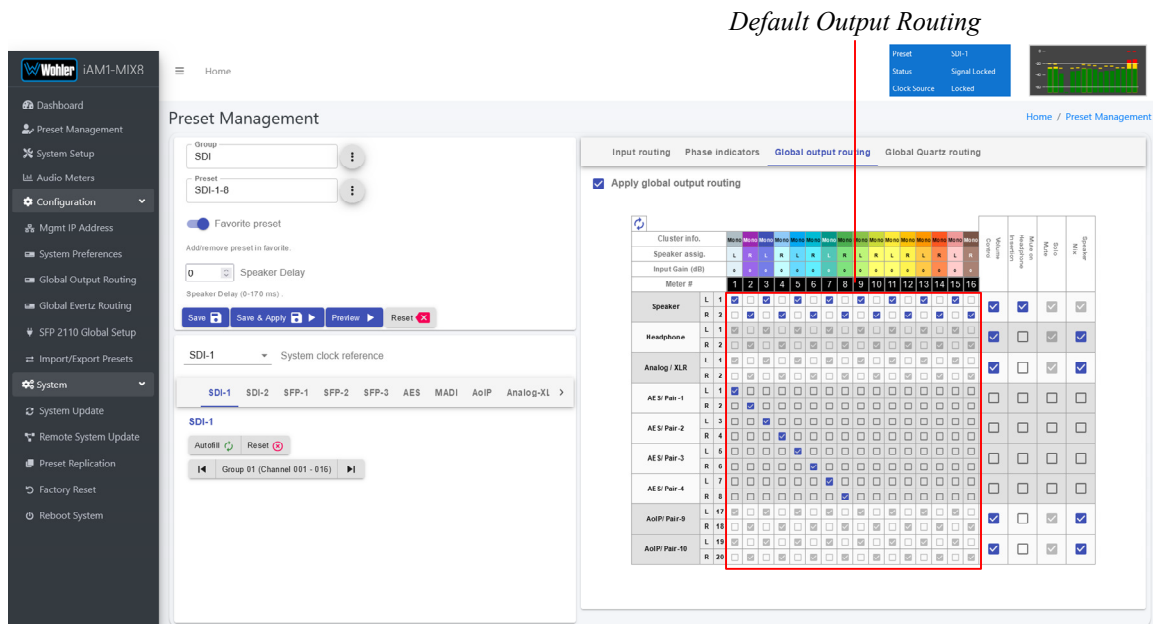


However, if the OPT-OUTPUT-ROUTING license is installed, this tab allows you to determine exactly which input channels are routed to which outputs. It then appears as shown in Figure 4-18. This very flexible capability allows you to route signals according to Preset or as a default for the whole system. Refer to the **Global Output Routing** section in this chapter to learn the

function of each of the checkboxes and of the matrix in this tab.

To set up a different input to output routing scheme for the Preset you are creating, click the **Global Output Routing** tab and uncheck the **Apply Global Output Routing** checkbox. You may then adjust the output routing as you desire on this tab and it will only apply to this Preset.

Figure 4-18: Output Routing Preset Tab

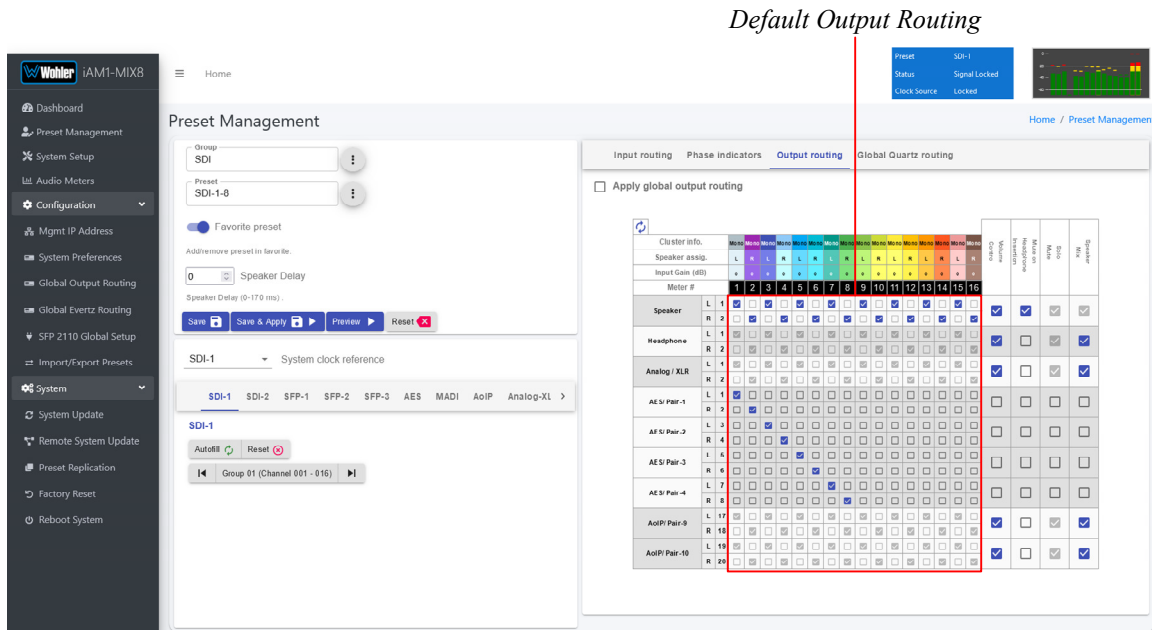

14. When you have finished creating a Preset or making changes to a Preset, either click the **Save** button to save the Preset, click the **Save & Apply** button to save the Preset and make it the current Preset, or click the **Reset** button to discard the changes just made. These selections are shown in Figure 4-18.

Output Routing

The **Output Routing** licensed feature (OPT-OUTPUT-ROUTING) allows channels to be routed or combined and routed in custom ways to various destination outputs. **Output Routing** is applied to:

1. Signals monitored using "Input Source select" from the Front Panel,
2. Presets that have been created to apply the Output Routing.


Any change to the routing will affect the Presets that have "Apply Output Routing" selected. For example, multiple channels of a 7.1 channel program can be combined and directed to the left or right internal speakers. Six or eight channels could be directed to the AES outputs, which could feed an external surround sound system. Contact Wohler Sales to purchase the license for the OPT-OUTPUT-ROUTING feature.

If **Output Routing** is not licensed, then any of the inputs can be monitored in stereo or mono only through the internal speakers. The headphone jack, the analog XLR outputs, and the first AES output will follow whatever is directed to the

speakers.

When licensed, select **Global Output Routing** under **Configuration**. This will display the **Global Output Routing** screen. This screen contains a matrix of checkboxes which are an easy way for you to set up the wide variety of input to output routing and mixing capabilities. The **Global Output Routing** screen is shown in Figure 4-19.

Figure 4-19: Global Output Routing Option

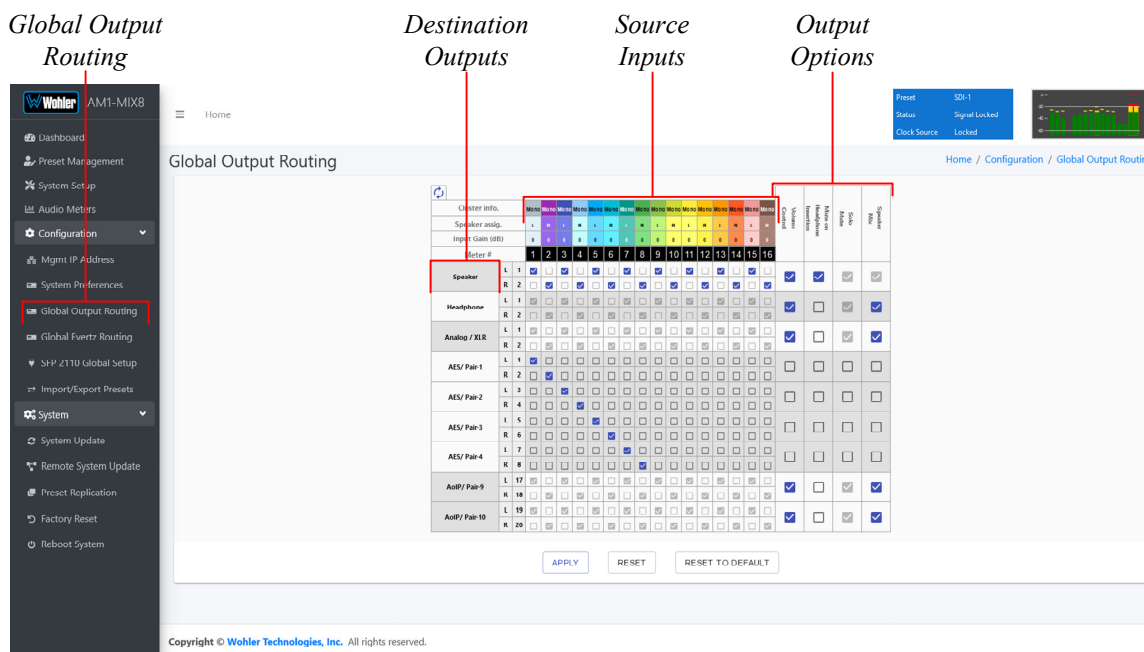

Destination Outputs

On the left of the **Global Output Routing** screen are listed the Destination Outputs. These are the outputs to which any input can be routed. They are as follows:

1. **Speaker/Headphone:** Selected inputs will be sent to the left and right speakers. The default routing is set as per the Speaker Assignment, left channels are sent to the left speaker and right channels are sent to Right speaker.
2. **Analog XLR:** Selected inputs will be mixed to the left and right channels and played through the two Analog XLR Outputs.
3. **AES/Pair-1:** Selected inputs will be mixed to the left and right channels and played through the AES Pair 1 Output.
4. **AES/Pair-2:** Selected inputs will be mixed to the left and right channels and played through the AES Pair 2 Output.
5. **AES/Pair-3:** Selected inputs will be mixed to the left and right channels and played through the AES Pair 3 Output.
6. **AES/Pair-4:** Selected inputs will be mixed to the left and right channels and played through the AES Pair 4 Output. The four AES outputs can be used together to output, for example, 5.1 or 7.1 surround channels to an external

surround sound monitor system.

7. **AoIP/Pair-9 (DANTE / RAVENNA)**: Selected inputs will be mixed to AoIP transmit channels 17 and 18. Note that configuration for channels 1 – 16 is not supported. Use a Dante Controller or Aneman/Zman web interface to route these channels appropriately.
8. **AoIP/Pair-10 (DANTE / RAVENNA)**: Selected inputs will be mixed to Channel 19 and Channel 20. Use a Dante Controller or Aneman/Zman web interface to route the remaining pairs appropriately.

Source Inputs

The source inputs which may be routed are described in this section.

1. **Cluster Information**: Cluster information show type of cluster and cluster name.
2. **Speaker Assignment**: Speaker assignment can be used to configure to which speakers the audio is routed to. The possible options are:
 - L** Left
 - R** Right
 - C** Center
 - LFE** Low Frequency Effects
 - Ls** Left Surround
 - Rs** Right Surround
 - Bsl** Back Surround Left
 - Bsr** Back Surround Right
 - S** Mono Surround
3. **Input/Output Matrix**: By checking the various boxes in this matrix, any input channels can be freely routed to any output channels. This flexible channel assignment is called a **Free Mix**. However, when the **Speaker Mix** box is checked in the **Output Options** section, the associated row within the matrix is automatically set to the speaker mix and the checkboxes are grayed out indicating that you may not change them with a **Free Mix** assignment.

Output Options

The optional settings in this section allow for customization.

1. **Speaker Mix**: This option selects whether an output has the **Speaker Mix** or a **Free Mix** as set in the Routing Input section. The Speaker/Headphone output is always in the **Speaker Mix**.
2. **Solo/Mute**: This setting determines whether or not the outputs are affected by solos and mutes. The Speaker/Headphone output is always affected by solos and mutes. Note also, that all outputs in **Speaker Mix** mode also are affected by solos and mutes.

3. **Mute on Headphone Insertion:** This option controls whether the outputs should be muted upon a headphone insertion. This setting can be adjusted even for outputs whether they are in **Speaker Mix** or **Free Mix** modes.
4. **Volume Control:** This setting determines whether each output pair is adjusted by the **Volume Control** knob. Speaker/Headphone outputs are always affected by the volume control knob, as are any outputs that are in **Speaker Mix** mode.

Typical Questions Regarding Output Routing

The questions and thoughts in this section are commonly asked by people when setting up the licensed Output Routing capability.

What signal outputs can be controlled using the Output Routing feature?

All the outputs on the *iAM1-MIX8-12G* can be controlled using the Output Routing feature. This includes – Internal Speakers, Analog XLR outputs, all 4 pairs of AES outputs on HD-15, and AoIP Pair 9 and Pair 10.

How do the outputs behave if I do not purchase OPT-OUTPUT-ROUTING license?

If Output routing license is not purchased, the outputs are configured as follows:

1. **Speakers:** All monitored channels are always available on the internal speakers. The left and right speaker assignment is determined by the **Speaker Assignment**. Audio on the speakers is controlled by the **Volume** knob and is muted whenever a headphone is inserted into the **Headphone** jack.
2. **Analog XLRs:** These outputs follow the same configuration as the internal speakers. They are controlled by the **Volume** knob and are muted whenever a headphone is inserted into the **Headphone** jack. These outputs also follow the solo/mute selections on the Audio Meter screen.
3. **AES Pairs 1 through 4:** The first 8 channels appear on these outputs in numeric order. They are pre-fade, so they are unaffected by the **Volume** knob or headphone insertion. They are also unaffected by the solo/mute selections on the Audio Meter screen.
4. **AoIP Pairs 9 and 10:** These outputs follow the same configuration as the internal speakers. They are controlled by the **Volume** knob and are muted whenever a headphone is inserted into the **Headphone** jack. These outputs also follow the solo/mute selections on the Audio Meter screen.

What is the difference between Global Output Routing and Output Routing in Presets?

Both are used to configure the unit outputs. Global Output Routing is applied by

default when you select a source or when creating presets and when you don't change the Output Routing unique to any Preset. Changes to either of these are disabled if the OPT-OUTPUT-ROUTING license is not purchased.

How do I route whatever is being monitored to the XLR and AES outputs?

Using **Global Output Routing** (optional licensing upgrade), you may route any signals to the XLR & AES outputs. You may route signals to the XLR outputs using the **Analog/XLR** checkboxes and route signals to the AES outputs by using the **AES/Pair 1 to Pair 4** checkboxes.

Analog / XLR	L 1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
	R 2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
AES/Pair-1	L 1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	R 2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

As shown in the above example, signals appearing on Audio Meter channels 1 through 4 are routed to AES Pair 1 and signals from Audio Meter channels 5 to 8 are routed to the Analog XLR outputs.

How do I have a downmixed pre-fade output on AES Pair-1 combined with a post-fade output on the Analog XLRs?

To downmix a pre-fade output on AES Pair-1, uncheck the **Volume Control** checkbox for that AES pair. For a Post-fade output on the Analog XLRs, check **Volume Control** checkbox.

Cluster info.		Stereo 2.0		Stereo 2.0		Stereo 2.0		Stereo 2.0		Volume Control
Speaker assign.		L	R	L	R	L	R	L	R	
Meter #		1	2	3	4	5	6	7	8	
Speaker Headphone	L 1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
	R 2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Analog / XLR	L 1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
	R 2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
AES/Pair-1	L 1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	R 2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Volume Control:
On - Post-fade
Off - Pre-fade

How do I make the XLR outputs follow the Audio Meter screen solos & mutes while the AES Pair-1 does not?

Make the settings shown in the **Solo / Mute** column:

Solo Mute:
On - Outputs follow user Solo/Mute
Off - Outputs do not follow user Solo/Mutes

Cluster info.		Stereo 2.0		Stereo 3.0		Stereo 2.0		Stereo 3.0		Volume Control	Insertion	Mute on Headphone	Solo Mute
Speaker assign.		L	R	L	R	L	R	L	R				
Meter #		1	2	3	4	5	6	7	8				
Speaker Headphone	L 1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
	R 2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Analog / XLR	L 1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
	R 2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
AES/ Pair-1	L 1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	R 2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

The setting shown above determines that outputs will follow the Audio Meter screen solos & mutes for the XLR outputs because the checkbox is checked. It is not checked for the AES outputs, so they will not be affected by the solo & mute choices. This feature requires the optional OPT-OUTPUT-ROUTING output routing license.

How do I route only specific monitored channels to the Analog XLR outputs?


When the optional OPT-OUTPUT-ROUTING license is purchased, you may route specific channels as shown below. Here Audio Meter channels 1, 3, 5, and 7 are routed to the left analog XLR output and Audio Meter channels 2, 4, 6, and 8 are routed to the right analog XLR output. Unchecked channels are not routed. Make sure the **Speaker Mix** selection is turned off to enable this selection.

Analog / XLR		L 1	2	3	4	5	6	7	8				
Analog / XLR	L 1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	R 2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

The optional Global Output Routing feature works great. But what if we don't want to create any Presets and want to monitor audio only using Source Select? How would I configure different outputs for Source Select choices?

Use the **Global Output Routing** settings to determine how the outputs are configured for source select options.

The **Global Output Routing** feature allows channels to be routed or combined and routed to various destinations. For example, channels 1 to 8 can be routed to AES outputs:

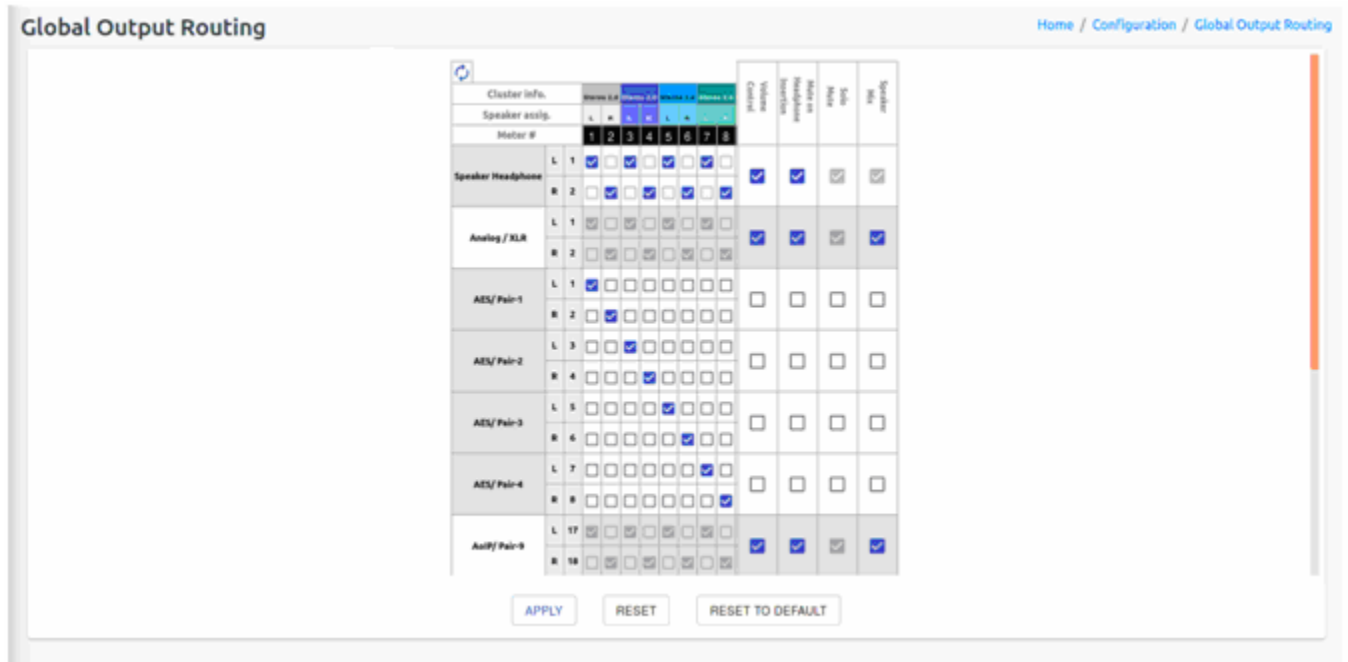

How do I keep the internal speakers muted and have audio only on the analog XLR outputs?

When the optional OPT-OUTPUT-ROUTING license is purchased, in the **Global Output Routing** configuration, do not select any **Speaker Headphone** checkboxes for any meter channels as shown below, and then select the desired meters for Analog XLR. In this way, the internal speakers will always be muted, but the audio will appear on the Analog XLR outputs (for amplified external speakers). Make sure that the **Speaker Mix** checkbox selection is unchecked for Analog/XLR.



How do I ensure that the outputs are automatically muted when the Headphone jack is inserted?

When the optional OPT-OUTPUT-ROUTING license is purchased, in the **Global Output Routing** configuration, if the **Mute on Headphone Insertion** checkbox is ON then the outputs get automatically muted when a headphone is inserted into the Headphone jack.

As shown below, if a headphone is inserted then the output on the Analog XLRs will be muted, while the audio on AES Pair 1 will remain on.

Mute on Headphone Insertion:
On: Outputs are muted when Headphone Jack is inserted
Off: Outputs are not muted when Headphone Jack is inserted.

Cluster info.		Stereo 2.0		Stereo 2.0		Stereo 2.0		Stereo 2.0		Volume Control	Mute on Headphone Insertion	Solo Mute	Speaker Mix
Speaker assign.		L	R	L	R	L	R	L	R				
Meter #		1	2	3	4	5	6	7	8				
Speaker Headphone	L 1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
	R 2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Analog / XLR	L 1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	R 2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
AES/ Pair-1	L 1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	R 2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

What are AoIP-Pair 9 and AoIP Pair 10?

AoIP-Pair 9: Selected inputs will be mixed to AoIP transmit channels 17 and 18. Note that configuration for channels 1 - 16 is not supported. Use a Dante Controller or Zman web interface to route these channels appropriately.

AoIP-Pair 10: Selected inputs will be mixed to Channel 19 and Channel 20. Again, use a Dante Controller or Zman web interface to route the remaining pairs appropriately.

How do I ensure that my outputs are pre-faded but follow the solo-mutes on the web interface? This will allow us to monitor only the unmuted/solo Audio Meter channels on amplified stereo speakers connected to the Analog XLR's.


In the **Output Routing** setting, for the Analog XLR outputs, keep the **Volume Control** checkbox unchecked and the **Solo/Mute** checkbox checked. This ensures that the Volume Control is **not** applied to the outputs, while the Solos/Mutes **are**.

Cluster info.		Stereo 2.0		Stereo 2.0		Stereo 2.0		Stereo 2.0		Volume Control	Mute on Headphone Insertion	Solo Mute	Speaker Mix
Speaker assign.		L	R	L	R	L	R	L	R				
Meter #		1	2	3	4	5	6	7	8				
Speaker Headphone	L 1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
	R 2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Analog / XLR	L 1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	R 2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Global Evertz Routing


Evertz Quartz routing is a protocol that allows for exchanging source labels in a facility. This improves the interoperability of equipment of various manufacturers in a facility. When Global Evertz Routing is selected, the menu shown in Figure 4-20 appears.

Figure 4-20: Global Evertz Routing Screen

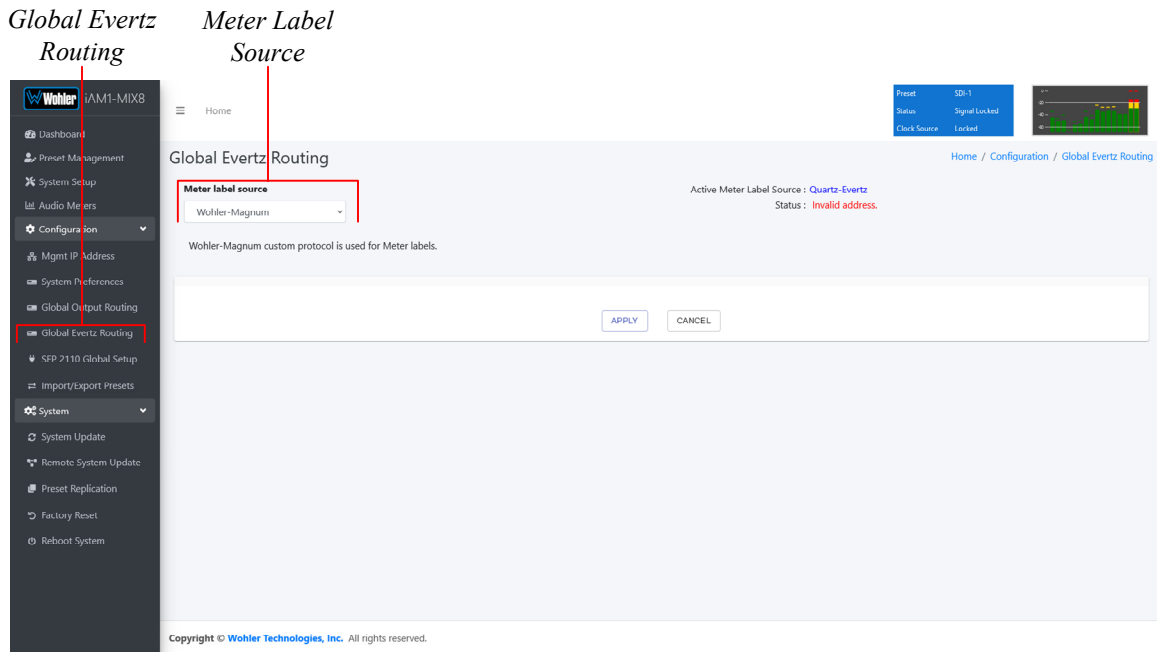


Set the Meter Label Source on this screen to “Evertz Quartz” as shown in the following figure:

Figure 4-21: Evertz Quartz Compatibility Setting

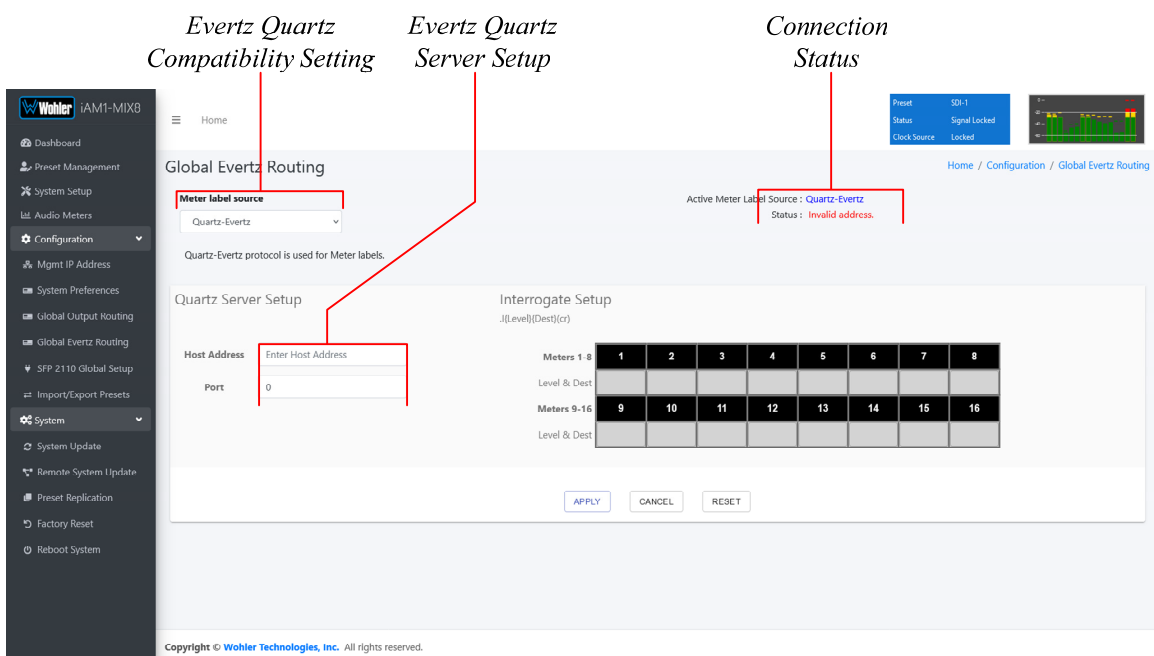

If no Evertz Quartz Server Setup is entered, or if it is incorrect, the Connection Status will indicate Invalid Address. Enter the Host Address and Port of the Evertz Quartz server in the Quartz Server Setup section. For assistance, contact Wohler Technical Service. Click the **Apply** button to enable Evertz Quartz compatibility. When Evertz Quartz compatibility is enabled and connected, this screen changes as shown in the following figure:


Figure 4-22: Connected Evertz Quartz Screen:

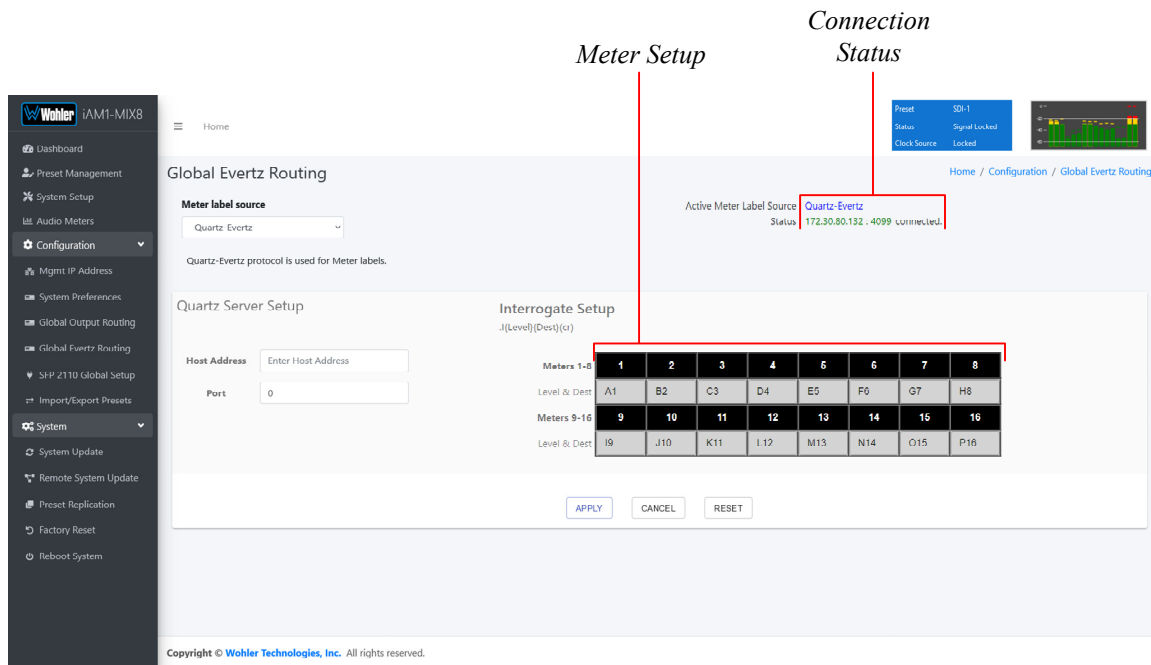

Verify that the Connection Status indicates that it is connected. The Interrogate Setup section will show the new meter label setup, now synchronized with the Evertz Quartz Server.


Other screens will change somewhat after Evertz Quartz compatibility is enabled. These screens are shown in the following two figures:

Figure 4-23: Meter Labeling

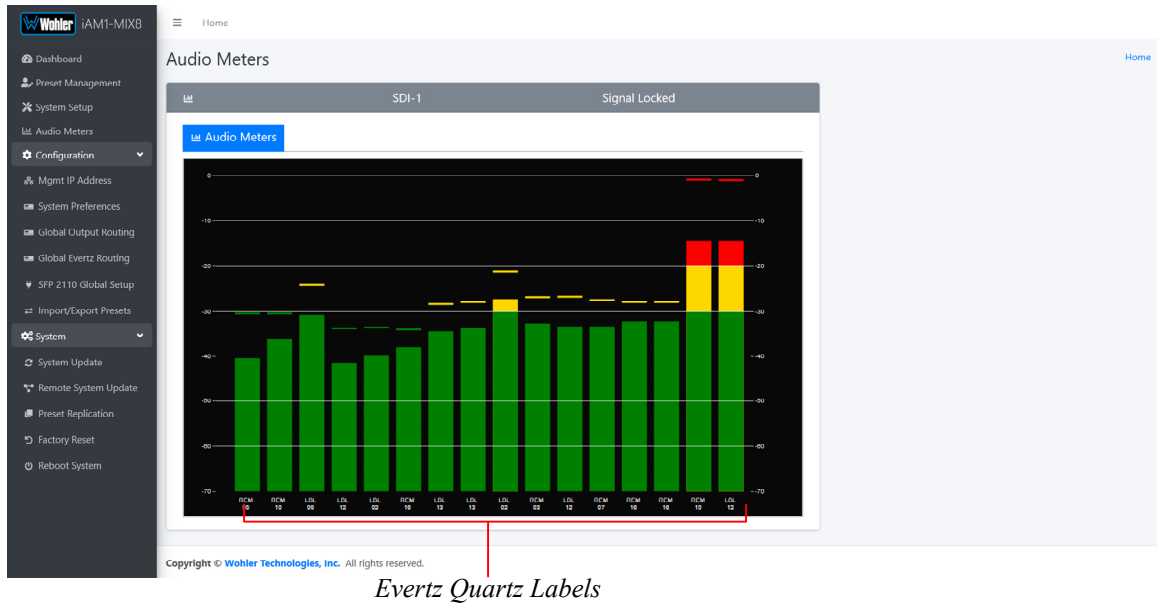

Meter labels learned from the Evertz Quartz Server will now be shown.

Figure 4-24: Preset Setup Screen

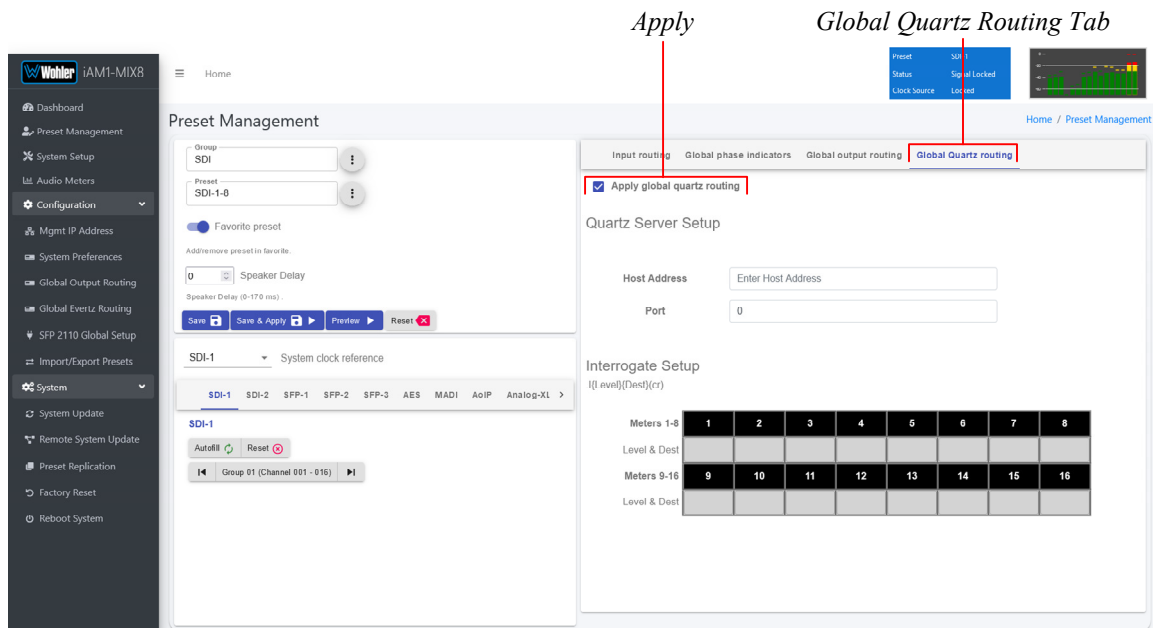


The Global Quartz Routing Tab will display the Quartz Server Setup and allow you to decide whether Global Quartz Routing will apply to this Preset.

Preset Replication

Preset Replication allows you to copy presets from a master unit to multiple *iAM1-MIX8-12G* units. This can save a lot of setup time if multiple units all need basically the same setup.


To start Preset Replication, click on the **Preset Replication** tab on the master unit. This will start the unit discovery process and will list all the *iAM1-MIX8-12G* units that you currently have on your network. The discovery process will continue for a period of 2 minutes. However, you may stop the discovery process sooner if you believe all the units in the network have been discovered. Simply click the **Stop Scan** button.

Figure 4-25: Preset Replication Scanning Screen

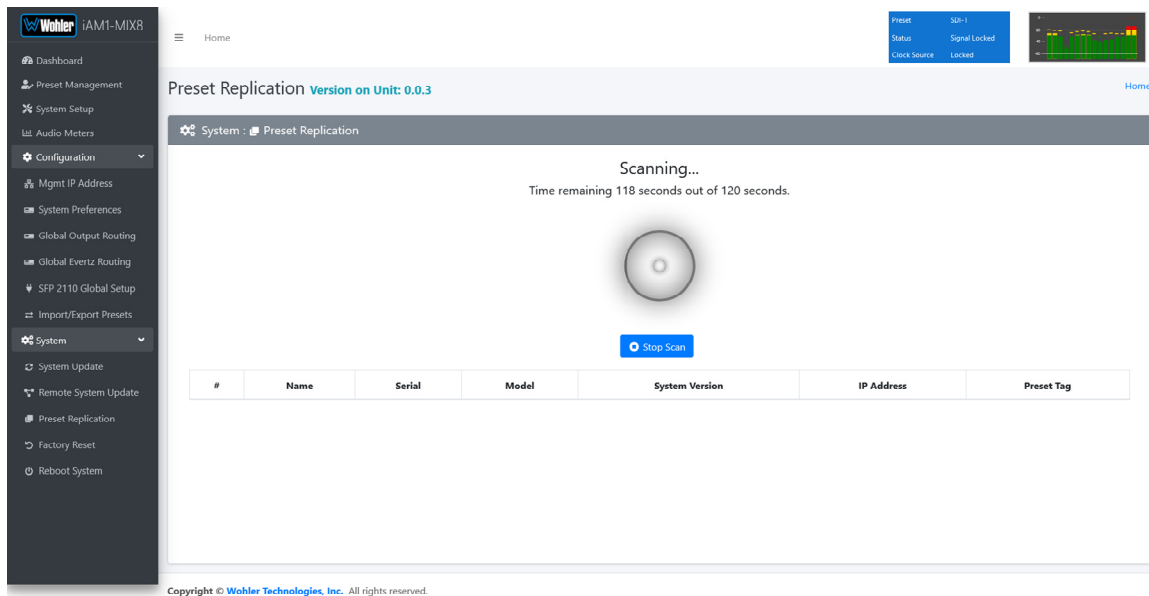

Once all the units are discovered you may either copy the presets that are currently created on the Master unit or can use an external preset file that you want to copy to any or all of the Target units. **Note that any and all of the Presets that may already be contained in each Target unit will be erased by copying the new Presets.**

Figure 4-26: Preset Replication Target Selection Screen

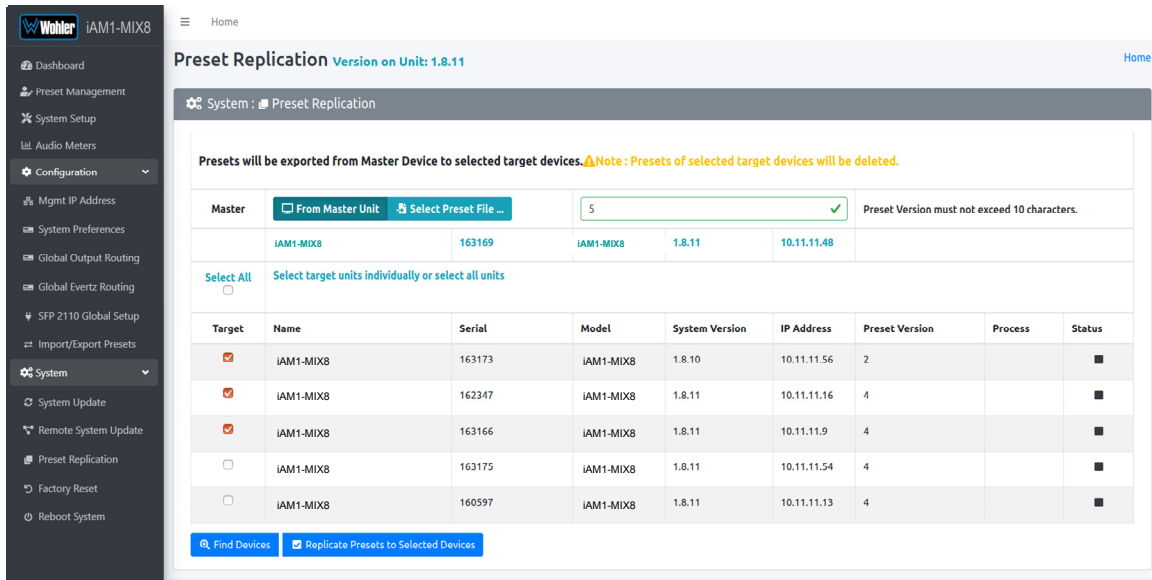

Click either **From Master Unit** or **Select Preset File**. This determines the source of the Presets to be copied. Preset Files would be files that you have previously stored in the computer running the Web GUI.

You may add a descriptive name or version to the Presets being copied. This may aid in remembering what tag or version of the presets are available on the unit. The Preset name or version may be up to 10 characters in length.

Next, select the Target units from the list of units shown by checking or unchecking each of the **Target** boxes at the left. Alternatively, you may click **Select All** to select all of the units. Then select the **Replicate Presets to Selected Devices** button. The progress of the Preset replication for each unit, as the Presets are being copied, will be displayed in the **Process** column. When all of the Presets have been copied to each of the selected units, you may leave this screen.


Import/Export Presets

Use the **Import / Export Presets** page to manage the Preset database in the *iAM1-MIX8-12G*. You may export the Preset database onto the computer hard drive for security backup purposes or as a means to transfer it to another *iAM1-MIX8-12G*. Likewise, it can be used to import a Preset database from the computer hard drive into the *iAM1-MIX8-12G*. In this way, a Preset configuration may be only devised once and then duplicated into all of the *iAM1-MIX8-12G* units in a system, saving significant effort.

The *iAM1-MIX8-12G* will create Preset Tags for the each set of Presets. Refer to Figure 4-27. You may also change these Preset Tags, using the Preset Change Field. They allow you to quickly resolve questions about which Presets on various units are the most up to date. They will also allow you to determine whether Presets have been modified. If the Preset Tag displayed contains the suffix "-dirty" then at least one Preset has been changed in some way.

While exporting the file, the Preset Tag is appended to the filename, this allows you to store multiple Preset files with different file name. For example, if the Preset Tag is v1.0.0 then for *iAM1-MIX8-12G* the default filename would be "**wohler_presets_iAM1-MIX8-12G**-v1.0.0.pdb" Do not change the file suffix and prefix (marked in red). However, you may change the Preset Tag to any number or text to suit your requirements.

Figure 4-27: Database Export

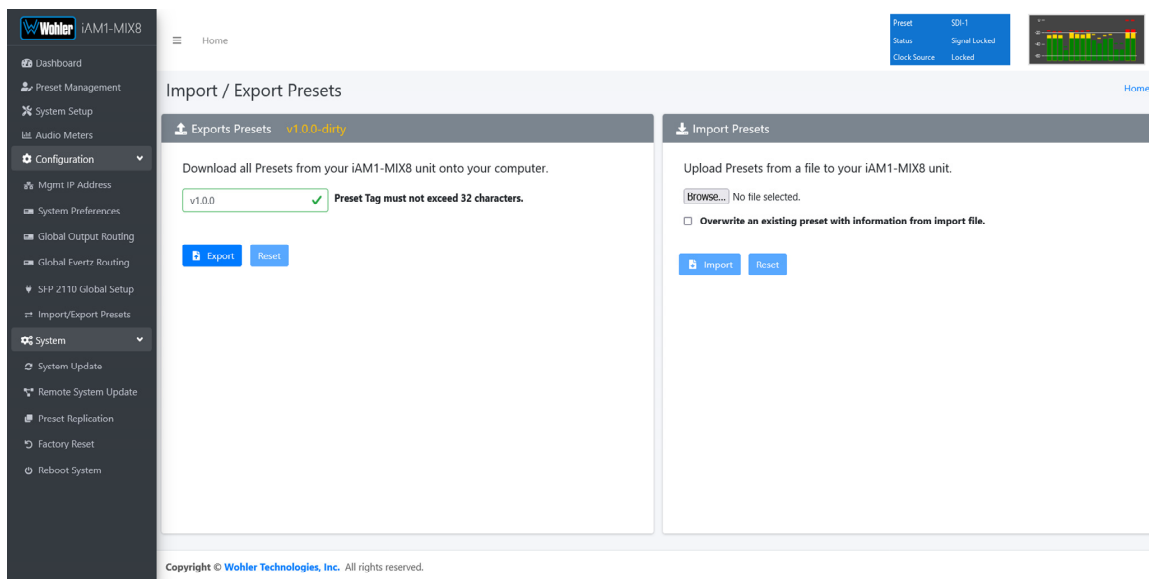


Export Configuration

Use the following steps to save the Preset configuration in the *iAM1-MIX8-12G* to the computer hard drive:


1. If you need to, revise the Preset Tag name, observing the advice in the advice in the previous section.
2. Click the **Export** button on the **Import / Export Presets** page, as shown in Figure 4-27.

3. A small **Verify** window will appear:

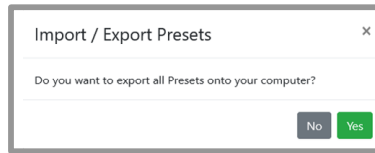

4. Click **Yes** to proceed with writing the Preset data to the hard drive. The copying will proceed. After the Preset data has been written, the screen in Figure 4-28 will appear, explaining what has been exported in an Export Presets Summary. It will also note whether there were any errors in the process. If there were any errors, repeat these steps to try again.

Figure 4-28: Database Export

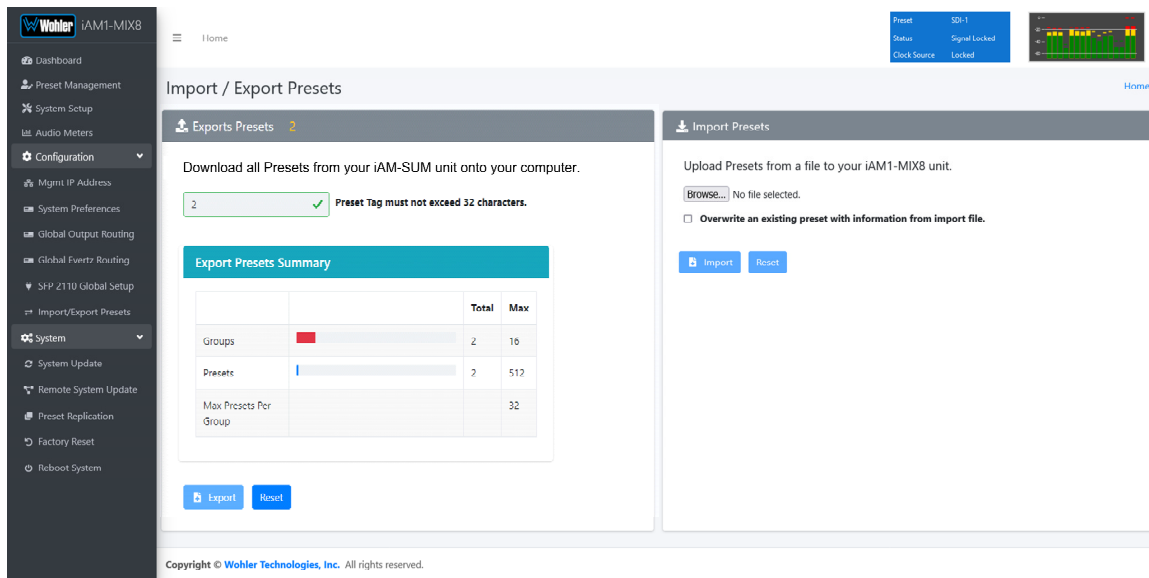

Import Configuration

Use the following steps to copy the Preset configuration into the *iAM1-MIX8*:

1. Click the **Choose File** button as shown in Figure 4-27 and select the Preset Tag you would like to import.
2. If you want to allow existing Presets to be overwritten with imported Presets of the same name, check the **Overwrite an existing Preset** box. It is a good idea to do this.
3. Click the **Import** button. The copying will proceed. When complete, the screen in Figure 4-29 will appear, explaining what has been imported in an Import Presets Summary. It will also note whether there were any errors in the process. If there were any errors, repeat these steps to try again.

Figure 4–29: Database Import

The screenshot displays the 'Import / Export Presets' interface. On the left is a navigation sidebar with categories like Configuration and System. The main content area is divided into two panels:

- Exports Presets:** Contains a text input field with 'v1.0.0' and a green checkmark. Below it is a warning: 'Preset Tag must not exceed 32 characters.' There are 'Export' and 'Reset' buttons.
- Import Presets:** Contains an 'Upload Presets from a file to your IAM-SUM unit.' section with a 'Choose File' button (labeled 'No file chosen') and an 'Overwrite an existing preset with information from import file.' checkbox. Below this is an 'Import Presets Summary' table.

	Total	Current	Max
Groups	0	2	16
Presets	0	2	512
Max Presets Per Group			32
Skipped Presets	2		

At the bottom of the interface, there is a copyright notice: 'Copyright © Wohler Technologies, Inc. All rights reserved.'

System

Click on **System Setup** to find three tabs, each containing important information about the *iAM1-MIX8-12G*. These tabs are explained in the following three sections.

System Information

This tab displays a variety of information about the *iAM1-MIX8-12G*. It is shown in Figure 4-30. This information could be useful to view if you are contacting Wohler Technical Service.

Figure 4-30: System Information Tab

The screenshot shows the 'System Information' tab selected in the 'System Setup' menu. The main content area is divided into two sections: 'Software Information' and 'Unit Information'. The 'Software Information' section contains a table with the following data:

System Status	Valid
System Version	0.0.3
91947G	
Type	Mainboard
State	Valid
Version	0.0.3
Revision	C.3
FPGA Version	0x24102501
MAC Address	U4:ed:54:d0:11:30
Option Card	Not Installed

The 'Unit Information' section contains a table with the following data:

Serial Number	168357 iAM-SUM
System IP Address	10.11.11.3
MAC Address	b4:ed:54:d0:11:30
Name	iAM1-MIX8 ✓

At the bottom of the page, there is an 'Apply' button and a 'System Log Information' download link.

Copyright © Wohler Technologies, Inc. All rights reserved.

SFP Information

This tab displays a variety of information about the module inserted into the SFP slot on the rear panel of the *iAM1-MIX8-12G*. It is shown in Figure 4-31. This information could be useful to view if you need to ascertain what module, if any, is installed, or if you are contacting Wohler Technical Service.

Figure 4-31: SFP Information Tab

The screenshot shows the Wohler iAM1-MIX8 web interface. The sidebar menu on the left includes options like Dashboard, Preset Management, System Setup, Audio Meters, Configuration, Mgmt IP Address, System Preferences, Global Output Routing, Global Evertz Routing, SFP 2110 Global Setup, Import/Export Presets, System, System Update, Remote System Update, Preset Replication, Factory Reset, and Reboot System. The main content area is titled 'System Setup' and has tabs for 'System Information', 'SFP Information', and 'Licenses'. The 'SFP Information' tab is active, showing a dropdown for 'SFP Slot 1' and a table of hardware information. A note indicates that SFP information is refreshed every 10 seconds. The hardware information table lists details for SFP Slot 1, including Description, Short Description, Approved status, Vendor Name, Vendor Part Number, Vendor Revision, and Wohler Part Number.

Hardware Information	
Description	Software-defined, non-MSA, SDI host
Short Description	Software-Defined
Approved	True
Vendor Name	EMBRIONIX
Vendor Part Number	EB22LC28-SN
Vendor Revision	108
Wohler Part Number	790047


Copyright © Wohler Technologies, Inc. All rights reserved.

Note: SFP Information, as shown in lower half of Figure 4-31, can be used to retrieve the 2110 or 2022 SFP Module network configurations. This is useful if the customer forgets the IP address assigned to these SFP modules.

Licenses

This tab displays the license number for each of the modules or features in the *iAM1-MIX8-12G*. It is shown in Figure 4-32. You will use this tab to enter any new license numbers that you purchase. Contact Wohler Sales to obtain new license numbers. If you need help, Wohler Technical Service will be happy to assist you in installing these numbers.

Figure 4-32: Licenses Tab

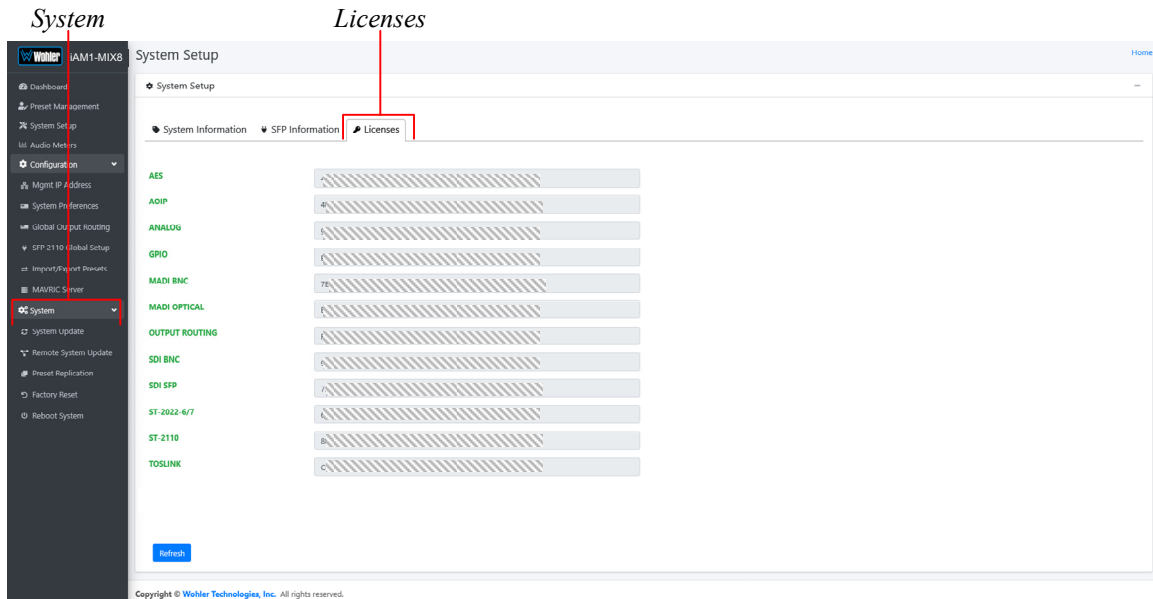

The example above shows an *iAM1-MIX8-12G* with license keys for inputs and license keys for SFP modules installed.


To enter the license key provided to you by Wohler Customer Service, use the following steps:

1. Click the field to the right of the input or module desired.
2. Enter the license key in the box.
3. Repeat Steps 1 and 2 for any other license keys that you want to enter.
4. Click the **Refresh** button to save the information. Each new license will be immediately available for use.

Factory Reset

The **Factory Reset** function should be used with caution. It deletes all of the settings you have programmed into the system. It returns the system to the way it was when received new from the factory. After using this function, you will need to reprogram everything from the start.

Figure 4–33: Factory Reset

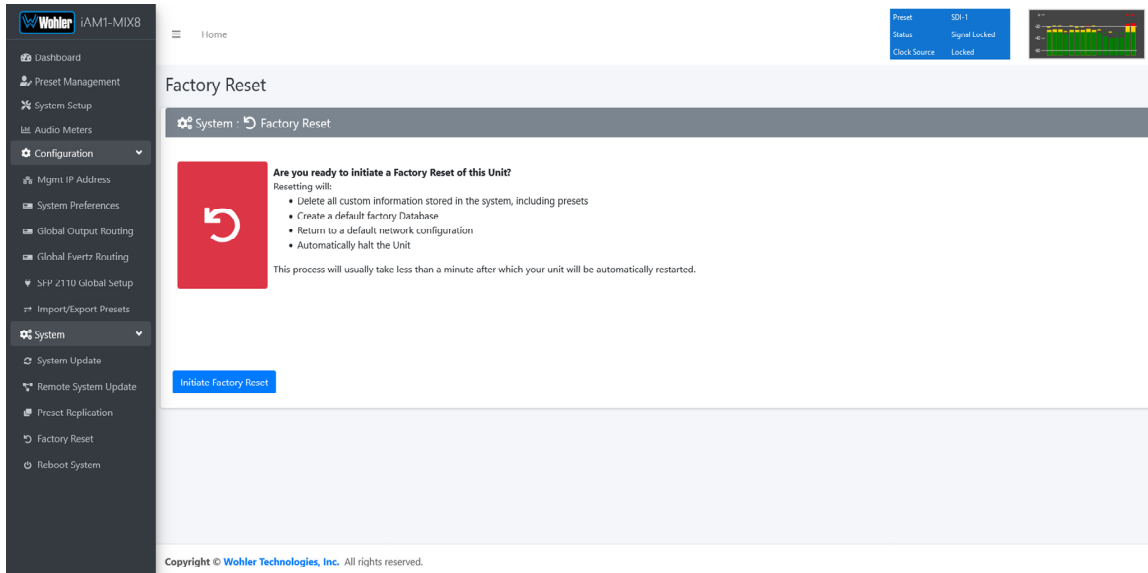

If you have any doubt as to whether you should perform a Factory Reset, **do not** click the **Initiate Factory Reset** button. Contact Wohler Technical Service for advice.


Note: **Factory Reset** will also reset your IP address to the default one. After a Factory Reset, the IP Settings will need to be updated. The default IP address for the unit is determined based upon the Mac address. It is 169.254.1.xx where xx is the last octet of the management Mac address. For example, if the Mac address is b4:ed:54:d0:04:28 then the IP address would be 169.254.1.40 (40 is the decimal equivalent for the last octet of Mac address 28.)

Reboot System

The **Reboot System** page allows you to reboot an *iAM1-MIX8-12G* remotely. The **Reboot System** page is shown in Figure 4-34. This function is normally only used upon request from Wohler Technical Service to troubleshoot or correct an issue.

The **Reboot System** function should be used with a bit of caution. It puts the *iAM1-MIX8-12G* out of service for several minutes while it is rebooting, and this may unexpectedly interfere with the use of the product by the remote operator.

Figure 4-34: Reboot System

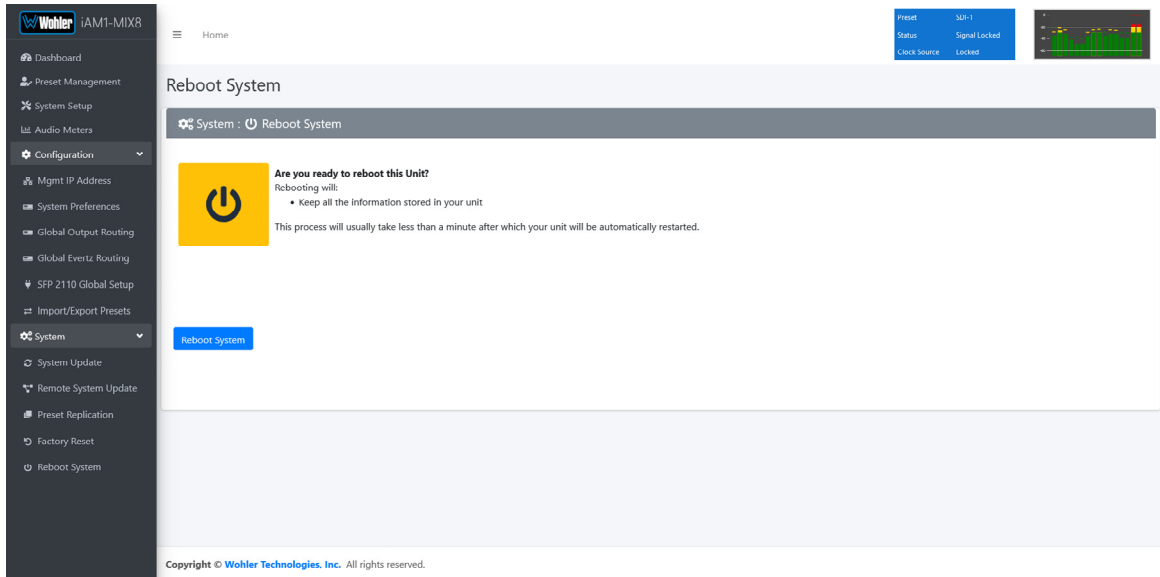

If you have any doubt as to whether you should reboot the remote *iAM1-MIX8-12G*, **do not** click the **Reboot System** button. Contact Wohler Technical Service for advice.

APPENDIX A: Software Upgrades

Introduction

This chapter describes how to download a software update file to your computer, transfer it to a USB flash drive and install the updated into an *iAM1-MIX8-12G*.

Download the Software

The *iAM1-MIX8-12G* software update can be found at <http://www.wohler.com>, under Product Downloads on the Products > *iAM1-MIX8-12G* page, in Support > Downloads > Drivers & Software, or contact Wohler Customer Support for more information.

Unzip the downloaded update files to reveal two files. One will have a suffix of **.wx** and the other will have a suffix of **.md5mix**. Both files are needed for the upgrade.

Update Methods

There are several software update methods. Select one of them, depending upon your needs:


1. Local update from the front panel of the *iAM1-MIX8-12G*: This straightforward method does not require the use of the Web GUI. A flash drive containing the update is plugged into the front panel USB socket and the update is then accomplished using the self-contained menu system. If this method seems most suitable, then refer to the [Local Update from the Front Panel](#) section of this chapter.
2. Remote update using the Web GUI with a flash drive connected to the *iAM1-MIX8-12G*: It may be more convenient to update the product using a flash drive plugged into its front panel USB socket, but controlled remotely via the Web GUI. To update the product this way, refer to the [Updating via the Web GUI](#) section of this chapter.
3. Remote update without a flash drive: This method allows you to update a networked *iAM1-MIX8-12G* remotely without plugging a flash drive into its front panel USB socket. To update the product this way, refer to the [Updating an *iAM1-MIX8-12G* Remotely](#) section of this chapter.
4. Update multiple units remotely at once: This method allows you to update multiple networked *iAM1-MIX8-12G* units at once, without plugging flash drives into their front panel USB sockets. To update products this way, refer to the [Updating Multiple *iAM1-MIX8-12G* Units Remotely](#) section of this chapter.

Local Update from the Front Panel

Use the following steps to update the *iAM1-MIX8-12G* software:


1. Copy the unzipped Wohler Update Package file(s) from your computer to the root directory (not inside of a folder) of a USB flash drive. It must be FAT32 file type, and does not need to be empty. Refer to the [Download the Software](#) section of this chapter for the specifics of download and file transfer to the USB flash drive.
2. Insert the USB flash drive with *iAM1-MIX8-12G* update package(s) into the front panel USB jack.
3. From the **Menu** screen, touch **System Options**. The screen shown in Figure A-1 will appear.

Figure A-1 - System Options Screen

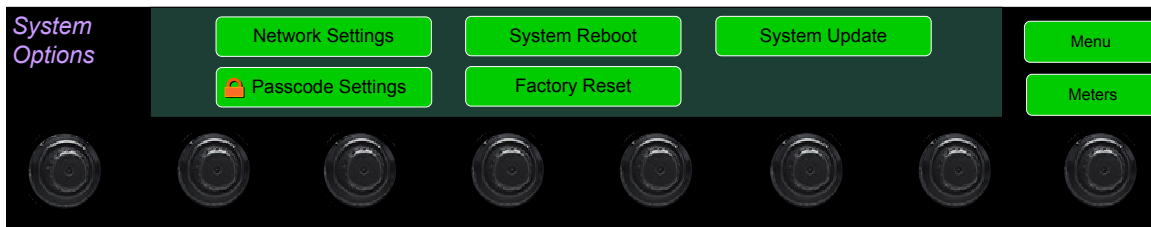

4. In the **System Options** menu, touch **System Update**. The **Software Upgrade** screen will appear, as shown in Figure A-2.

Figure A-2 - Software Upgrade Screen

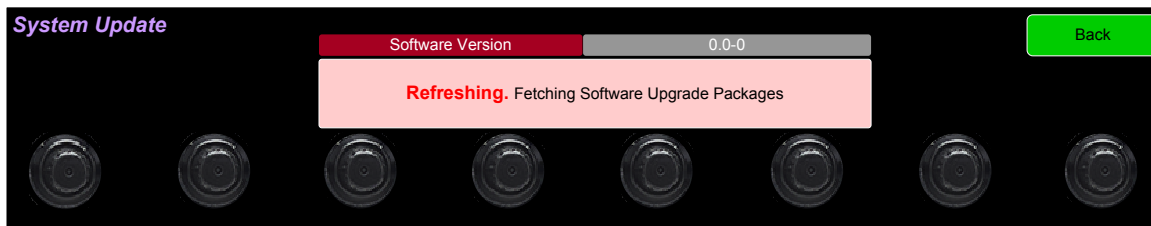

5. The new software version that is in the flash drive will be shown in the **Software Version** screen. To cancel the upgrade at this point for any reason, touch **Back**. To proceed, touch the software version entry in the **Software Version** screen. A screen will appear to verify you would like to perform the upgrade.
6. To proceed, touch **Yes**. To back out, touch **No**. After you touch **Yes**, the screen will change, as shown in Figure A-3. The left screen will display "Software Upgrade in Progress" until the upgrade is complete.

Figure A-3 - Upgrading System



After the software update starts, the text on the screen will change periodically to indicate the progression of the upgrade. The upgrade will take 5 minutes or more, after which the *iAM1-MIX8-12G* will restart. After the system has completed its restart cycle and is once again operational, you may then remove the flash drive.

Important:


Do not interrupt or remove power to the *iAM1-MIX8-12G*, or remove the USB drive during the installation process. Doing so could crash the *iAM1-MIX8-12G* software.

Updating via the Web GUI using a Flash Drive

Use the following steps to update the *iAM1-MIX8-12G* software:

1. Copy the unzipped Wohler Update Package file(s) from your computer to the root directory (not inside of a folder) of a USB flash drive. It must be FAT32 file type, and does not need to be empty. Refer to the [Download the Software](#) section of this chapter for the specifics of download and file transfer to the USB flash drive.
2. Connect to the *iAM1-MIX8-12G* with the Wohler Web GUI. Navigate to the **System | System Update** menu, as shown in Figure A-4.


Figure A-4 – System Update Menu

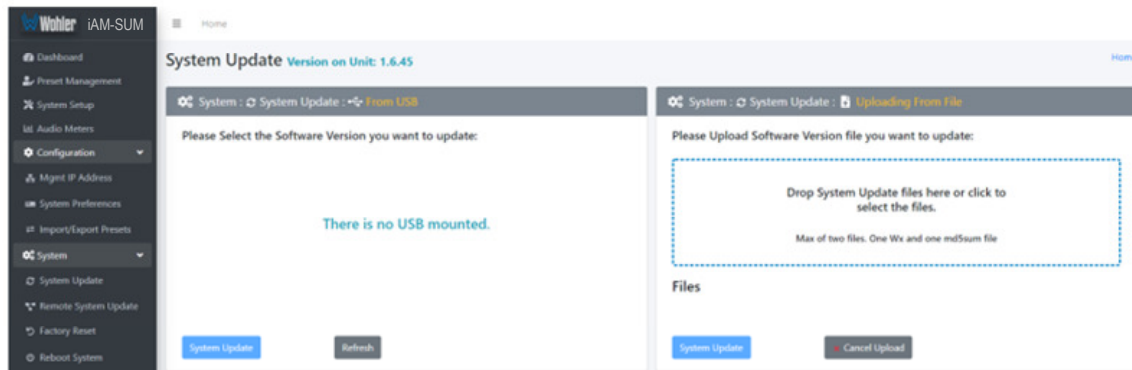

3. Click on the **Refresh** button.
4. Available software update(s) are shown as in Figure A-5. Click the one you


want, followed by clicking the **System Update** button.

Figure A-5 – Available Software Updates

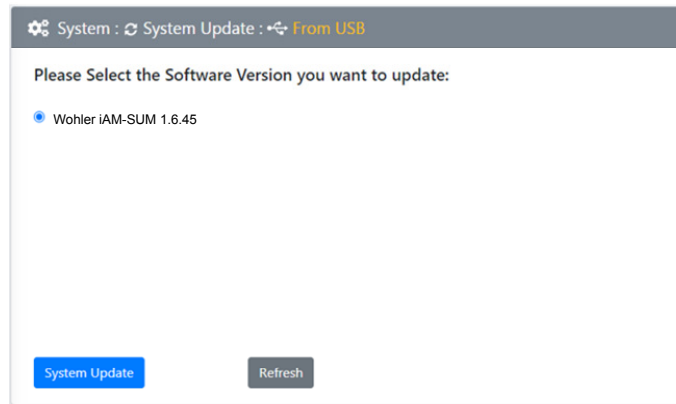


5. After clicking the System Update button, a verification screen displays as shown in Figure A-6. If you agree that the correct update version has been selected, click the **Yes** button.

Figure A-6 – System Update Verification

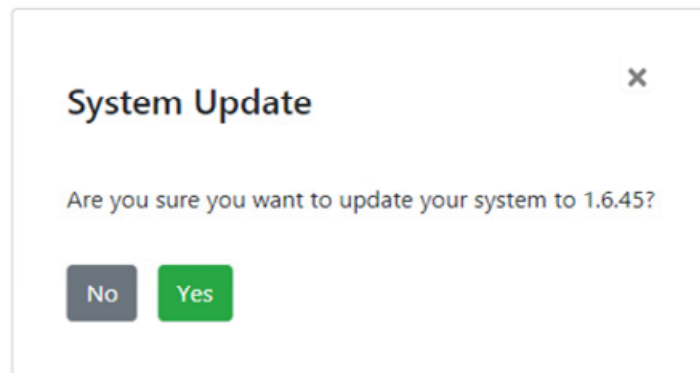

6. Next, the update begins, showing the screen in Figure A-7. The circle in the center of the screen, along with status messages below it, will indicate the progress of the update.

Figure A-7 – Software Upgrade in Progress

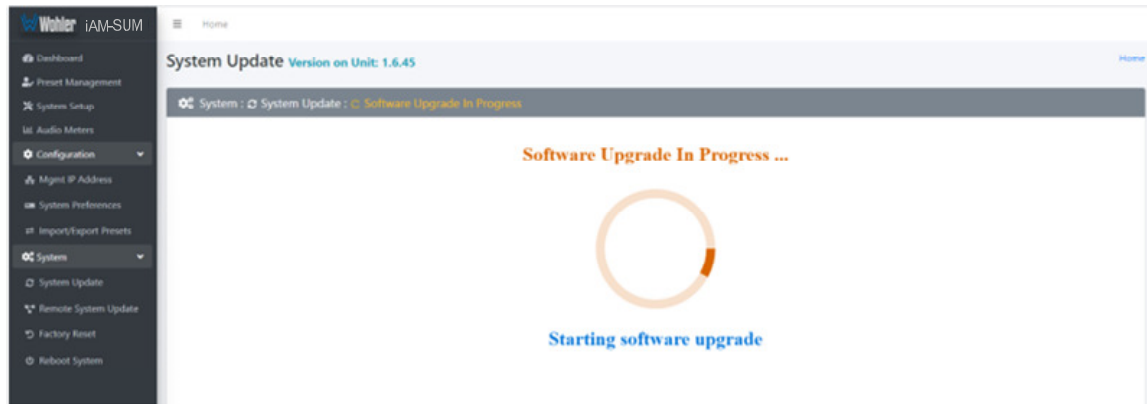


7. At this point, wait for the update to complete. It may take several minutes, but **it is critical not to disturb the iAM1-MIX8-12G or the Web GUI** until the update process is complete. When it is complete, the iAM1-MIX8-12G will restart.

Updating an iAM1-MIX8-12G Remotely

Use the following steps to update the iAM1-MIX8-12G software:

1. The Software Update files you downloaded earlier must be in the same computer that is running the Web GUI. Connect to the iAM1-MIX8-12G with the Wohler Web GUI. Navigate to the **System | System Update** menu. Click within the large blue dotted line rectangle at the right of the screen. A file selection window will open, as shown in Figure A-8.

Figure A-8 – System Update Menu

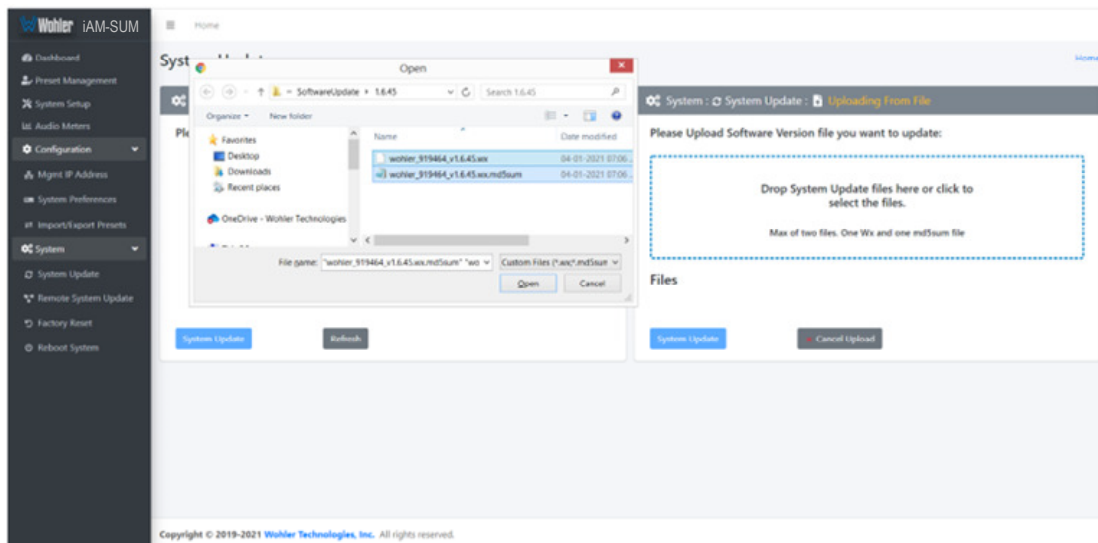

2. Click the two update files. One will have a suffix of **.wx** and the other will have a suffix of **.md5mix**. If you make a mistake and click the wrong file(s),

click the **Cancel Upload** button and try again. When the files have uploaded, the **System Update** button will be enabled. Click it. If there is a problem with the files as this point one of the screens shown in Figures A-9 or A-10 will appear. In that case follow the directions on the screen to retry. If there are no problems, the update will proceed and the screen shown in Figure A-7 will appear.

Figure A-9 – Invalid System File Version


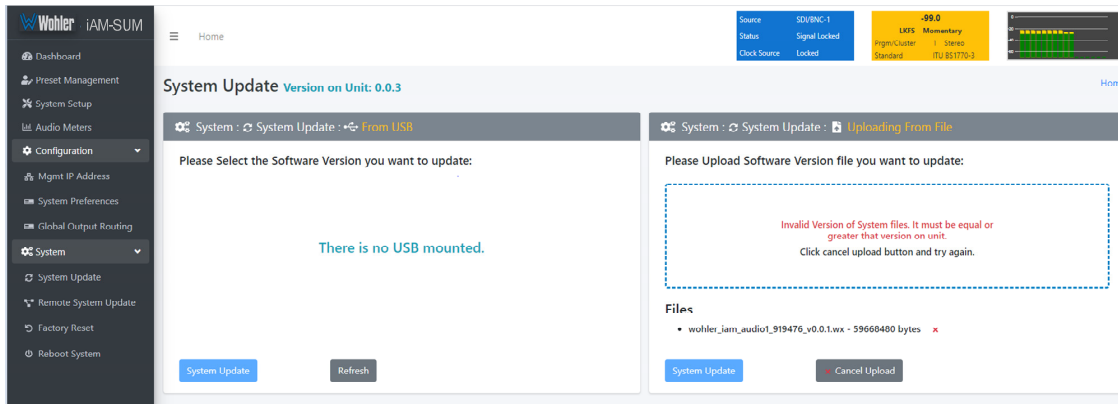


Figure A-10 – Invalid Checksum

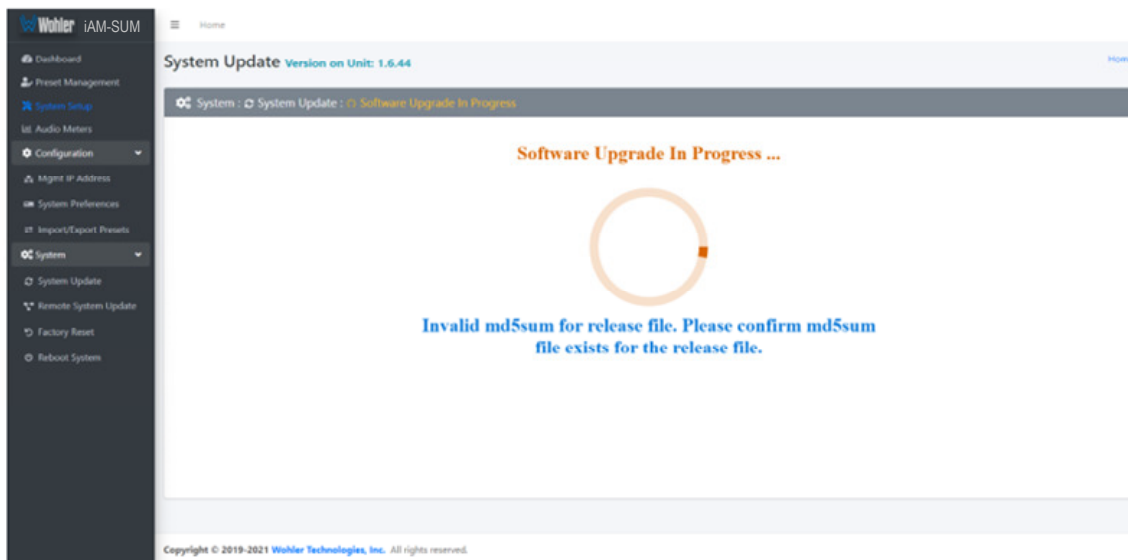


3. At this point, wait for the update to complete. It may take several minutes, but **it is critical not to disturb the iAM1-MIX8-12G or the Web GUI** until the update process is complete. When it is complete, the iAM1-MIX8-12G will restart.

Updating Multiple Units Remotely

Use the following steps to update one or more *iAM1-MIX8-12G* units remotely by transferring the software from a previously updated *iAM1-MIX8-12G*:

1. If any of the *iAM1-MIX8-12G* units that you intend to update remotely may be in use, contact the people using them and let them know what you will be doing. The *iAM1-MIX8-12G* units being updated will be temporarily out of service.
2. Use the Wohler Web GUI to connect to an *iAM1-MIX8-12G* already containing the latest update. This will be referred to as the **Master Unit**. Navigate to the **System | System Update | Remote System Update** menu. The screen shown in Figure A-11 will appear and the Web GUI will scan the network for any active *iAM1-MIX8-12G* units.

Figure A-11 – Scanning for *iAM1-MIX8-12G* Units

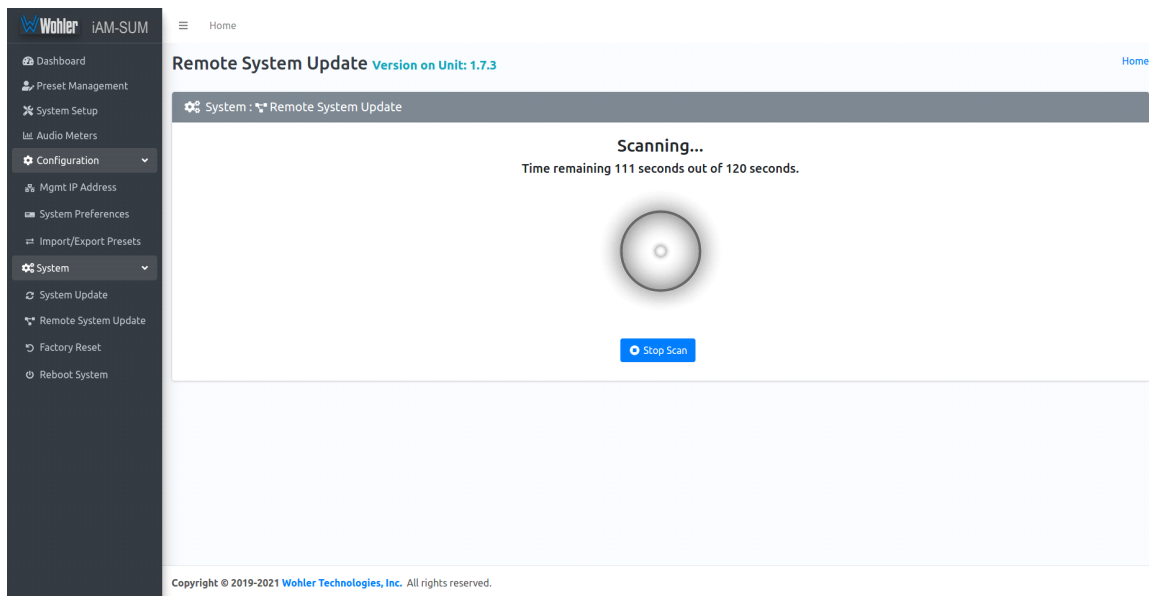


Note: The scanning process will take 2 minutes. Progress is shown on the screen. If for some reason you would like to stop the scan prematurely, click the **Stop Scan** button.

Important: **Do not** run the scanning or updating process from **more than one Master Unit** at a time, to avoid problems. Although you may be updating multiple units at the same time, never attempt this process from more than one **Master Unit**.


3. When the scanning is complete, a list of found *iAM1-MIX8-12G* units will be shown as in Figure A-12. Click either **Select All** or click only the **Target** units that you want to update.

Figure A-12 – List of Found iAM1-MIX8-12G Units

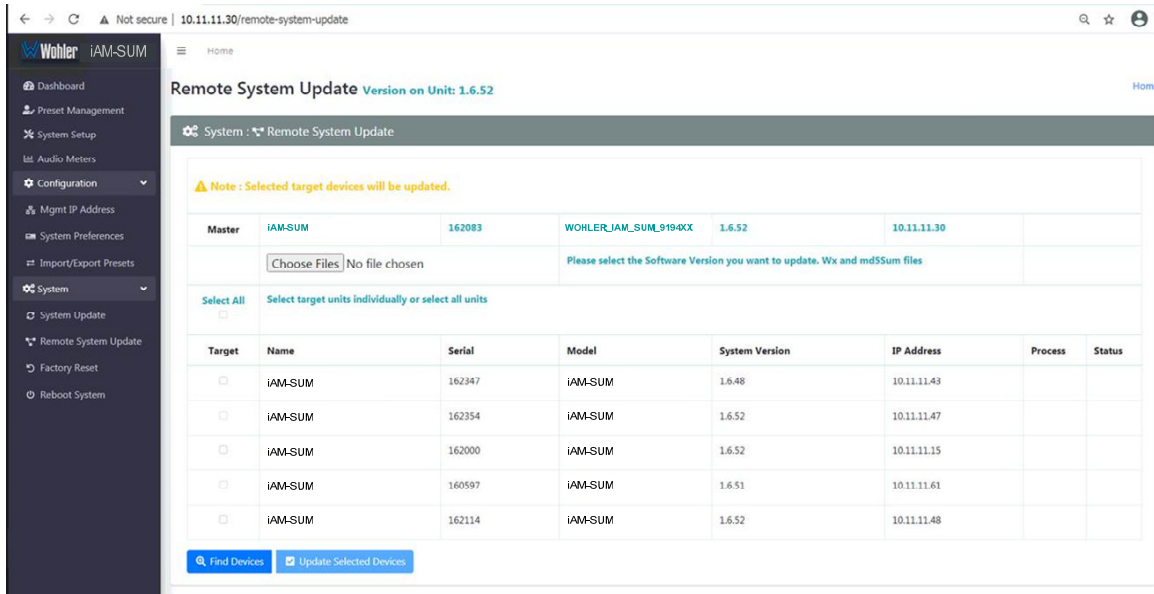


4. Then click **Update Selected Devices**. The window shown in Figure A-13 will appear.

Figure A-13 – Apply System Package

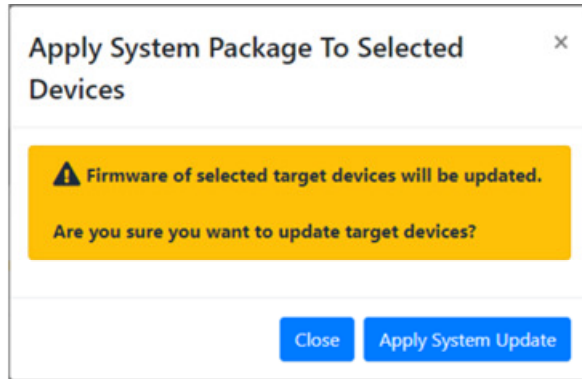

5. Click **Apply System Update**. The screen shown in Figure A-14 will appear. This screen contains a table showing the update progress of each of the iAM1-MIX8-12G units being updated.

Figure A-14 – System Update Progress

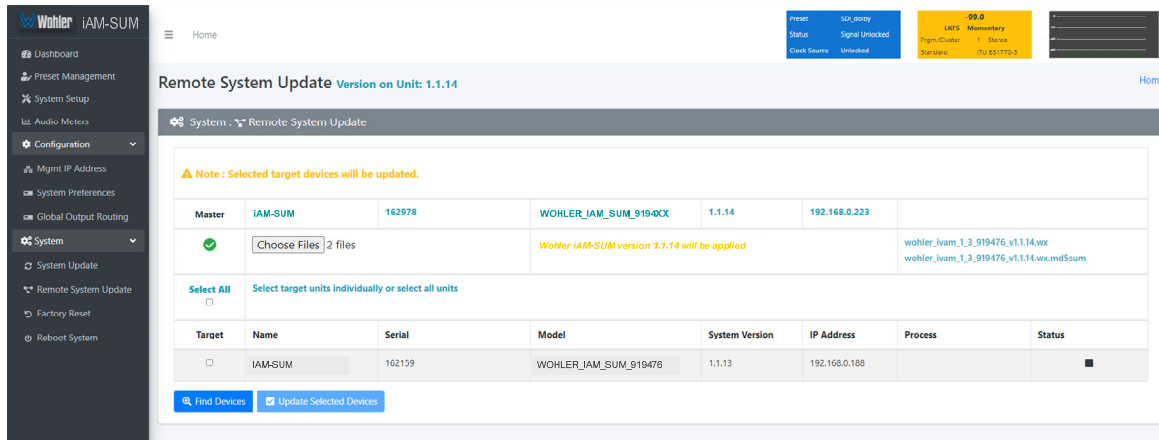

- At this point, wait for each update to complete. It may take several minutes, but **it is critical not to disturb any of the iAM1-MIX8-12G units or the Web GUI** until the update process is complete. When it is complete, each iAM1-MIX8-12G will restart.

APPENDIX B: Dante Network Setup

Introduction

Installing the *iAM1-MIX8-12G* into an existing and functioning Dante network is virtually plug and play. The *iAM* rear panel AoIP jack supports 1Gb/s and 100Mb/s Ethernet devices in Dante Audio over IP network configurations.

The AoIP option on the *iAM1-MIX8-12G* supports Hitless and has 2 RJ-45 interfaces, a primary interface and a secondary interface.

Additionally, an SFP slot is provided to receive the AoIP signal using network fiber SFPs. These are 1G SFP slots. The SFP slot always acts as a primary interface.


On *iAM1-MIX8-12G*, the AoIP source can be selected through the Source Select option.

The *iAM1-MIX8-12G* is set up at the Wohler factory to be used as a slave rather than a master within the Dante network. Other devices or software, such as a **Dante Controller**, are expected to be responsible for most device configurations and all audio routing.

Please refer to the ***Dante Controller User Guide*** or other control device documentation for specific network and device setup information. The next section provides a guide to configuring the card and AOiP port.

What is in the *iAM1-MIX8-12G* for Dante?

The Dante AOIP option consists of an Audinate Brooklyn II or Brooklyn III card directly connected to the AOIP port. This port is dedicated to the card and should not be confused with the Wohler unit Management port. These two ports must be on two different subnets, one for the AOIP network and the other for access to the Wohler Web GUI for management of the Wohler unit itself. Either one can be configured to have static or DHCP addresses. The Wohler Web GUI indicates the presence of the Dante card and the AOIP license but does not provide access to the various configuration parameters internal to the card. The speed of the AOIP port is 1G default or 100Mbps.

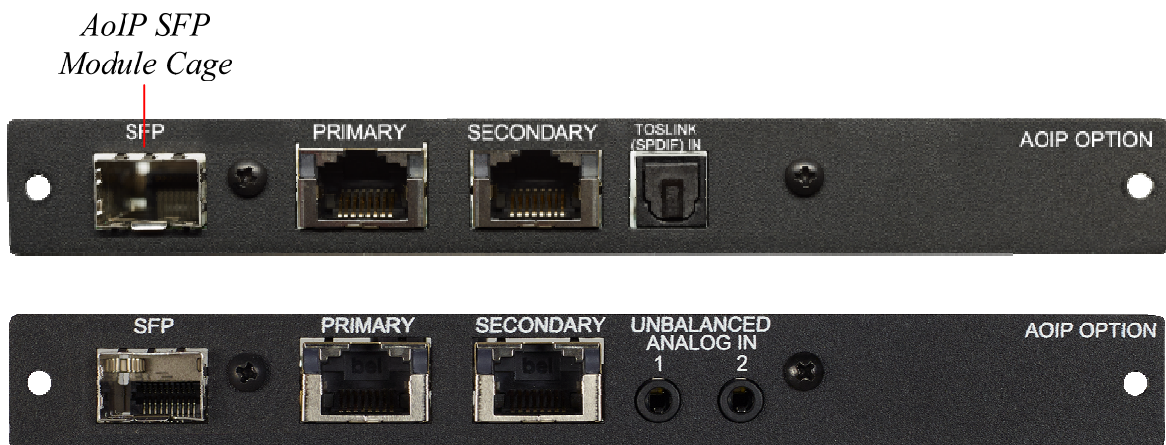

The Audinate® Brooklyn II or Brooklyn III card has a simple process to set its initial IP address. The initial factory setting for the card's AOIP port is DHCP. When connected to a DHCP based Dante network and the unit powered on, the Dante card sets the DHCP server provided address as its default address.


Therefore, if the Dante network has a DHCP server, the unit can be inserted into the network and can be configured further using the Audinate application, Dante Controller, running on a host on the same DHCP based subnet.

If the Dante network is static based or if DHCP fails, the card sets a static Link Local arbitrary address in the format 169.254.x.y, where x and y are each in the range 0 to 255. The mask is set to 255.255.0.0 to provide a ~65000 entry address space.

The Dante Controller host must also have a Link Local address to communicate with the card over the unit's AOIP port. Connect the AOIP port directly to a host (e.g. laptop) running the Dante Controller, where the host address is preconfigured to an arbitrary Link Local address (169.254.x.y, mask 255.255.0.0). The connection can be direct cable or through a switch. The Dante Controller **Device Info** tab shows the card's default static address, speed, etc. By double clicking its entry line, additional settable parameters on the card can be reconfigured to be compatible with the Dante network addressing and other parameters as necessary. When the unit is rebooted on the Dante network, the card will be seen by the Dante Controller used to manage the overall network.

If the Dante Controller **Device Info** tab detects the card but does not allow modification and full presentation of card internals, the **Card ID** will be shown in red, e.g. Wohler-xxxxxx where xxxxxx is the last 6 hex digits of the card MAC address as shown in B-1. This usually indicates that the IP address of the card is not in the same subnet as the Dante Controller host. By double clicking the ID, a **Device View** screen will appear as also shown in Figure B-1 with further details about the two incompatible addresses. Change the address of the host or move the unit to another host with an address compatible with the Dante card.

Figure B-1 – Dante Controller Device Info Tab

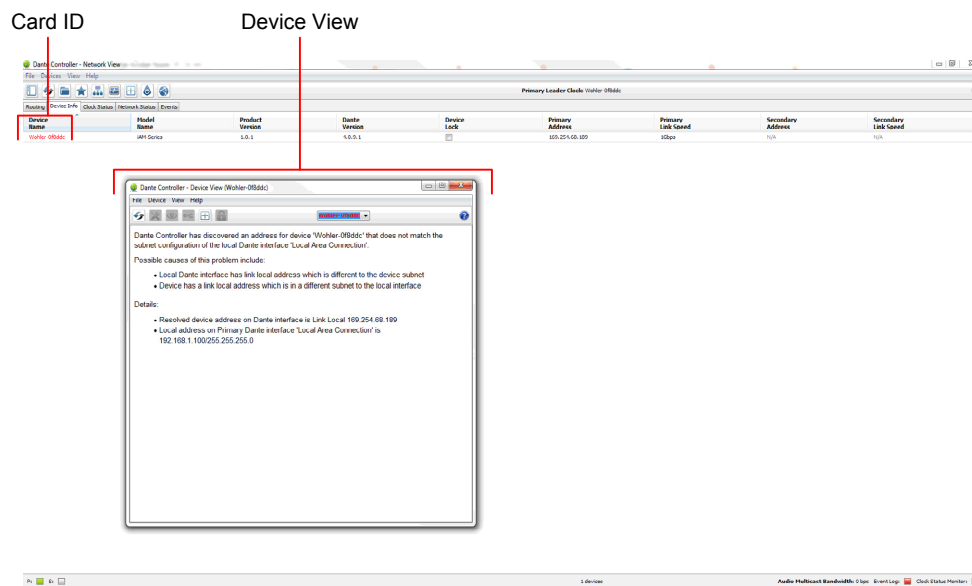

Up to 8 of the 64 AoIP receive channels can be monitored at once in the *iAM1-MIX8-12G*. The *iAM1-MIX8-12G* transmits up to 8 channels. 1 to 8 are the monitored channel in prefade mode. The remaining four are reserved for future use. Currently they are mapped to channels being monitored on meter 1 to 4 in post-fade mode. The eight *iAM1-MIX8-12G* monitored channels are transmitted to the Dante network.

The *iAM1-MIX8-12G* Dante™ AoIP is configured by the *iAM1-MIX8-12G* to receive up to 64 channels and transmit 8 channels of Dante AoIP at 48 kHz or 44.1 kHz audio sample rates. 48 kHz is the *iAM* default rate.


Sample rate selection is left up to the Dante™ Controller device or software. *All devices connected to each other through a Dante network must be set to the same sample rate.* Slight ticking may be heard in the *iAM1-MIX8-12G* monitor when monitoring different input types at different sample rates or if sources are asynchronous.

Dante™ Device Setup

The *iAM1-MIX8-12G* default **Dante Device Name** is “Wohler- ...” followed by the last 6 digits of the Dante port MAC address, as shown in Figure B-2. This name can be changed by the Dante Controller to appear that way on the network, but that will not change the *iAM1-MIX8-12G* unit name appearing on GUI pages and *iAM1-MIX8-12G* **Remote Metering** or **Discovery** pages.

Figure B-2: *iAM1-MIX8-12G* Name

Dante
Device Name

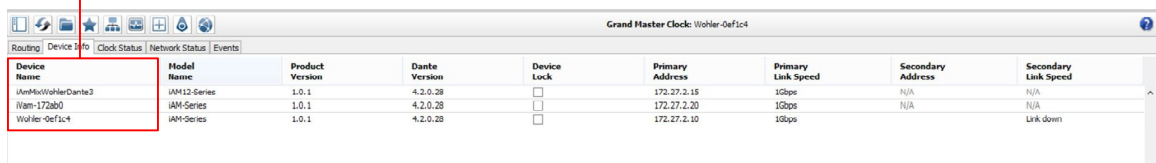


Device Name	Model Name	Product Version	Dante Version	Device Lock	Primary Address	Primary Link Speed	Secondary Address	Secondary Link Speed
iAM1WohlerDante2	iAM12-Series	1.0.1	4.2.0.28	<input type="checkbox"/>	172.27.2.15	10Gbps	N/A	N/A
iAM1-172ab0	iAM1-Series	1.0.1	4.2.0.28	<input type="checkbox"/>	172.27.2.20	10Gbps	N/A	N/A
Wohler-Def1c4	iAM1-Series	1.0.1	4.2.0.28	<input type="checkbox"/>	172.27.2.10	10Gbps		Link down

During initial setup, you may want to manually change the *iAM* unit **Name** in the [System Setup](#) page to match the reassigned **Dante Device Name** for consistency. Refer to Figure B-3.

Figure B-3: Rename iAM

*Change the iAM
AoIP Name*

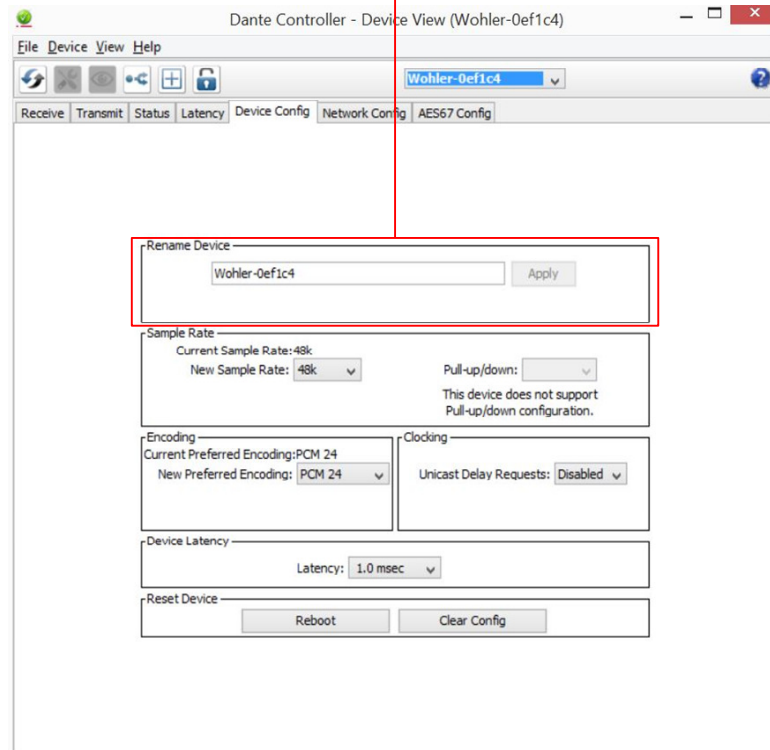

Other changes such as **Latency** settings can be made by the Dante Controller through the **Device View** menus. Some changes may require remote rebooting of the Brooklyn II or Brooklyn III card to take effect, temporarily interrupting audio and publishing the new information to the network.

Important:


Only 44.1 kHz and 48 kHz audio sample rates are currently supported by the *iAM1-MIX8-12G*. The Brooklyn II or Brooklyn III card would accept a Dante Controller command to operate at other rates, without giving an indication it will not be implemented.

Dante Clock Selection

While the Brooklyn’s internal clock is highly accurate, the iAM1-MIX8-12G does not have provisions for external sync clocks, such as those that are GPS or media reference (video genlock or audio word clock) based. So it is generally not the best candidate to be the PTP Master Clock (commonly called the “grandfather clock”) for the network. It can be set as the preferred master if no better clock source exists. Refer to Figure B-4.

The iAM Brooklyn Dante card will serve as a temporary fallback clock source if preferred masters are interrupted. It functions as an accurate slave clock synchronized to the master clock on the network when not operating as the master.

Figure B-4: Clock Selection

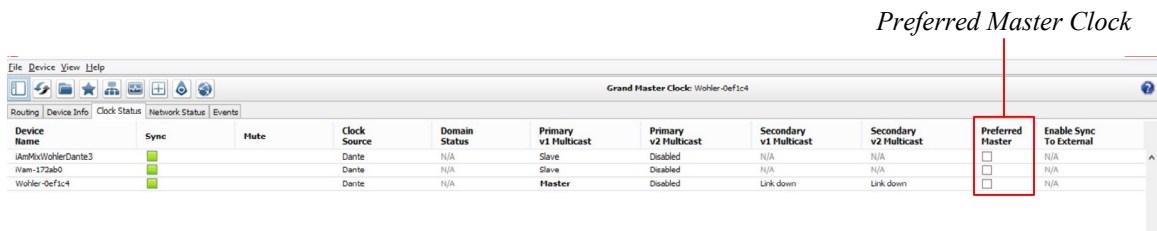

Channel Names

The factory default channel names are set to "01 to 64" for 64 received channels and "Monitor Ch 1" to "Monitor Ch 8" for first 8 transmitted channels. The next 4 transmitted channels are set to "Mix Ch 1" to "Mix Ch 4".

Note: To change channel names please refer Dante controller user manual.

AES67


The *iAM1-MIX8-12G Brooklyn II* or *Brooklyn III* can be configured for AES67 operation. Refer to Figure B-5. AES67 operation with Dante is limited to eight or less receive and transmit channels at 48 kHz sample rates.

24 bit linear (L24) encoding and 1 msec packet time are fixed default transmit parameters.

16 bit (L16) or 24 bit (L24) encoding and 125/250/333/100 µsec packet times can be received.


The **Device View - AES67 Config** menu enables/disables AES67.

Figure B-5: AES67 Enable/Disable

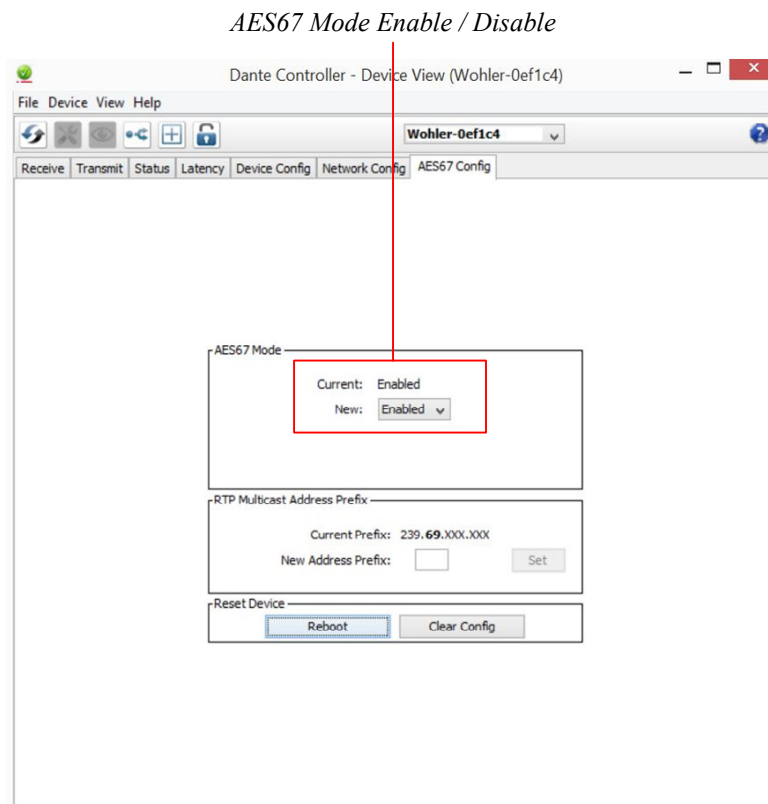


Further, Dante AES67 discovery and operational protocol requires manual assignments for static multicast transmit and receive IP addresses per Dante protocols for discovery and IGMP network operation. Destination addresses in range 239.nnn.0.0 – 239.nnn.255.255, port 5004 or nnn can be configured using the Dante Controller. The default is 69. The destination and receive address range must match. Provisions for this are in **Dante Controller Device View - Network Config**. Refer to Figure B-6.

Figure B-6: Device View - Network Config

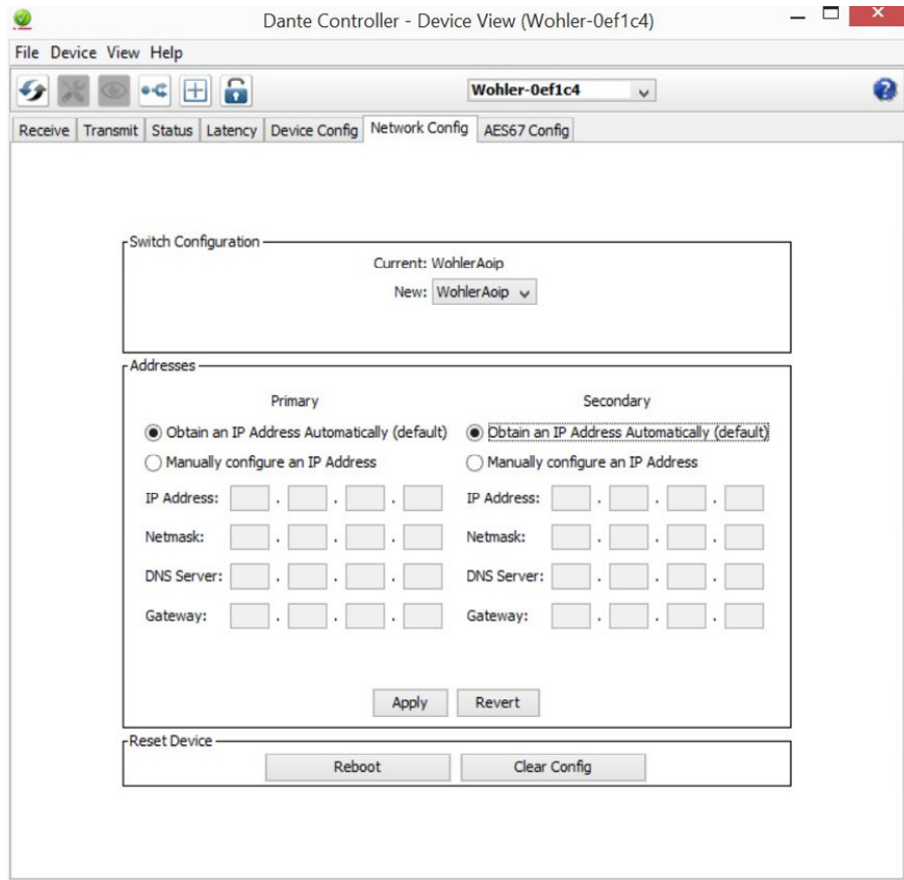

The channels to be multicast are selected in the File menu-**Create Multicast Flows** window shown in Figure B-7.

Figure B-7: Multicast

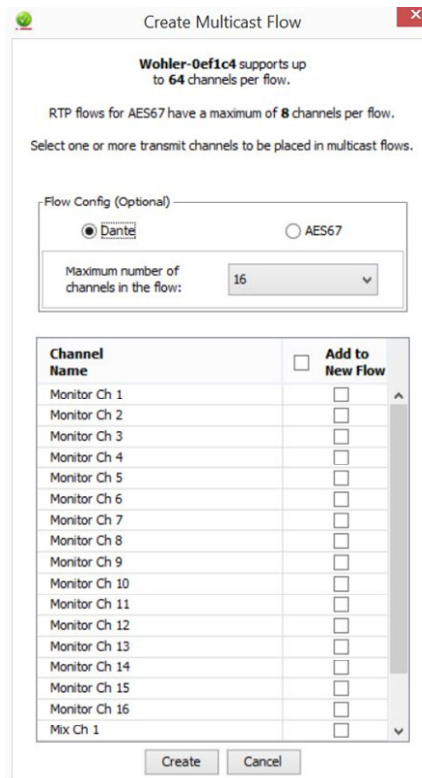

Device Lock

Audinate recently added a feature whereby a remote controller can send a command to lock Dante network device configurations. The *iAM1-MIX8-12G* does not implement the Device Lock command at this time.

Dante Firmware Upgrades

Wohler *iAM1-MIX8-12G* monitors ship with current Brooklyn II or Brooklyn III firmware as of the option installation date. The version information is found in the **Dante Controller Device View-Status** page. *iAM* software/firmware is tested with the latest Dante code release. Therefore it is strongly recommended that *iAM1-MIX8-12G* and Dante software/ firmware be updated at the same time to ensure compatibility and support of the latest features.

Use the Audinate **Dante Firmware Update Manager** Windows or OS X application to update the Dante firmware over the Dante network. Follow the application's installation and usage guide plus any applicable technical notes available.

Additional Information

The following links are provided for those who need more information about the Dante controller or the Dante Firmware update manager.

<https://my.audinate.com/products/firmware-update-manager>

<https://www.audinate.com/products/software/dante-controller>

<https://dev.audinate.com/GA/dante-controller/userguide/pdf/latest>

Dante™ Legal Disclosures

TRADEMARK ATTRIBUTION: Products covered in the manual include licence from Audinate Pty Ltd under US Patents 7747725, 8005939, 7978696, 8171152, European Patent 2255541, Chinese Patent ZL200780026677.0 and other patents pending or issued, see www.audinate.com/patents or such other legend as Audinate may stipulate from time to time to the Manufactured Product and any packaging and marketing materials therefor.

APPENDIX D: Ravenna (ZMAN) Setup

Introduction

Installing the iAM or iVAM product into an existing and functioning Ravenna network using the Merging ZMAN Card is virtually plug and play. The iAM or iVAM rear panel AoIP jack supports 1Gb/s and 100Mb/s Ethernet devices in Ravenna Audio over IP network configurations.

iAM or iVAM channel source selections are made by choosing **Input Type 'AoIP'** in the [Configuration-Configure Presets](#) page regardless of which AoIP option is installed.

Note: In addition to the iAM or iVAM configuration, the Merging ZMAN Card needs to be configured using its own configuration tool. The menus in this configuration tool are shown in this Appendix.

What is in the iAM or iVAM for Ravenna?

The AES67 (SMPTE ST-2110-30) enabled Merging ZMAN Card supports the following features:

RAVENNA-Compatible Talker/Listener

- 1) RFC 3551 – RTP Profile for Audio and Video Conferences
 - a) L16 16-bit linear format defined in RFC 3551 clause 4.5.11
 - b) L24 24-bit linear format defined in RFC 3190 clause 4
 - c) AM824 24-bit Audio as defined in IEC61883-6
 - d) Multicast and unicast session support
 - e) 48 kHz and 96 kHz audio sampling rates
 - f) 1 to 8 audio channels per stream
 - g) Up to 64 streams
- 2) Media clock support
 - a) 48 kHz and 96 kHz
- 3) Hitless Stream Redundancy
- 4) IGMP v3 support
- 5) Session Announcement Protocol (SAP) support

AVB Ethernet Features

AVB uses the concept of streams and channels. A stream is a connection from one talker to one or more listeners. One stream can be made up of 1-60 audio channels. The Ravenna option supports the following AVB features:

- 1) AVB 1722 AVTP with multiple subtypes:
 - a) IEC 61883-6 MBLA
 - b) AM824, 24-bit Audio Encapsulation

- c) Support up to 64 streams
- d) Up to 8 channels per stream
- e) 512+512 Channels of audio
- f) 48kHz and 96kHz sampling rates
- 2) IEEE 802.1Q/SRP
- 3) IEEE 1722.1/AVDECC control
- 4) IEEE 802.1AS/gPTP
- 5) Compatible with Apple OS X devices, such as MacBooks and MacMini computers
- 6) Media clock per the AVnu specification
- 7) Hitless stream redundancy

Configuring the AOIP Merging Option Card

This appendix provides basic information about configuring the Merging ZMAN card by invoking the card's internal configuration application. The Merging card can be configured through a connection to the Ethernet AOIP Port using a browser on the Ravenna network and by using the Merging Aneman Windows application. Aneman is available for free download at:

<https://www.merging.com/support/downloads#aneman>

The iAM or iVAM can be configured using its Front Panel controls or its web interface through its Management port. Details specific to the iAM or iVAM can be found in Chapters 2 and 4 of this manual.

For a Quick Start, set the Source Select menu item on the Front Panel to AOIP to configure iAM or iVAM to receive/source a Ravenna Stream over its AOIP port. The Source Select Menu control also allows selection of a range of channels in groups of 8 channels 1-8 ... 57-64. More details including definition of Presets and individual channel parameters are available by reference to other chapters of this manual.

The Merging Ravenna card runs specific firmware from Merging and augmented by Wohler for use within the iAM or iVAM. The card will not function correctly if the user downloads and installs firmware from any source besides Wohler. The Wohler augmentation includes the ability to support 64 channels.

The Merging card is pre-configured to DHCP mode to obtain its IP address automatically from the Ravenna network. The Ravenna network should be a separate address space from the iAM or iVAM Management port. For example, the iAM or iVAM might be connected to a 10.11.11 subnet and the Ravenna network devices connected together on a 10.15.15 subnet. Aneman and a suitable browser must be resident on a host workstation on the same Ravenna subnet to access the Merging card. For this Appendix, the Ravenna network address will be referred to as <Ravenna subnet>. The Merging card address will then be <Ravenna subnet>.x where x is the specific address of the card on the subnet.

Power the iAM or iVAM and verify the Ethernet connector LEDs are lit and/or blinking. It may take a few minutes for the card to be fully recognized on the Ravenna network after powering the iAM or iVAM.

For Aneman access, the card parameters including its IP address should appear in a


panel at the bottom of the screen. In Aneman, make sure Devices under Menu item View is enabled. Do not proceed until the card shows on Aneman. Right click on that line and select Web Services: Advanced (or Ravenna) to bring up the Merging Ravenna configuration page. Also, the ICON of the card will appear in the main part of the Aneman screen. Double Clicking on the ICON also will load the Configuration screen.

For browser access, the URL is <Ravenna subnet>.x/advanced/index.html. This brings up the Merging Ravenna configuration page. Each tab is explained in the following sections.

Getting Started | General Settings

This tab is shown in the following figure.

Figure D-1: Getting Started | General Settings

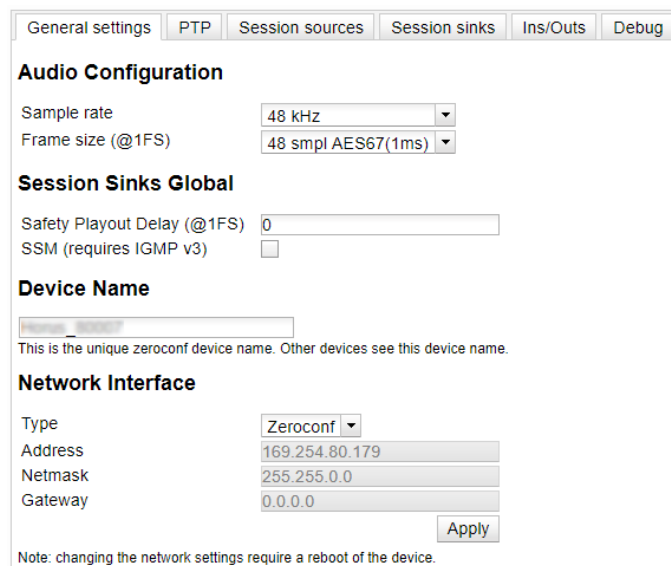


The elements of this tab are as follows:

1. **Device Name:** Enter a useful Device Name for the card, which will show up on other Ravenna devices on the subnet.
2. **Sample Rate:** (44100-48000- 88200-96000-176400-192000-352800-384000)
3. **Frame size (@1Fs):** current frame size (64 - AES67/48 - 32 -16 - 12 -6).
4. **Safety Playout Delay (@1Fs):** The value is described at 1Fs (44.1-48 kHz) in samples. For example, if the value is 10, the additional playout delay will be 20 at 2Fs (88.2-96 kHz), 40 at 4Fs (176.4-192 kHz)
5. **SSM Source-Specific Multicast:** If needed, configure the network switch for IGMP V3.
6. **Network Interface:** Note the address of the card and its type (Zeroconf, DHCP, Static). (If necessary, the address can be changed to another type such as a Static address which must include a Network Mask and Gateway.)

Getting Started | Out-Of-Band NMOS for ST-2110-30 & Ravenna

The Out-Of-Band Control for the Ravenna module is available using the SFP port. Out-Of-Band NMOS is more relevant in 2110 networks, and often Ravenna cards are used to monitor 2110-30 (the Audio essence of 2110). Customers can use any off-the-shelf network SFP's to connect into the ports shown in the following figure.

Figure D-2: AOIP Ports

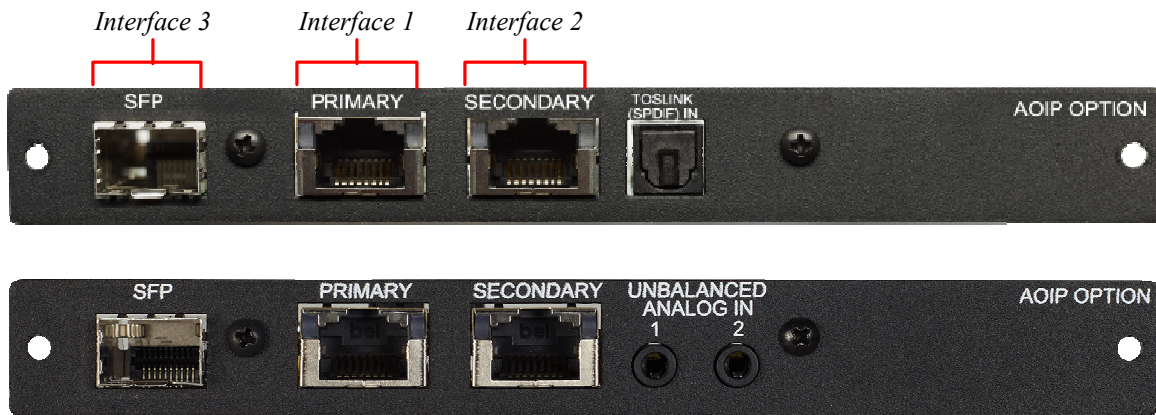

The SFP interface on the Ravenna module can be discovered using ANEMAN as with the Primary and Secondary port.

To use the SFP Interface, make sure the Multi-Interface mode checkbox is enabled. Refer to Figure D-3. The IP address configuration for SFP can be made using the "Interface 3" section as shown in Figure D-3. Note that the IP address settings shown in this Figure are for reference only; you should configure each interface per your network.

On the Ravenna web interface, the following nomenclature is used. "Interface 1" for PRIMARY RJ-45 Port, "Interface 2" for SECONDARY RJ-45 Port, "Interface 3" for SFP port. Refer to Figure D-2. Once the network settings for SFP port are configured, the web interface for Ravenna module can be accessed from any of the three interfaces. The default port numbers used to access the web interface are as follows:

- **"Interface 1" (PRIMARY):** Uses port 80. The web page for Ravenna can be accessed using `http://<zman IP>`
- **"Interface 2" (SECONDARY):** Uses port 81. The web page for Ravenna can be accessed using `http://<zman IP>:81`
- **"Interface 3" (SFP):** Uses port 82. The web page for Ravenna can be accessed using `http://<zman IP>:82`

Figure D-3: SFP Interface Setup

Multi-Interface Mode Checkbox

Multi-Interface mode
Note: must be checked for ST2022-7 support.

Interface 1
Link Up
Name Primary
Type Zeroconf
Address 169.254.27.148
Netmask 255.255.0.0
Gateway 0.0.0.0 Use as Primary Gateway
DNS
Apply

Interface 2
Link Up
Name Secondary
Type Static
Address 192.168.1.11
Netmask 255.255.0.0
Gateway 0.0.0.0 Use as Primary Gateway
DNS 8.8.8.8
Apply

Interface 3
Link Up
Name Control
Mode Control only
Type DHCP
Address 10.11.11.14
Netmask 255.255.0.0
Gateway 10.11.1.1 Use as Primary Gateway
DNS 10.10.10.20
Apply

The Ravenna "Interface 1" and "Interface 2" act as Media as well as control ports. In-band NMOS will still continue to work for customers who have control interface on the same network as the media. SFP or "Interface 3" is a Control Only port and should not be connected to Media Network.

The NMOS settings on the Ravenna module can be enabled using the NMOS tab of the Ravenna Web Interface. The registration server can be configured using a Static address, an mDNS, or a search domain. The settings shown in the following Figure are for reference only.


Figure D-4: NMOS Settings

General settings	PTP	ASIO Clock	Session sources	Session sinks	Ins/Outs	I/O Router	Statistics	NMOS	System
NMOS									
General Settings									
Enable	<input checked="" type="checkbox"/>								
Port	1936								
Flush streamer address on disable	<input type="checkbox"/>								
Set UUID from Names (needs a device restart when changing node name)	<input type="checkbox"/>								
Configure Registration Server									
Disable NMOS to change settings									
Mode	Static address								
Address	10.11.11.241:80								
Search domain	wohler.hq								
IS-04 version	v1.3								
Registration Server									
Server Name									
Host	10.11.11.241								
Address	10.11.11.241								
Port	80								
Registered	false								
Supported versions									
IS-04:	v1.2,v1.3								
IS-05:	v1.0,v1.1								

Getting Started | PTP

This tab is shown in the following figure. This configuration page refers to how your Ravenna network is synchronized to clocks.

Figure D-5: Getting Started | PTP

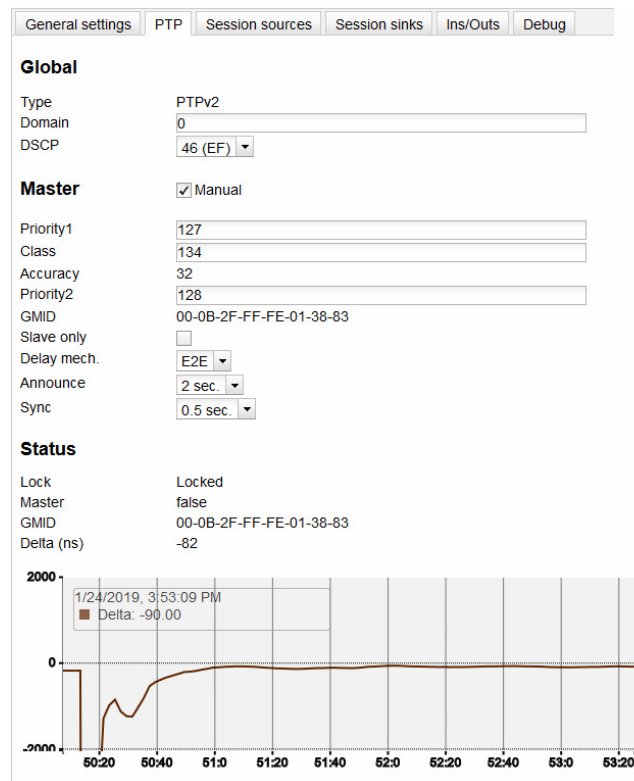

The elements of this tab are as follows:

- Global Settings:** The default value for PTP
 - Domain:** For the Merging Ravenna card this value is 0.
 - DSCP:** 46 for PTP AES67 or 48 for PTP Ravenna.
- Master:** To modify the PTP setting, you must first check the "Manual" checkbox.
 - Priority:** 1 is the main priority value.
 - Class:** This is the Device class. This value should not be modified.
 - Accuracy:** This field cannot be modified.
 - Priority 2:** This is only used if the other parameters do not allow electing a PTP master.
 - GMID:** This is the current GrandMasterID (PTP Master)
 - Slave only:** This forces the Merging device to always be PTP slave.
 - Delay Mech.:** This is PTP Profile related - E2E or P2P
 - Announce:** This is PTP Profile related - PTP announcement interval (1 - 2 - 4 - 8 - 16 seconds)
 - Sync:** This is PTP Profile related (0.0625 - 0.125 - 0.25 - 0.5 seconds)

3. Status:

- a. **Lock:** This shows if the device is locked to PTP (Locked -Locking - Unlocked)
- b. **Master:** This is true or false for the current device.
- c. **GMID:** This is the current GrandMasterID (PTP Master)
- d. **Delta (ns):** This is the time delta between the device and the PTP master.

4. **Graph:** The graph is only active for slave devices and shows the device delta against Master PTP clock.


5. PTP Priority Value:

- a. 1 is the highest priority, 255 the lowest one.
- b. Merging card is by default using Priority 127 when set as PTP Master and 255 when PTP slave.

Getting Started | Session Sources

This tab defines which Streams are to be Sourced from this card. It is shown in the following figure.

Figure D-6: Getting Started | Session Sources

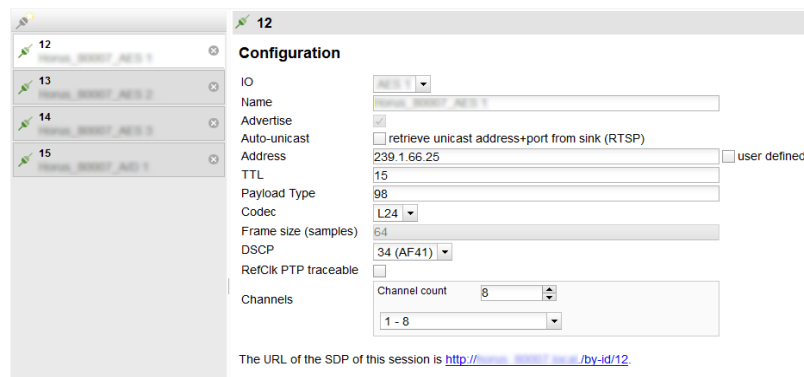

The elements of this tab are as follows:


1. **Create session button:** Create a new session sources by clicking on left ICON.
2. **IO:** Select the physical input (when applicable).
3. **Name:** This is the Source name.
4. **Advertise:** Check to enable source advertising on the network.
5. **Auto-unicast - (RTSP):** Check to automatically retrieve the sink (listener) IP address:port for unicast connection.
6. **Address:** This the stream's multicast address. Note that the user defined checkbox is activated automatically when entering a multicast address manually.
7. **TTL:** Time to Live (also called Hop Limit) - This value should not be modified.

8. **Payload type:** RTP Payload type - This value should not be modified.
9. **Codec:** The possible bit rate values are L24, L16, DSD64, DSD64_32, DSD128, DSD128_32, and DSD256. Note that these values are sampling rate dependent.
10. **Frame size (samples):** This the frame size of the current source.
11. **DSCP:** The audio DSCP should be set to 34 for RTP AES67 or 46 for RTP Ravenna.
12. **RefClk PTP traceable:** This feature is useful when you want to connect a stream through Internet (for example with two PTP Masters (GPS) at each location). This allows making connections with devices locked to different traceable PTP Masters. Refer also to Ignore RefClk GMID - accept source locked to any PTP master, on the Session Sinks tab.
13. **Channels:** This is the number of channels in the stream. The drop-down menu allows selection of specific channel range if the number of channels is less than 8.
14. **The URL of the SDP of this session:** This allows saving of the Session Description into a file, which is useful for specific third party devices if a manual SDP has to be provided.

Getting Started | Session Sinks

This tab defines streams which are sinked in this card. It is shown in the following figure.

Figure D-7: Getting Started | Session Sinks

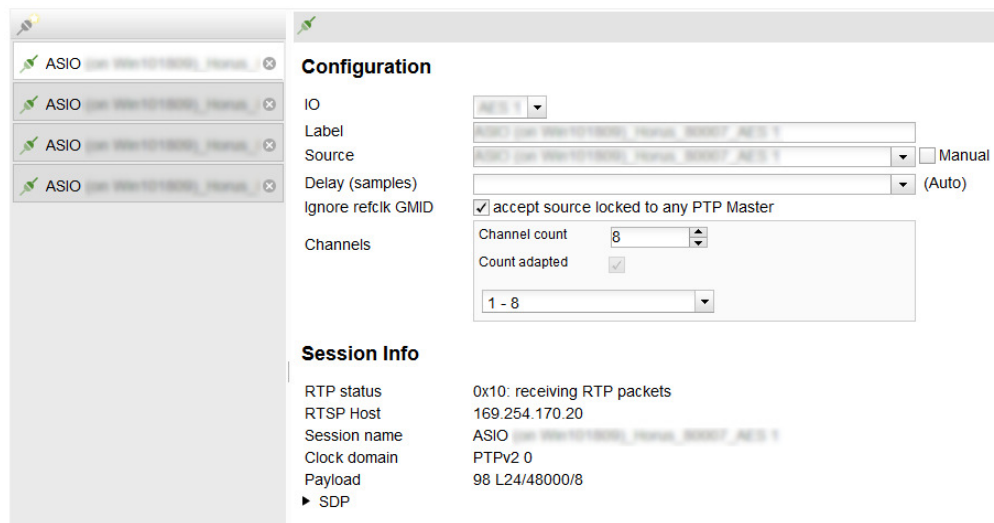

The elements of this tab are as follows:

1. **Create session button:** Create new session sinks by clicking on left ICON.
2. **IO:** Select the physical output (when applicable).
3. **Label:** This is the Sink name.
4. **Source:** This is a drop down menu to select a source (both sap and bonjour advertised sources are automatically listed).

5. **Manual:** This allows manual entry of an SDP.
6. **Delay (samples):** This sets the playback delay. 0 is automatic delay.
7. **Ignore RefClk GMID - accept source locked to any PTP master:** This feature is useful when you want to connect a stream through Internet (for example with two PTP Masters (GPS) at each location. This allows making of connections with devices locked to different traceable PTP Masters. See RefClk PTP traceable on the Session Sources tab.
8. **Channels:** Channel count: The drop-down menu allows selection of specific channel range if the number of channels is smaller than 8.

Getting Started | Session Info

1. **RTP Status:** The following bit positions indicate the connection status:
 - 0x10: receiving RTP packets (OK)
 - 0x01: wrong RTP sequence id
 - 0x02: wrong RTP SSRC
 - 0x04: wrong RTP payload type
 - 0x08: wrong RTP SAC
 - 0x20 stream has been muted
 - 0x40: Horus implementation - an incoming stream is muted


Important Note: The above error numbers are summed. For example, Stream Muted and Wrong Payload together are indicated by 0x24.

2. **Playout Delay:** This is the current playout delay on the selected sink in samples and ms.
3. **RTSP Host:** This is the connected source IP Session name: defined in SDP (usually the same as the source name)
4. **Clock Domain:** This is the PTP clock type and domain
5. **Payload:** Selections are Payload / Codec / Sampling Rate / Number of Channels
6. **SDP:** This displays detailed SDP information on the current stream.

Getting Started | Ins/Outs

This tab allows you to change the name of the specific Inputs and/or Outputs.


Figure D-8: Getting Started | Ins/Outs

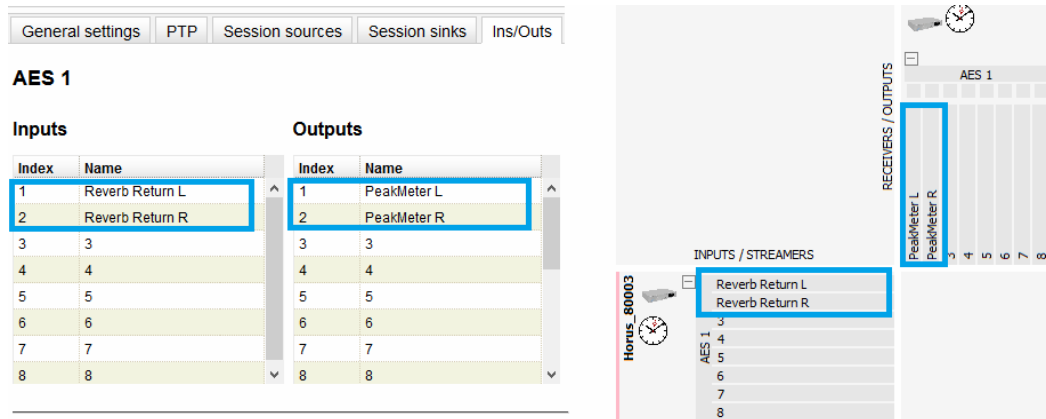

Getting Started | I/O Router

This page allows remapping of incoming channels to different internal channel assignments. For example, Stream channel 1 can be remapped to Merging card Channel 0, and so on.

Figure D-9: Getting Started | I/O Router

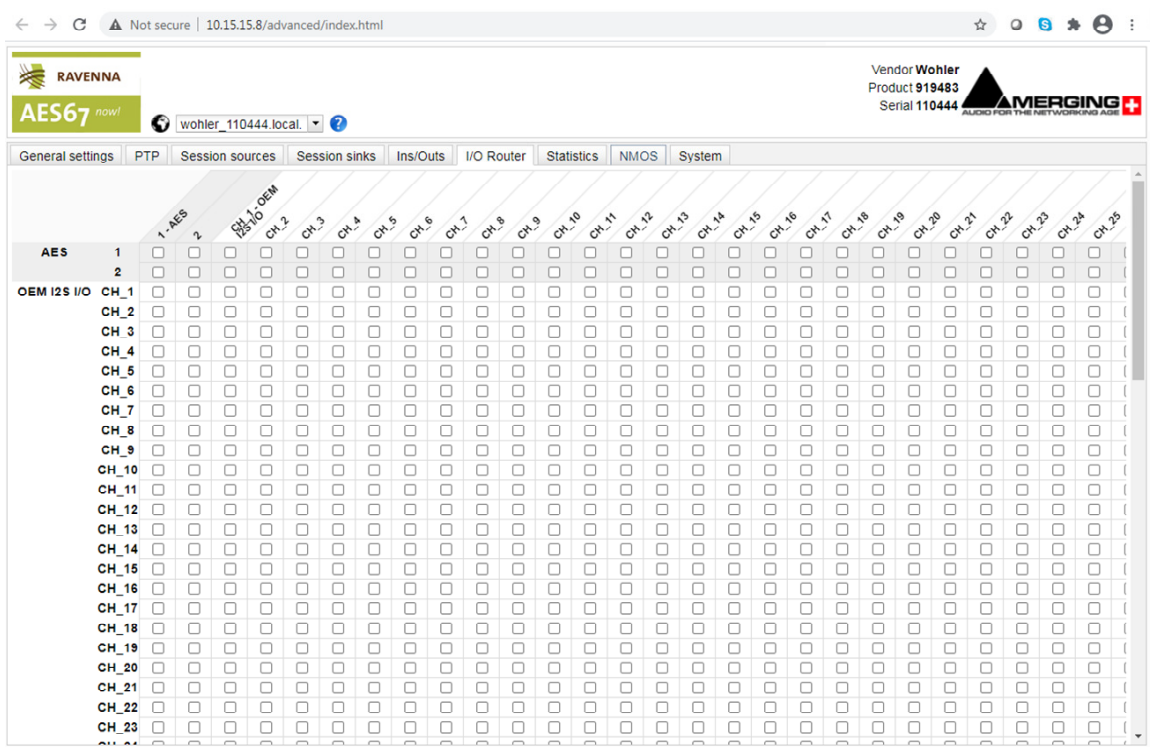

Operation:

Connecting Remote Source to Local Sink

This instruction assumes another Ravenna device is active on the network and sourcing a multicast stream. The Merging Configuration section for Session Sink controls how to configure the card to receive the stream and provide it to the IAM interface for display on meters and speakers, etc. The iAM or iVAM must be set to receive AOIP from the Source Select Front Panel menu or from a browser iAM or iVAM GUI.

Ravenna Streams can contain up to 8 channels of information. The collections of channels in a specific Stream are termed Flows. For example, to source an SDI 16 channel signal might be accomplished by two Flows, each consisting of 8 channels. A stereo AES Flow consists of one Flow of two channels.

ZMAN Session Sinks

This assumes that 1 or more sources are present on the AOIP Ravenna network. Right Select Advanced on the entry for the Merging ZMAN device in Aneman. This brings up the browser page with tab set to General configuration GUI for the ZMAN card. This is shown in Figure D-1.

Use the following procedure:


1. Select the **Session Sinks** tab and use the **Create Session Sinks** icon (in the upper left corner) to see the available source Flows.
2. Create an entry on the left panel for each source Flow to be configured.
3. Select the desired Flow and set the number of channels in the Flow. Select the desired range to direct the Flow to the internal channels of the iAM or iVAM.
4. Click the matrix, as shown in Figure D-10, to direct the incoming channels to the desired iAM or iVAM channels.

For example, a 16 channel SDI source consists of two 8 channel Flows. One could be mapped to channels 1-8 and the other could be mapped to 9-16.

Notice that the Tab I/O Router duplicates the Session Sinks matrix and can be used to map channels from input source assignments to iAM or iVAM channels also.

Input channels can be mapped to more than one iAM or iVAM channel by selecting additional matrix elements to map input channels 1-8 to both 1-3 and 5-8.

Figure D-10: Session Sinks Tab

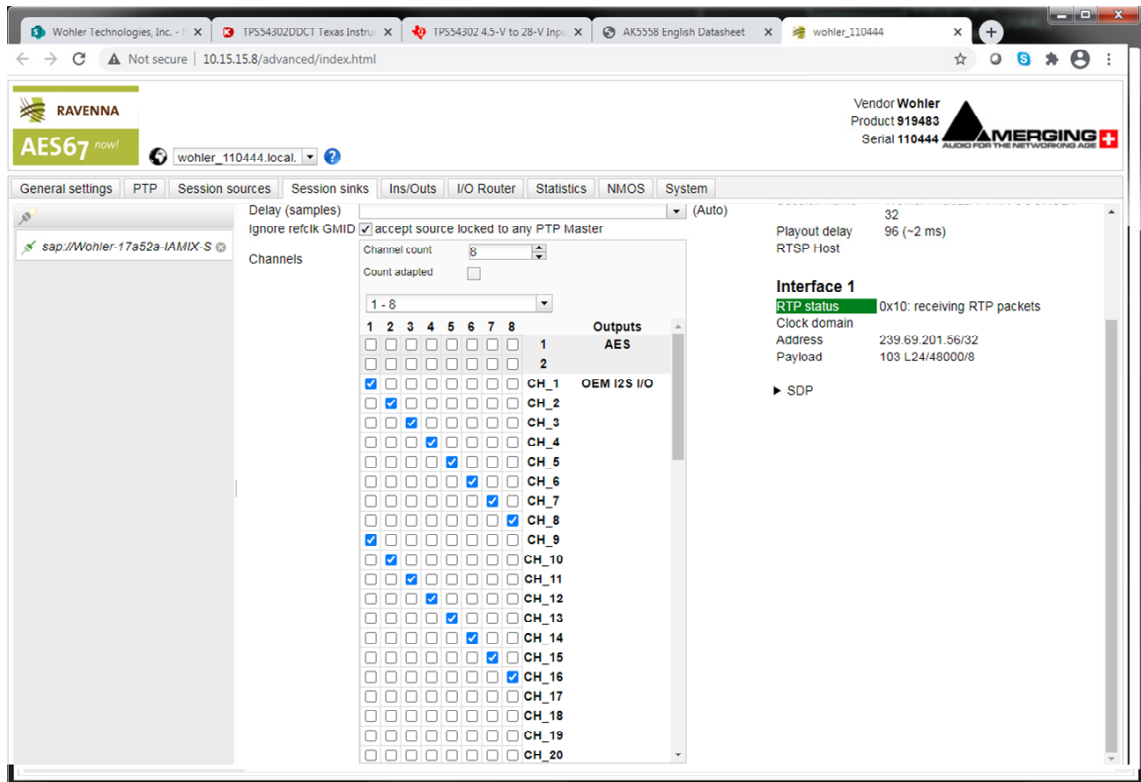


To avoid confusion if monitoring more than one Flow, especially if the various source Flows have overlapping channel numbers, use the matrix to direct Flows to higher channel ranges. For example, for monitoring 2 SDI sources (four 8 channel Flows), assign two flows to 1-8 and 9-16 and the next SDI signal to 17-24 and 25-32. Touch the iAM or iVAM AOIP selection menu to select the proper range to monitor, up to 57-64.

Select **Apply** to enable the Sink process, which results in the meters and audio becoming available on the iAM or iVAM.

ZMAN Session Sources

If the ZMAN card is to Source Flows, use the **Session Sources** tab. Refer to Figure D-11. The procedure is similar to defining Sinks with the additional step to provide the Flow a name to appear on other units in the network. Select the channel range with a maximum of 8 channels per Flow.

Figure D-11: Session Sources Tab

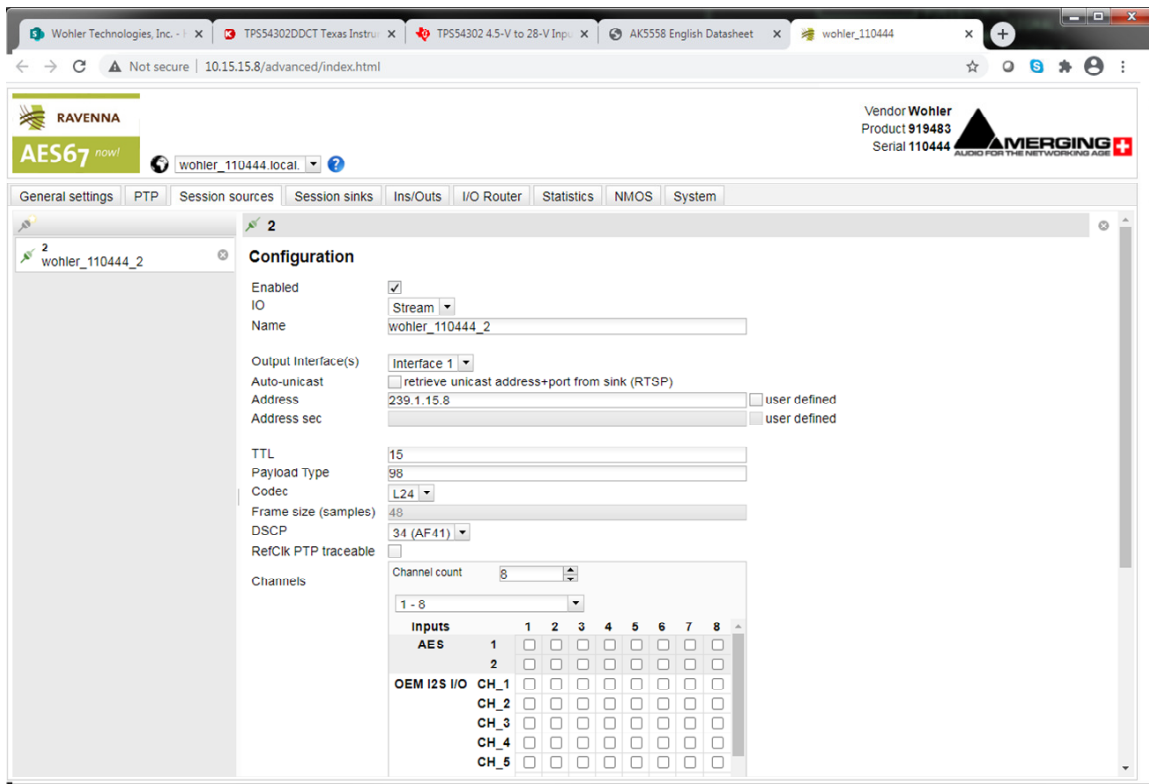


ZMAN Updating

The ZMAN card is pre-initialized with the correct Wohler firmware load. In case of future upgrades, use the following steps:

1. The ZMAN module update manager is accessible using the ZMAN web interface. The default page displayed is as below.

Figure D-12: Default Screen

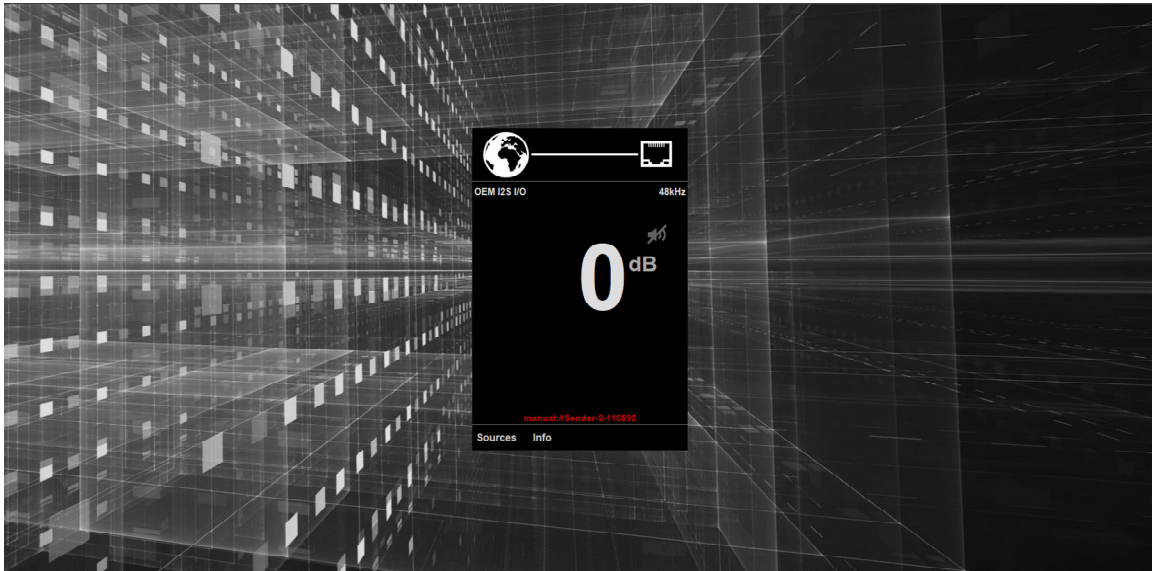

2. When this web page has loaded, select **Info** to navigate to the firmware update screen which appears as follows.

Figure D-13: Firmware Update Screen



3. Click the Firmware Update **Open** button.
4. When **Open** is selected, a new webpage allows you to select the firmware file. ZMAN firmware consists of custom firmware packages created by Wohler. Make sure that only firmware packages provided by Wohler are used

for updating the Wohler supplied ZMAN modules. Press the **Select File** as shown in the following figure.

Figure D-14: Firmware Selection Screen



5. Once **Select File** is pressed, the screen shown in the following figure is displayed. This brings up a web page which prompts for the location of the Wohler provided upgrade file. The file should resemble the following:

firmware_1.9.0_iVAM_wohler.oem

Select **Update** to begin the update process.

Figure D-15: Update File Selection Screen




6. The update takes 15-20 minutes to complete.

Please make sure the unit is not rebooted or shut down while the ZMAN update is in process.


While the update is taking place, the screen in the following figure is displayed. It will provide a running estimate of the percentage of the update that has been completed so far.

Figure D-16: Updating in Process Screen

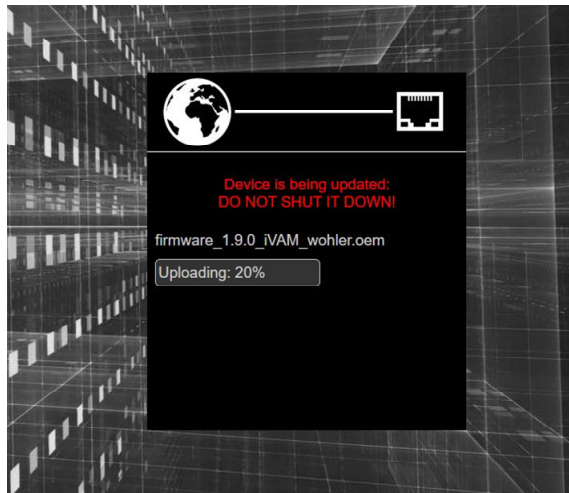

7. When the update has been completed, the following screen is displayed. Click the **Reboot Device** button to reboot the ZMAN module after the successful update.

Figure D-17: Update Successful Screen

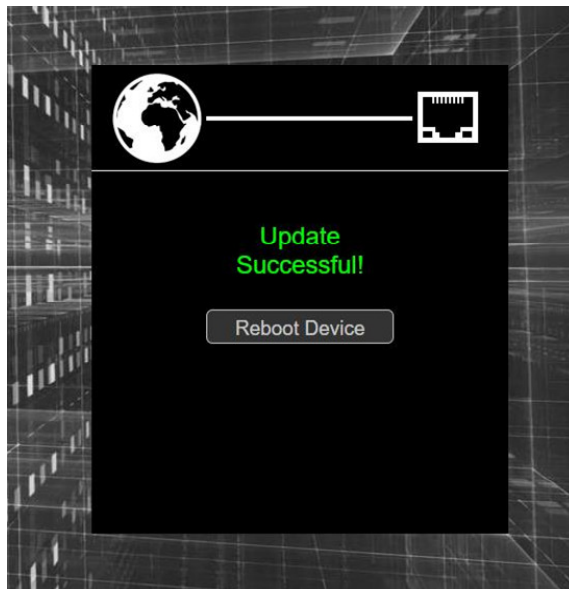

8. Close the web pages and return to Aneman to set up Sources and Sinks.

APPENDIX E: API Documentation

Introduction

This appendix discusses ways to use the Application Program Interface (API) to allow third party equipment to remotely access options and settings of the *iAM1-MIX8-12G*. It includes specific code examples for commonly used requests. The API uses JavaScript Object Notation (JSON) as its communication language.

Follow the instructions in the **First Time IP Assignments** section of Chapter 4 to achieve the required network connection.

API: Presets

1. GET Active Presets

Method: GET

/api/cf/presets/current

Example Response:

```
{
  "serial_number": "123456",
  "model": "MIX8",
  "version": 1.3,
  "name": "",
  "result": {
    "group": {
      "Id": 1,
      "Name": "G1"
    },
    "preset": {
      "Data": null,
      "Favorite": 0,
      "Id": 2,
      "Name": "SDI_Manual"
    }
  }
}
```

2. GET Preset Configuration

Method: GET

/api/cf/presets/<int:preset ID>

Example Response:

```
{
  "error": null,
  "params": {
    "PresetId": 2
  },
  "result": {
    "GroupId": 1,
    "Favorite": 0,
    "Data": {
      "Name": {
        "Preset": "SDI_Autofill",
        "Program": "",
        "Group": "newGrpNameSdi"
      },
      "MeterSet": {
        "6": {
          "Speaker": "Right",
          "DelayMs": 0,
          "Source": {
            "Slot": 0,
            "Cage": 2,
            "Type": "SDI",
            "ConnectorType": "BNC",
            "Channel": 6,
            "InputNo": 1,
            "InputIndex": 1
          },
          "VolumeDb": 0
        },
        "8": {
          "Speaker": "Right",
          "DelayMs": 0,
          "Source": {
            "Slot": 0,
            "Cage": 2,
            "Type": "SDI",
            "ConnectorType": "BNC",
            "Channel": 8,
            "InputNo": 1,
            "InputIndex": 1
          }
        }
      }
    }
  }
}
```

```

    },
    "VolumeDb": 0
  },
  "13": {
    "Speaker": "Left",
    "DelayMs": 0,
    "Source": {
      "Slot": 0,
      "Cage": 0,
      "Type": "None",
      "ConnectorType": "None",
      "Channel": 0,
      "InputNo": 0,
      "InputIndex": 0
    },
    "VolumeDb": 0
  },
  "14": {
    "Speaker": "Right",
    "DelayMs": 0,
    "Source": {
      "Slot": 0,
      "Cage": 0,
      "Type": "None",
      "ConnectorType": "None",
      "Channel": 0,
      "InputNo": 0,
      "InputIndex": 0
    },
    "VolumeDb": 0
  },
  "3": {
    "Speaker": "Left",
    "DelayMs": 0,
    "Source": {
      "Slot": 0,
      "Cage": 2,
      "Type": "SDI",
      "ConnectorType": "BNC",
      "Channel": 3,
      "InputNo": 1,
      "InputIndex": 1
    },
    "VolumeDb": 0
  },
  "9": {
    "Speaker": "Left",
    "DelayMs": 0,
    "Source": {
      "Slot": 0,
      "Cage": 0,

```

```

        "Type": "None",
        "ConnectorType": "None",
        "Channel": 0,
        "InputNo": 0,
        "InputIndex": 0
    },
    "VolumeDb": 0
},
"10": {
    "Speaker": "Right",
    "DelayMs": 0,
    "Source": {
        "Slot": 0,
        "Cage": 0,
        "Type": "None",
        "ConnectorType": "None",
        "Channel": 0,
        "InputNo": 0,
        "InputIndex": 0
    },
    "VolumeDb": 0
},
"5": {
    "Speaker": "Left",
    "DelayMs": 0,
    "Source": {
        "Slot": 0,
        "Cage": 2,
        "Type": "SDI",
        "ConnectorType": "BNC",
        "Channel": 5,
        "InputNo": 1,
        "InputIndex": 1
    },
    "VolumeDb": 0
},
"4": {
    "Speaker": "Right",
    "DelayMs": 0,
    "Source": {
        "Slot": 0,
        "Cage": 2,
        "Type": "SDI",
        "ConnectorType": "BNC",
        "Channel": 4,
        "InputNo": 1,
        "InputIndex": 1
    },
    "VolumeDb": 0
},
"12": {

```

```

    "Speaker": "Right",
    "DelayMs": 0,
    "Source": {
        "Slot": 0,
        "Cage": 0,
        "Type": "None",
        "ConnectorType": "None",
        "Channel": 0,
        "InputNo": 0,
        "InputIndex": 0
    },
    "VolumeDb": 0
},
"11": {
    "Speaker": "Left",
    "DelayMs": 0,
    "Source": {
        "Slot": 0,
        "Cage": 0,
        "Type": "None",
        "ConnectorType": "None",
        "Channel": 0,
        "InputNo": 0,
        "InputIndex": 0
    },
    "VolumeDb": 0
},
"7": {
    "Speaker": "Left",
    "DelayMs": 0,
    "Source": {
        "Slot": 0,
        "Cage": 2,
        "Type": "SDI",
        "ConnectorType": "BNC",
        "Channel": 7,
        "InputNo": 1,
        "InputIndex": 1
    },
    "VolumeDb": 0
},
"2": {
    "Speaker": "Right",
    "DelayMs": 0,
    "Source": {
        "Slot": 0,
        "Cage": 2,
        "Type": "SDI",
        "ConnectorType": "BNC",
        "Channel": 2,
        "InputNo": 1,

```

```

        "InputIndex": 1
    },
    "VolumeDb": 0
},
"15": {
    "Speaker": "Left",
    "DelayMs": 0,
    "Source": {
        "Slot": 0,
        "Cage": 0,
        "Type": "None",
        "ConnectorType": "None",
        "Channel": 0,
        "InputNo": 0,
        "InputIndex": 0
    },
    "VolumeDb": 0
},
"1": {
    "Speaker": "Left",
    "DelayMs": 0,
    "Source": {
        "Slot": 0,
        "Cage": 2,
        "Type": "SDI",
        "ConnectorType": "BNC",
        "Channel": 1,
        "InputNo": 1,
        "InputIndex": 1
    },
    "VolumeDb": 0
},
"16": {
    "Speaker": "Right",
    "DelayMs": 0,
    "Source": {
        "Slot": 0,
        "Cage": 0,
        "Type": "None",
        "ConnectorType": "None",
        "Channel": 0,
        "InputNo": 0,
        "InputIndex": 0
    },
    "VolumeDb": 0
}
},
"DolbyDecoderConf": null,
"Clusters": [
    {
        "Name": "Stereo 2.0 #1",

```

```

        "NumberOfMeters": 2,
        "FirstMeter": 1,
        "Type": "Stereo",
        "MuteOnPresetRecall": true
    },
    {
        "Name": "Stereo 2.0 #2",
        "NumberOfMeters": 2,
        "FirstMeter": 3,
        "Type": "Stereo",
        "MuteOnPresetRecall": true
    },
    {
        "Name": "Stereo 2.0 #3",
        "NumberOfMeters": 2,
        "FirstMeter": 5,
        "Type": "Stereo",
        "MuteOnPresetRecall": true
    },
    {
        "Name": "Stereo 2.0 #4",
        "NumberOfMeters": 2,
        "FirstMeter": 7,
        "Type": "Stereo",
        "MuteOnPresetRecall": true
    },
    {
        "Name": "Stereo 2.0 #5",
        "NumberOfMeters": 2,
        "FirstMeter": 9,
        "Type": "Stereo",
        "MuteOnPresetRecall": true
    },
    {
        "Name": "Stereo 2.0 #6",
        "NumberOfMeters": 2,
        "FirstMeter": 11,
        "Type": "Stereo",
        "MuteOnPresetRecall": true
    },
    {
        "Name": "Stereo 2.0 #7",
        "NumberOfMeters": 2,
        "FirstMeter": 13,
        "Type": "Stereo",
        "MuteOnPresetRecall": true
    },
    {
        "Name": "Stereo 2.0 #8",
        "NumberOfMeters": 2,
        "FirstMeter": 15,

```

```

        "Type": "Stereo",
        "MuteOnPresetRecall": true
    }
],
"DolbyInputSource": {
    "Slot": 0,
    "Cage": 0,
    "Type": "None",
    "ConnectorType": "None",
    "InputNo": 0,
    "Pair": 0
},
"VideoSource": {
    "Slot": 0,
    "Type": "None",
    "InputNo": 0
},
"ConnectorTypeOptions": {
    "0": {
        "MADI": {
            "1": {
                "MADI": {
                    "ConnectorTypeOption": "BNC"
                }
            }
        }
    }
},
"ApplyCdlb": true,
"ApplyCor": true,
"SpeakerDelayMs": 0,
"AudioOutputRouting": null,
"SystemClockSource": {
    "Slot": 0,
    "Cage": 2,
    "Type": "SDI",
    "ConnectorType": "BNC",
    "InputNo": 1,
    "Pair": 1
},
"PhasePairs": 254,
"ApplyCpi": true,
"DolbyDetection": {
    "NonAudio": "Enabled",
    "PaHeader": "Enabled"
},
"ApplyDZMeterScreen": false
},
"PresetId": 2,
"PresetName": "SDI_Autofill",
"GroupName": "newGrpNameSdi"

```

```
}  
}
```

3. GET list of groups/presets

Method: GET

/api/cf/groups

Example Response:

```
{  
  "params": null,  
  "error": null,  
  "result": [  
    {  
      "Presets": [  
        {  
          "Favorite": 0,  
          "Id": 3,  
          "Name": "SDI_Autofill"  
        },  
        {  
          "Favorite": 0,  
          "Id": 2,  
          "Name": "SDI_Manual"  
        }  
      ],  
      "Id": 1,  
      "Name": "G1"  
    }  
  ]  
}
```

4. GET to recall the preset

Method: GET

api/op/presets/<int:presetID>/activate

Example Response:

```
{  
  "params": {  
    "PresetId": 2  
  },  
  "error": null,  
  "result": {  
    "GroupId": 1,  
    "PresetName": "SDI_Manual",  
    "GroupName": "G1",  
  }  
}
```

```
        "PresetId": 2
      }
    }
  }
```

5. POST to delete the group

Method: POST

api/op/group/<int:groupID>/delete

Example Response:

```
{
  "params": {
    "GroupId": 2
  },
  "error": null,
  "result": {
    "GroupId": 2
  }
}
```

6. POST to delete the preset

Method: POST

api/op/preset/<int:presetID>/delete

Example Response:

```
{
  "params": {
    "PresetId": 1
  },
  "error": null,
  "result": {
    "PresetId": 1
  }
}
```

7. POST to rename group

Method: POST

/api/op/group/<int:groupID>/newGrpNameSdi/rename

Example Response:

```
{
  "params": {
    "GroupId": 1,
    "GroupName": "newGrpNameSdi"
  },

```

```

    "error": null,
    "result": {
      "GroupId": 1,
      "GroupName": "newGrpNameSdi"
    }
  }
}

```

8. POST to rename preset

Method: POST

/api/op/preset/<int:presetID>/newPresetNameTest/rename

Example Response:

```

{
  "error": null,
  "params": {
    "PresetId": 1,
    "PresetName": "newPresetNameTest"
  },
  "result": {
    "PresetId": 1,
    "PresetName": "newPresetNameTest"
  }
}

```

9. POST to set preset as Favorite

Method: POST

/api/op/preset/<int:presetID>/<favoriteVal>/favorite

Example Response:

```

{
  "error": null,
  "params": {
    "PresetId": 4,
    "Favorite": 1
  },
  "result": {
    "PresetId": 4,
    "Favorite": 1
  }
}

```

10. Source Select

Method: POST

/api/op/sourceselect

1. Body content for SDI/SMPTE-2022-6/ SMPTE-2110

```

{
  "SourceType": "<String: SDI Input Source>",
  "ChannelGroup": <Int: 1-2>
}

```

```
}  
Note: Allowed SDI input sources are:  
"Bnc-1.Sdi",  
"Bnc-2.Sdi",  
"Bnc-3.Sdi",  
  
"Sfp-1.Sdi",  
"Sfp-1.Smpte2022",  
"Sfp-1.Smpte2110",  
"Sfp-2.Sdi",  
"Sfp-2.Smpte2022",  
"Sfp-2.Smpte2110",  
  
"Sfp-3.Sdi",  
"Sfp-3.Smpte2022",  
"Sfp-3.Smpte2110",  
e.g.
```

```
{  
  "SourceType": "Sfp-1.Smpte2022",  
  "ChannelGroup": 2  
}
```

2. Body content for MADI

```
{  
  "SourceType": <String: MADI Input Source>,  
  "ChannelGroup": <Int: 1-8>  
}
```

Note: Allowed MADI input sources are
"Madi.Coax" and
"Madi.Optical"

ChannelGroup 1 => Channels 1-8 and
ChannelGroup 2 => Channels 9-16 and so on

e.g.

```
{  
  "SourceType": "Madi.Coax",  
  "ChannelGroup": 6  
}
```

3. Body content for Analog

```
{  
  "SourceType": "Analog.XLR"  
}  
{  
  "SourceType": "Analog.DB25"  
}  
{  
  "SourceType": "Unbal-Analog-1"  
}
```

```
{
  "SourceType": "Unbal-Analog-2"
}
```

4. Body content for Aes

```
{
  "SourceType": "Aes"
}
```

5. Body content for Aoip

```
{
  "SourceType": "Aoip",
  "ChannelGroup": <Int: 1-8>
}
```

Note: ChannelGroup 1 => Channels 1-8 and
ChannelGroup 2 => Channels 9-16 and so on

6. Body content for TOSLINK

```
{
  "SourceType": "Toslink"
}
```

Example Response:

```
{
  "unit_name": "",
  "model": "iAM1-MIX8",
  "api_version": 1,
  "message": "Input Source Toslink has been applied successfully",
  "serial_number": "123456",
  "status": 200
}
```

APPENDIX F: Out of Band Control

Introduction


This appendix describes how exert Out of Band control over the optional SFP-2110 module furnished by Wohler Technologies and manufactured by Embrionix.

It supports following features:

SFP IP Address Configuration

You may change the IP address of a 2110 or 2022-6 SFP. This can be done using the **System Setup | Sfp Information | Network** tab of the Wohler Web Server, as shown in Figure F-1.

Figure F-1: SFP IP Address Configuration

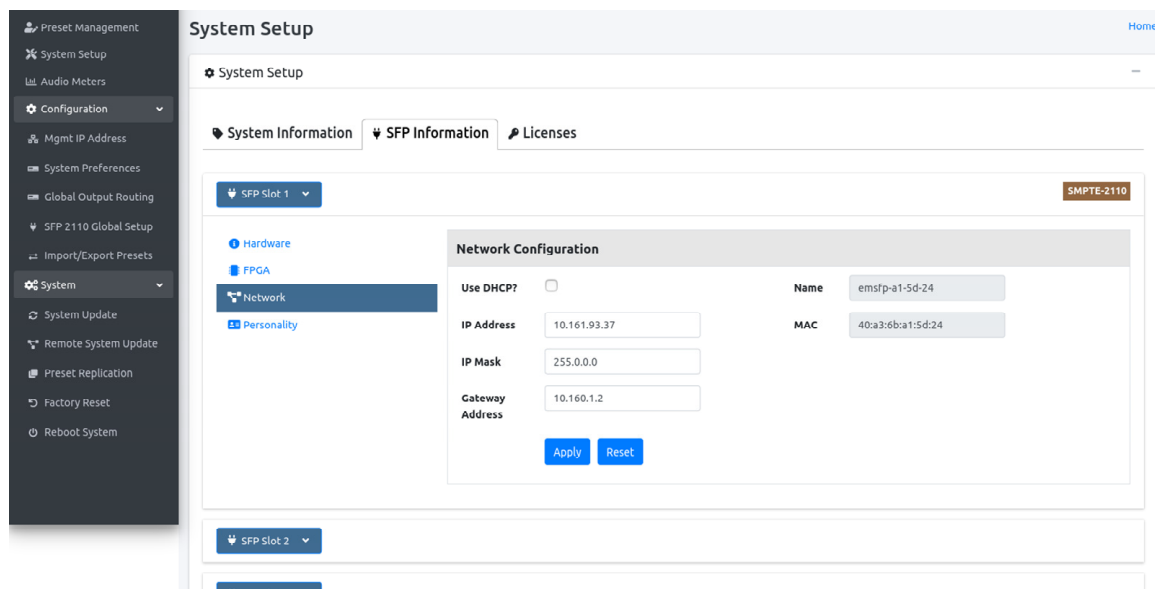

SFP System Configuration

You may change the Personality of an SFP using the **System Setup | SFP Information | Personality** tab of the Wohler Web Server. If the Embrionix SFP is a combo SFP module, you may also switch from 2110 to 2022 using this feature. All the personalities loaded on a SFP are displayed on the tab, as shown in Figure F-2.


Figure F-2: SFP Personality Configuration

Personality		Apply	Reset
<input type="checkbox"/>	Approved	True	
	Description	SMPTE-2022-6/7 decap, 2-channel	
	Short Description	SMPTE-2022-6/7	
	Id	2	
	Tag	0x00000938	
	Version	4.7	
	Wohler Part Number	848345	
<input checked="" type="checkbox"/>	Approved	True	
	Description	SMPTE-2110, 1-channel	
	Short Description	SMPTE-2110	
	Id	4	
	Tag	0x0000115e	
	Version	3.10	
	Wohler Part Number	848344	

SFP 2110 Configuration


If a 2110 firmware is loaded, the Wohler Web-GUI can be used to configure Audio/Video Flows of the SFP. The **Out of Band On/Off Switch** at the top of the **SFP 2110 Global Setup** page controls whether the out of band settings will be applied to the SFP or not. If the SFP is controlled through an In Band mechanism either using NMOS/Ember+ or MNSET, this setting should be kept **Off**. This is shown in Figure F-3.

Figure F-3: Out of Band Switch: **Off** Position

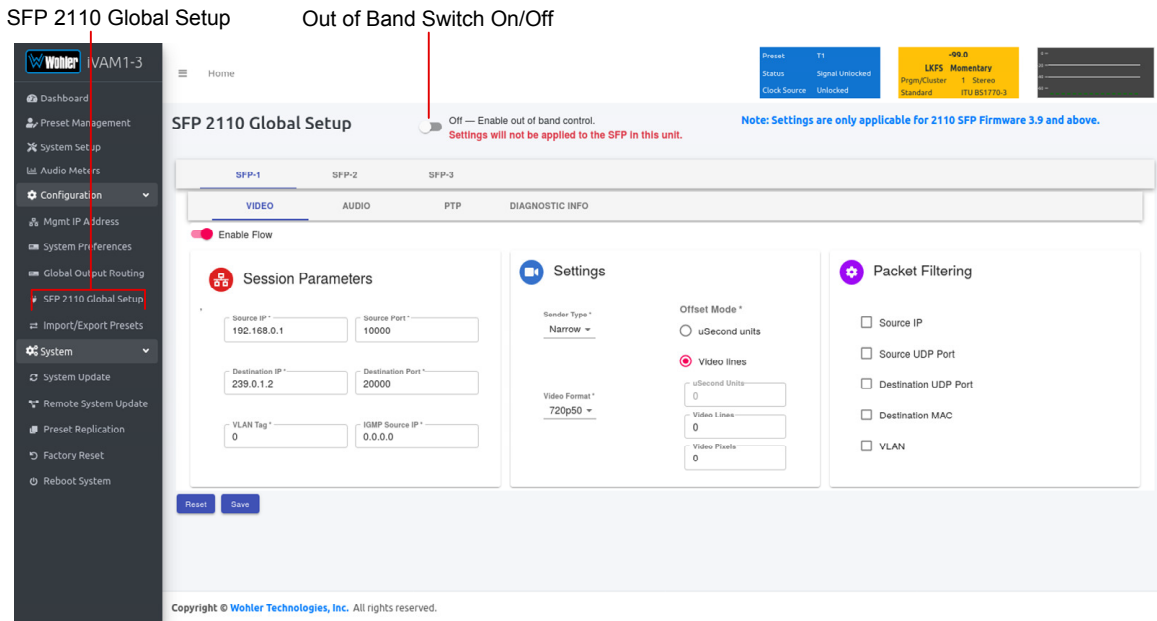

When the **Out of Band On/Off Switch** is turned **On**, as shown in Figure F-4, the Wohler monitor will internally communicate with the SFP to configure the flow information.

Figure F-4: Out of Band Switch: On Position

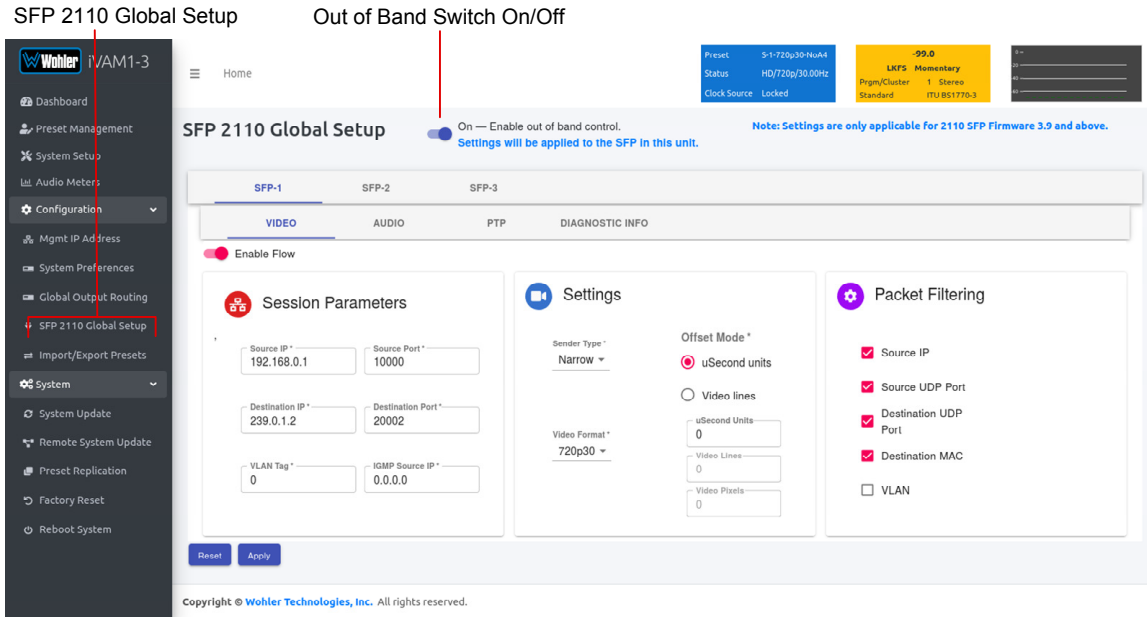

You may define a global configuration using the “SFP 2110 Global Setup” or define it on per Preset basis. Refer to the **SFP 2110 Preset Setup** section later in this Appendix. The global configuration will be used for Source Select. Refer Figures F-3 and F-4 for Video parameters. Refer to Figures F-5 and F-6 for Audio parameters. Refer to Figure F-7 for PTP parameters.

Figure F-5: Audio Parameters

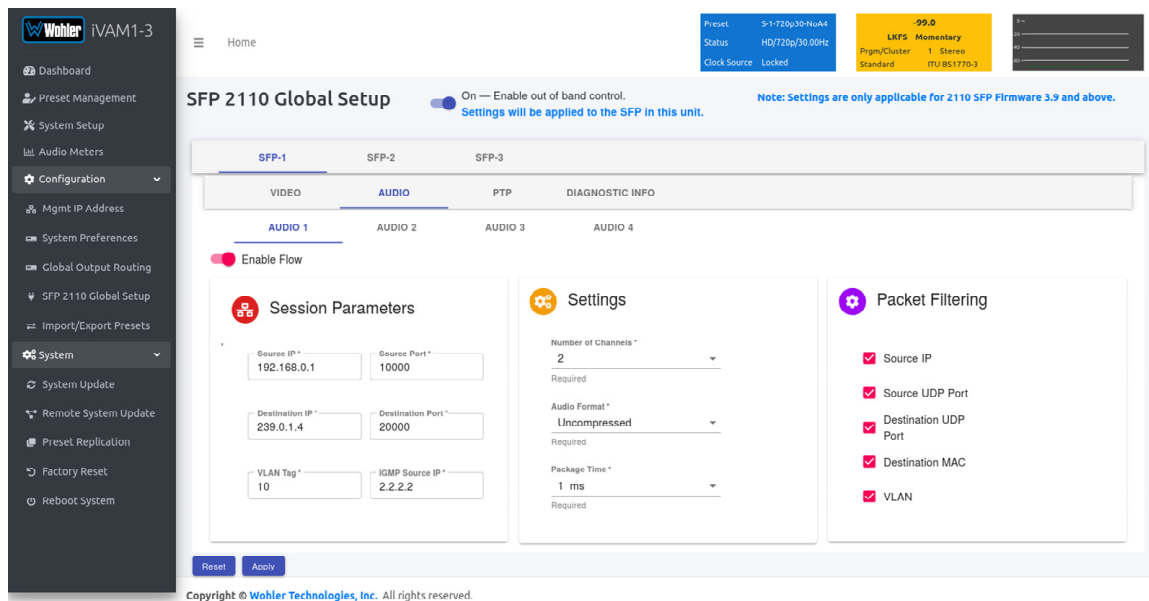


Figure F-6: Audio Parameters

SFP 2110 Global Setup On — Enable out of band control.
Settings will be applied to the SFP in this unit. Note: Settings are only applicable for 2110 SFP Firmware 3.9 and above.

SFP-1 SFP-2 SFP-3

VIDEO **AUDIO** PTP DIAGNOSTIC INFO

AUDIO 1 **AUDIO 2** AUDIO 3 AUDIO 4

Enable Flow

Session Parameters

Source IP * Source Port *

Destination IP * Destination Port *

VLAN Tag * IGMP Source IP *

Settings

Number of Channels * Required

Audio Format * Required

Package Time * Required

Packet Filtering

Source IP

Source UDP Port

Destination UDP Port

Destination MAC

VLAN

Copyright © Wohler Technologies, Inc. All rights reserved.

Figure F-7: PTP Parameters

SFP 2110 Global Setup On — Enable out of band control.
Settings will be applied to the SFP in this unit. Note: Settings are only applicable for 2110 SFP Firmware 3.9 and above.

SFP-1 SFP-2 SFP-3

VIDEO AUDIO **PTP** DIAGNOSTIC INFO

PTP Mode *

PTP Master * Auto Manual

Domain Number

VLAN ID


DSCP

Copyright © Wohler Technologies, Inc. All rights reserved.

SFP 2110 Preset Config


SFP 2110 Configuration may be performed by Preset. Click the **SFP Config** button on the Preset Management screen, as shown in Figure F-8.

Figure F-8: SFP 2110 Preset SFP Configuration Enable

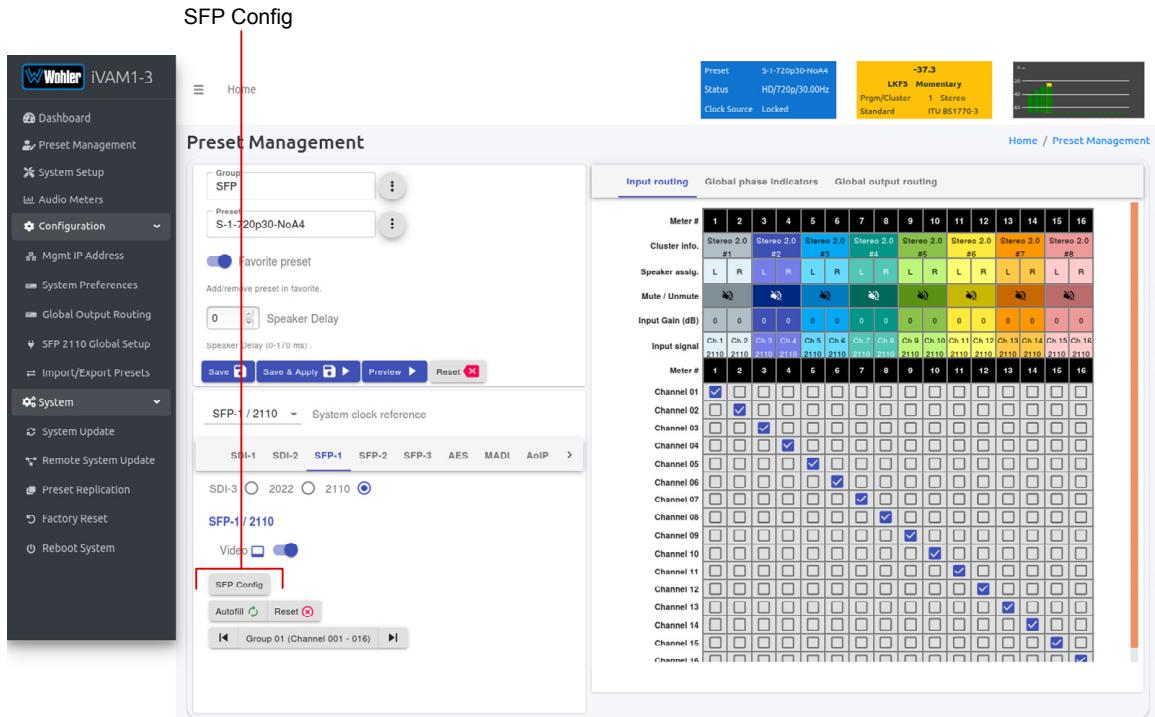

After clicking the **SFP Config** button, the **SFP 2110 Setup Screen** will appear, as shown in Figure F-9. Make the settings you need for this Preset and then click **Close**.

Figure F-9: SFP 2110 Setup Screen

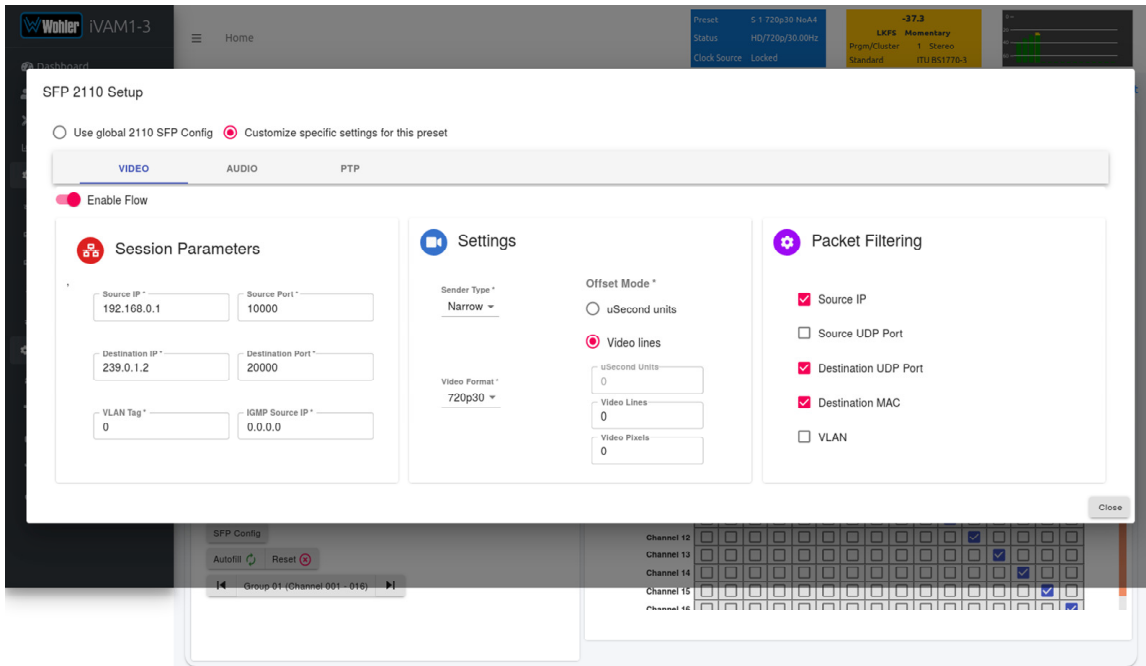

Diagnostic Information

In addition to the configuration parameters, a Diagnostic Info pages exist to show the current flow information for a 2110 or 2022 SFP. This page is auto refreshed every 10 seconds to fetch the latest information from the SFP. The diagnostic information is always available even when the “Out of band” control is turned off. Refer to Figures F-10, F-11, and F-12 for descriptions of the information available.

Figure F-10: Diagnostic Information

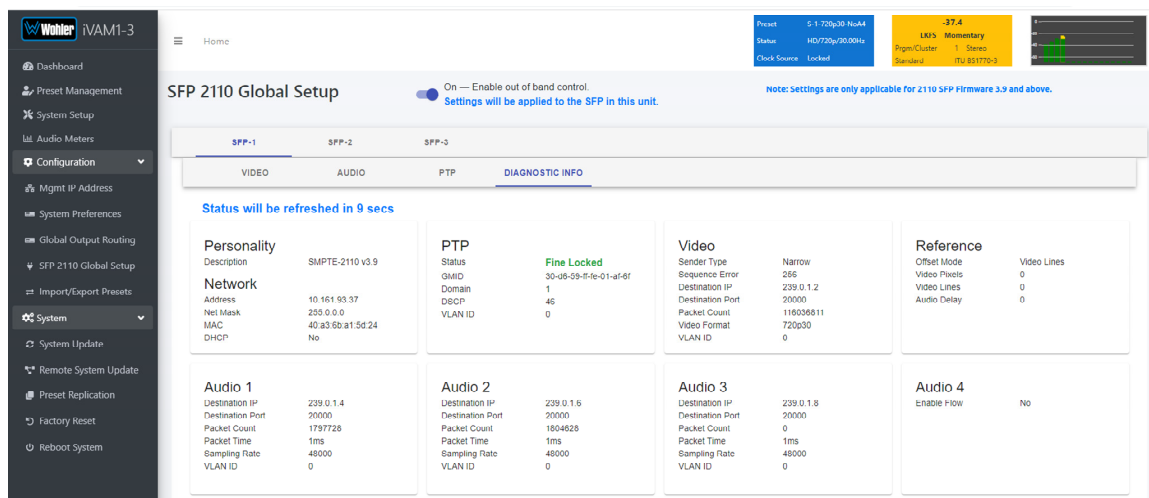


Figure F-11: Diagnostic Information

SFP 2110 Global Setup

On — Enable out of band control.
Settings will be applied to the SFP in this unit.

Note: Settings are only applicable for 2110 SFP Firmware 3.6 and above.

Status will be refreshed in 6 secs

Category	Parameter	Value
Personality	Description	SMPTE-2110 v3.10
	Network	
Network	Address	10.161.111.235
	Net Mask	255.0.0.0
	MAC	40:a0:b8:a1:6f:ea
	DHCP	No
	PTP	
PTP	Status	UnLocked
	GMII	01-90-56-ff-10-08-04-40
	Domain	0
	DSCP	46
	VLAN ID	0
Video	Sender Type	Narrow
	Sequence Error	286
	Destination IP	239.0.1.2
	Destination Port	20000
	Packet Count	0
Reference	Video Pixels	0
	Video Lines	0
Reference	Video Lines	0
	Audio Delay	0
Audio 1	Destination IP	239.0.1.4
	Destination Port	20000
	Packet Count	0
	Packet Time	1ms
	Sampling Rate	48000
Audio 2	Destination IP	239.0.1.6
	Destination Port	20000
	Packet Count	0
	Packet Time	1ms
	Sampling Rate	48000
Audio 3	Destination IP	239.0.1.8
	Destination Port	20000
	Packet Count	0
	Packet Time	1ms
	Sampling Rate	48000
Audio 4	Destination IP	239.0.1.10
	Destination Port	20000
	Packet Count	0
	Packet Time	1ms
	Sampling Rate	48000

Reset Apply

Figure F-12: Diagnostic Information

SFP 2110 Global Setup

On — Enable out of band control.
Settings will be applied to the SFP in this unit.

Note: Settings are only applicable for 2110 SFP Firmware 3.9 and above.

Status will be refreshed in 7 secs

Category	Parameter	Value
Personality	Description	SMPTE-2022-67 v4.7
	Network	
Network	Address	10.161.111.235
	Net Mask	255.0.0.0
	MAC	40:a0:b8:a1:6f:ea
	DHCP	No
	2022 Flow	
2022 Flow	Active	No
	Datagram Rate	0
	Destination IP	239.0.1.2
	Destination Port	20000
	Packet Count	0
Reference	Offset Mode	0
	Video Lines	0
Reference	Video Lines	0
	Audio Delay	0
Audio 1	Destination IP	239.0.1.4
	Destination Port	20000
	Packet Count	0
	Packet Time	1ms
	Sampling Rate	48000

Reset Apply

Copyright © Wohler Technologies, Inc. All rights reserved.

APPENDIX G: 2110 SFP Personalities

Introduction

Wohler currently offers two variants of the 2110 SFPs:

1. 2110 with NMOS or Ember+
2. 2110+2022-6 with NMOS or Ember+


The primary distinction between these options lies in the firmware, or "Personality," loaded onto the SFP. Both the firmware and the SFPs are supplied by Embrionix. For the Combo-SFP, the Embrionix SFP is loaded with both NMOS and Ember+ firmware, with NMOS firmware set as the default.

If it becomes necessary to switch to the Ember+ personality, this can be done changing the SFP Firmware Configuration. This Appendix describes the method to make this change.

Personality Change

Locate the Combo SFP IP Address on the SFP Information Tab of the System page. Refer to Figure G-1, which shows the System page of a typical Wohler iAM or iVAM product.

Figure G-1: Combo SFP Address Location

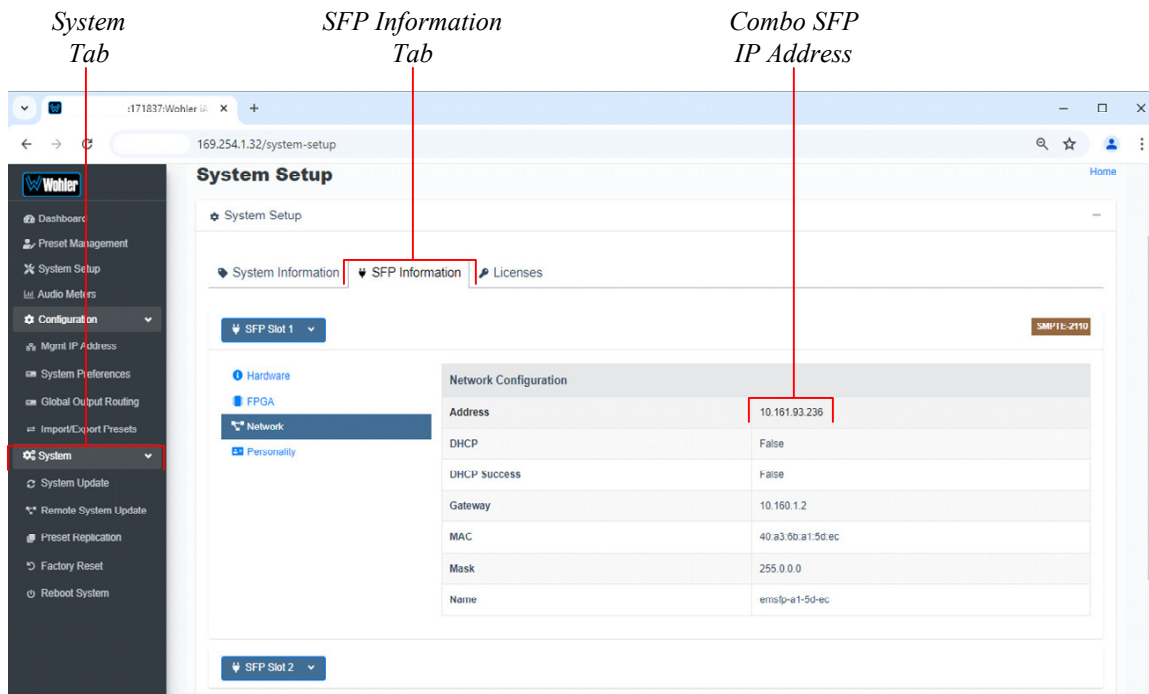

The following example will illustrate the steps to take in order to change from **2110 NMOS** to **2022-6**.

First open a new web page in a pc using Google Chrome, and type in the Combo SFP IP Address you located in Figure G-1. That address was 10.161.93.236. The Embrionix Support screen will appear as in Figure G-2 showing the configuration of the Combo SFP:

Figure G-2: Embrionix Support Screen

The screenshot shows the Embrionix Support web interface. It includes contact information, loaded firmware details (Version 3.12.4497, Element 2), and a 'Firmware Configuration' table. The table lists four elements, with Element 2 selected. The 'Action' column for Element 2 shows 'Load Now' and 'Set As Default' buttons, while Element 1 also has a 'Load Now' button.

Element	Product	Description	Version	Tag	Size	CRC	Default	Action
0	4	DEC_2110_1ch_-31-E+_SFP	3.9	4417	4173824	2937EAB9	No	Load Now Clear
1	9	DEC_2022-6_1ch_NoOut_SFP_470	4.7	2360	4173824	27C43BD5	No	Load Now Clear
2	4	DEC_2110_1ch_-31-ISO4_SFP	3.12	4497	4173824	4730CCF5	Yes	Load Now Set As Default
3								Clear Upload Choose File No file chosen

There are four Personality locations in the SFP, as listed in the Elements column:

- Element 0: 2110 **EMBER+** (Note that the Description contains **E+**.)
- Element 1: **2022-6** (Note that the Description contains **2022-6**.)
- Element 2: **2110 NMOS** (Note that the Description contains **ISO4**.)
- Element 4: (empty)

Note that Element 2 is back lighted in green to show that it is the currently selected Default Personality. This is the Personality that is automatically selected when the product powers on.

To change from the **2110 NMOS** Personality to the **2022-6** Personality, perform the following two steps which follow this important caution:

Caution: In performing these steps, **Do Not click on the Clear button**. Doing this would permanently delete the Personality from the SFP module.

1. Click the **Load Now** button in the **Action** column of the **Element 1** row. Wait 5 seconds until the **Set As Default** button appears in the Action column of the **Element 1** row.
2. Click on the **Set As Default** button which has now appeared in the **Element 1** row. **2022-6** is now the Default Personality, and the screen should appear as shown in Figure G-3.

Figure G-3 – New Personality Selected

Element 1 Selected

Load Now Button Do Not Press the Clear Buttons

Embrionix Support
Email : support@embrionix.com
Phone Number : +1.450.688.8171 ext 0

Loaded Firmware
Version 4.7 (Nov 4 2019 09:48:44)
Tag 00000938 (Element 1)

Firmware Configuration

Element	Product	Description	Version	Tag	Size	CRC	Default	Action
0	4	DEC_2110_1ch_-31-E+_SFP	3.9	00001141	4173824	2937EAB9	No	Load Now Clear
1	9	DEC_2022-6_1ch_NoOut_SFP_470	4.7	00000938	4173824	27C43BD5	Yes	Load Now Set As Default
2	4	DEC_2110_1ch_-31-IS04_SFP	3.12	00001191	4173824	4730CCF5	No	Load Now Clear
3				Clear				Upload Choose File No file chosen

This completes the procedure.